 


Hamilton Beach®

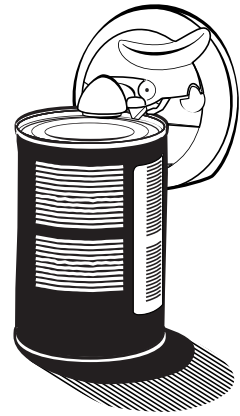

Walk-N-Cut™ Can Opener Ouvre-boîtes Walk-N-Cut™ Abrelatas Walk-N-Cut™

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.
Lire avant utilisation.
Lea antes de usar.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc. has reduced the size of this Use and Care and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com
USA: 1.800.851.8900

Aidez-nous à protéger l'environnement !

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca
Canada: 1.800.267.2826

¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx
México: 01.800.71.16.100

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put unit, cord, plug, or charger in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Use only with the charger provided with the appliance. Do not attempt to use this charger with any other products. Likewise, do not attempt to charge this appliance with any other charger.
5. Do not incinerate this appliance even if it is severely damaged. The batteries can explode in fire.
6. Do not operate in the presence of explosives and/or flammable fumes or liquids.
7. Avoid contact with moving parts.
8. Do not operate any appliance with a damaged electrical cord, plug, or charger or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment.
9. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
10. Do not use outdoors.
11. Do not use an extension cord. Plug charger directly into an electric outlet.
12. Do not let cord of charger hang over edge of table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Do not open pressurized (aerosol-type) cans.
15. Do not open cans of flammable liquids such as lighter fluid.
16. Do not use appliance for other than intended use.
17. Unplug the charger from the power outlet when not in use, or before attempting any routine cleaning of the charger.
18. This product contains nickel-cadmium batteries, which must be recycled or disposed of properly at the end of the life of the appliance (see section on battery removal and disposal). Do not incinerate or compost batteries, as they will explode in high temperatures.
19. Under extreme conditions, leaks of batteries can occur. If the battery liquid gets on the skin, wash quickly with soap and water or neutralize area with lemon juice, vinegar or other mild acid. If the liquid gets into the eyes, immediately flush them with clean water for a minimum of 10 minutes. Seek medical attention as soon as possible.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

 
This appliance is intended for household use only.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.



Contains nickel-cadmium rechargeable batteries. These batteries must be recycled or disposed of properly. Call 1-800-8-BATTERY for nearest retail collection site.

Parts and features

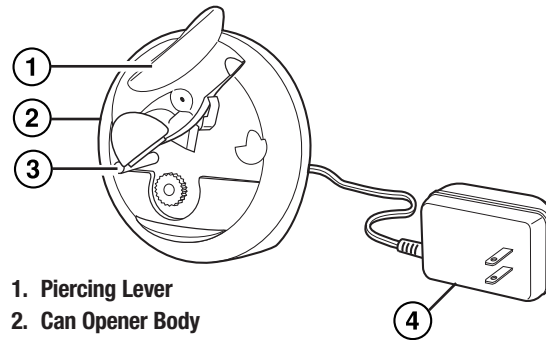

1. Piercing Lever
2. Can Opener Body
3. Can Guide
4. Charger

How to charge your can opener

IMPORTANT: The appliance is not fully charged when packed in the carton. Charge unit for at least 24 hours before first use.

1. Connect the charger cord to the can opener.

NOTE: Charger plug must be FULLY inserted to the can opener. You will feel 2 "clicks" when inserting plug; the second "click" indicates the plug is fully inserted.

2. Plug the charger into outlet.

 
NOTE: While charging, it is normal for the body of the can opener and the charger to feel warm.

3. To prolong the life of the batteries, let the batteries fully discharge before recharging.

NOTE: Use care when removing plug. Pull on plug only—do not pull on cord as this will damage the connection with the plug.


How to use your can opener

1. Unplug charger from can opener. Do not use the can opener when it is attached to the charger.
2. Grasp the back of the can opener.
3. Flip up the hinged magnet so that it is in position to hold the can lid.
4. Raise the piercing lever up and position can opener so that the rim of the can is firmly against the can guide and under the cutting blade. The base (feet) of the unit will be parallel to the counter.
5. Press the piercing lever all the way down to energize the can opener and pierce the can. It is not necessary to hold the lever down once cutting begins. Except for short cans or cans with a small diameter, you can let the can opener rotate freely around the top of the can without holding it.
6. The motor will automatically stop when the lid has been cut.
7. Raise the piercing lever to release the can opener from the can. Carefully slide the lid from the magnet.

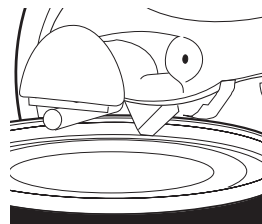

Care and cleaning

 1. Unplug charger from electrical outlet and from can opener.
2. Remove cutting assembly by rotating the piercing lever counterclockwise until it pops out of position.
3. Wash the cutting assembly in hot, soapy water. Rinse and dry thoroughly.
4. Wipe the body of can opener with a damp cloth.
5. To reassemble, place the knob on the back of cutting assembly into the hole on the front of the can opener. Push down and to the right until the assembly snaps into place.

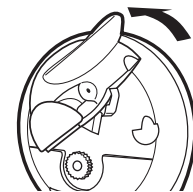


Battery removal and disposal

This product uses nickel-cadmium rechargeable and recyclable batteries. When the unit can no longer be recharged, the batteries should be removed from the product and recycled or disposed of properly. Do not incinerate or compost batteries, as they will explode at high temperatures. Do not attempt to replace batteries with batteries other than those supplied by the manufacturer.

Removal:

 1. Use a small Phillips screwdriver to remove the screws on the back of the can opener. Remove rear cover.
2. Remove screw securing batteries. Pull off terminal connectors to remove batteries.

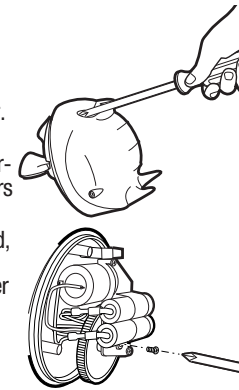

NOTE: If the batteries have leaked, put on protective rubber gloves before touching the batteries. Under extreme conditions, leaks from batteries can occur. If the battery liquid gets on the skin, wash quickly with soap and water or neutralize area with lemon juice, vinegar or other mild acid. If the liquid gets into the eyes, immediately flush them with clean water for a minimum of 10 minutes. Seek medical attention as soon as possible.

Disposal: Your appliance manufacturer is concerned about protecting the environment and, therefore, has chosen to participate in the RBRC® (Rechargeable Battery Corporation) recycling program. The RBRC® is a non-profit organization whose recycling programs adhere to all federal and state mandates concerning the proper collection, storage, and transportation of nickel-cadmium batteries. The RBRC® Seal on the nickel-cadmium battery pack indicates that the cost to recycle the battery pack has already been paid. Call 1-800-8-BATTERY to find the nearest retail collection site. You may also contact your local recycling center for information on where to drop off the used battery pack. For more information on RBRC®, check out their Web site at www.rbrc.org.



Limited warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

IMPORTANTS CONSEILS DE SÉCURITÉ

En cas d'utilisation d'appareils électriques, des précautions d'usage doivent être respectées, y compris les instructions suivantes :

1. Lire toutes les instructions.
2. Pour prévenir les chocs électriques, ne pas immerger l'appareil, le cordon, la fiche ou le chargeur dans l'eau ou un autre liquide.
3. Une surveillance étroite est indiquée en cas d'utilisation d'un appareil par des enfants ou dans leur voisinage.
4. N'utiliser l'appareil qu'avec le chargeur qui l'accompagne, et ne pas essayer d'utiliser ce chargeur avec un autre produit. De plus, ne pas essayer de charger cet appareil avec un autre chargeur.
5. Ne pas incinérer cet appareil même s'il est gravement endommagé. Les piles peuvent exploser dans un incendie.
6. Ne pas utiliser l'appareil en présence d'explosifs et/ou de liquides ou d'émanations inflammables.
7. Éviter tout contact avec des pièces en mouvement.
8. Ne pas utiliser un appareil qui présente un chargeur, une fiche ou un cordon électrique endommagé; ou après une défaillance de l'appareil, une chute ou encore après tout dommage. Appeler notre numéro sans frais de service à la clientèle pour des renseignements concernant l'examen, la réparation ou l'ajustement électrique ou mécanique.
9. L'utilisation de pièces accessoires non recommandées ou vendues par le fabricant des appareils risque de provoquer un incendie, un choc électrique ou des blessures.
10. Ne pas utiliser l'appareil à l'extérieur.
11. Ne pas utiliser de rallonge. Brancher le chargeur directement dans une prise de courant.
12. Ne pas laisser le cordon ou le chargeur traîner sur le bord d'une table ou d'un comptoir, ou entrer en contact avec des surfaces chauffantes.
13. Ne pas placer l'appareil au-dessus ou près d'un brûleur à gaz chaud ou d'un élément électrique chaud, ou dans un four chauffé.
14. Ne pas ouvrir des boîtes métalliques sous pression (du type aérosol).
15. Ne pas ouvrir des boîtes métalliques de liquides inflammables comme l'essence à briquet.
16. Ne pas utiliser l'appareil à une fin autre que celle prévue.
17. Débrancher le chargeur de la prise de courant lorsqu'il n'est pas utilisé, ou avant toute tentative de nettoyage de routine du chargeur.
18. Ce produit contient des piles au nickel-cadmium qu'il faut recycler ou éliminer convenablement à la fin de la durée de service de l'appareil (voir la section consacrée à l'enlèvement et l'élimination des piles). Ne pas incinérer ou composer des piles, car elles explosent aux hautes températures.
19. Dans des conditions extrêmes, des fuites de pile peuvent se produire. Si la peau entre en contact avec l'acide d'une pile, la laver rapidement au savon et à l'eau, ou neutraliser la partie affectée à l'aide de jus de citron, de vinaigre ou d'un autre acide doux. Si le liquide atteint les yeux, les rincer copieusement à l'eau propre pendant au moins 10 minutes. Consulter un médecin dans les plus brefs délais.

CONSERVER CES INSTRUCTIONS

Autre consigne de sécurité pour le consommateur

Cet appareil est conçu pour une utilisation domestique seulement.

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise, si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuché accidentellement.



Contient des piles rechargeables au nickel-cadmium. Ces piles doivent être recyclées ou éliminées convenablement. Composer le 1-800-8 BATTERY pour connaître le site de collecte au détail le plus proche.

