 


Hamilton Beach®

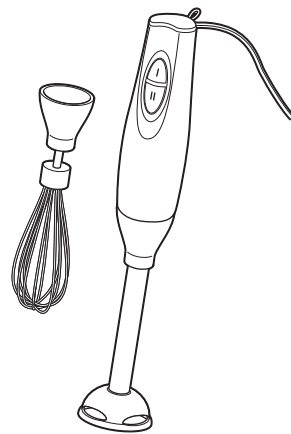

Hand Blender
Mélangeur à main
Batidora de inmersión

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.
Lire avant l'utilisation.
Lea antes de usar.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:
hamiltonbeach.com

Aidez-vous à protéger l'environnement !
Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc., a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca

¡Ayude a Hamilton Beach a Hacer la Diferencia!
En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx
USA: 1.800.851.8900
Canada: 1.800.267.2826
México: 01.800.71.16.100

840190102

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put motor housing, cord, or plug in water or other liquid.
3. This appliance should not be used by children and care should be taken when used near children.
4. Avoid contact with moving parts. Keep hands, hair, clothing, and utensils away from blades and out of container during operation to prevent the possibility of severe injury to persons and/or damage to the appliance. A scraper may be used but must be used only when the unit is not running.
5. The use of attachments not recommended or sold by the appliance manufacturer for use with this model may cause fire, electric shock, or injury.
6. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
7. Blades are sharp; handle carefully.
8. Do not use over a stove or other heat source.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surfaces, including the stove.
12. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
13. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment.

SAVE THESE INSTRUCTIONS!

 
Other consumer safety information

This appliance is intended for household use only.

WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.


BEFORE FIRST USE: Wash attachments according to instructions.

Parts and features

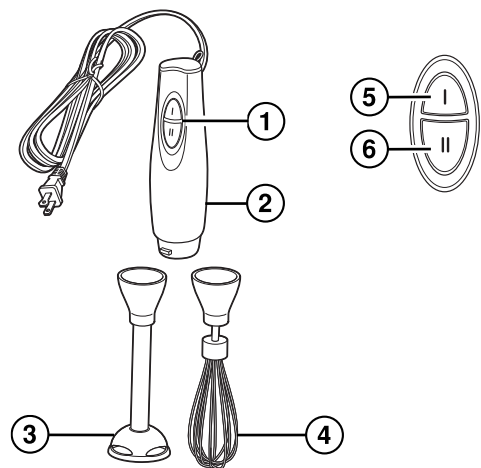

- | | |
|--------------------------|---|
| 1. Speed Control Buttons | 5. Low-Speed Button |
| 2. Motor Housing | 6. High-Speed Button |
| 3. Blending Attachment | NOTE: The maximum power rating is based on the blade attachment. The whisk attachment and chopper may draw significantly less power. |
| 4. Whisk Attachment | |

 Optional Accessories (on select models)

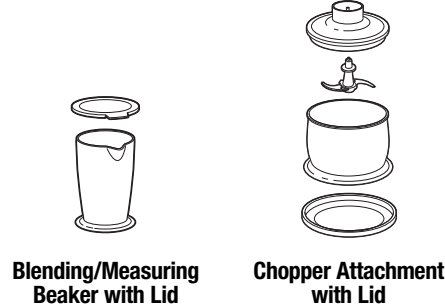

How to use the hand blender/ whisk attachment

WARNING Cut Hazard. Always inspect attachments before each use. Do not use cracked, bent, or damaged attachments.

- The hand blender is not designed for use over a heat source.
- This appliance is not intended to chop ice. Add ice to beverage after blending.
- Do not immerse the motor housing past the top metal portion of each blending attachment.

 
1. Place food in a tall, deep container for blending. For best results, solid foods should be no larger than 1-inch (2.5-cm) chunks.
2. Attach blending or whisk attachment to motor housing. Hold hand blender upright and turn motor housing clockwise to tighten and counterclockwise to loosen while holding the attachment.
3. Plug into outlet.
4. Grasp unit in hand. Push speed control button. Slowly move the attachment up, down, and sideways through the food.
5. Do not immerse the motor housing past the top metal portion of each blending attachment.
6. Unplug from outlet when not in use.

How to use the chopper (optional accessory on select models)

1. Place chopping blade into bowl, ensuring blade is seated securely. Put food into chopper bowl and place the motor housing on top, lining up the plastic notches. Twist clockwise to locked position.
2. Choose desired chopping speed (I or II) and process until food has reached desired consistency. Running the chopper continuously will yield smoother food consistency, while pulsing will yield chunkier results.
3. The rubber lid/base may also be used as a nonskid base under the chopper while in use.
4. Remove motor housing from chopper and food from chopping bowl. Unplug from outlet when finished.

Helpful hints

- To use the hand blender in a saucepan, be sure to remove the pan from the stove.
- To puree foods, liquid is needed. Add cooking liquid, broth, juice, milk, or cream until desired consistency is reached.
- For thorough blending, move hand blender up and down in mixture until smooth.
- To achieve best blending results, use deep, tall containers.
- For easy cleanup, unplug hand blender and rinse attachments under running water immediately after using.
- The plastic lid of the measuring jar may be flipped upside down and placed underneath the base of the jar in order to provide a more stable surface while blending.

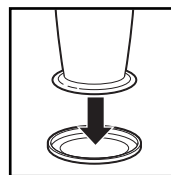

Blending guide

FOOD	SPEED	ATTACHMENT
Cake Mixes	LO	Blade
Eggs	HI	Whisk
Frozen Juice Concentrate	HI	Blade
Gravy or Sauces	LO	Whisk
Pureed Soups	LO	Blade
Milk Shakes	HI	Blade
Pancake Mix	LO	Whisk
Onions	LO	Chopper
Whipping Cream	HI	Whisk
Carrots	HI	Chopper

How to clean the hand blender

1. Unplug unit from outlet.
2. Remove attachment from motor housing. Wash attachment in hot, soapy water. Rinse; then dry. Blending attachments may also be placed in the top rack of the dishwasher.

WARNING Electric Shock Hazard. Never hold motor housing portion of hand blender under running water. Simply wipe clean with a damp cloth.

Limited warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use.

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

IMPORTANT CONSEILS DE SÉCURITÉ

Pendant l'utilisation d'appareils électriques, des mesures de sécurité élémentaires doivent toujours être respectées, incluant les suivantes :

1. Lire toutes les instructions.
2. Pour éviter les risques d'électrocution, ne pas immerger le logement de moteur, le cordon et la fiche dans l'eau ou tout autre liquide.
3. Cet appareil ne doit pas être utilisé par des enfants. Une surveillance étroite est requise lorsque cet appareil est utilisé près des enfants.

4. Éviter tout contact avec les pièces mobiles. Tenir les mains, cheveux, vêtements et ustensiles éloignés des lames et hors du récipient pendant le fonctionnement pour éviter les risques de blessures graves et les dommages à l'appareil. Un racloir peut être utilisé, mais uniquement lorsque le moteur de l'appareil est arrêté.
5. L'utilisation d'accessoires non recommandés ou vendus par le fabricant du modèle de cet appareil peut occasionner un incendie, une électrocution ou des blessures.
6. Utiliser un récipient de forme haute pour mélanger les liquides, plus particulièrement les liquides chauds, ou mélanger de petites quantités de liquide pour éviter les débordements.
7. Manipuler les lames avec prudence, car elles sont tranchantes.
8. Ne pas utiliser sur une cuisinière ou toute autre source de chaleur.
9. Ne pas utiliser à l'extérieur.
10. Ne pas laisser pendre le cordon de la table ou du comptoir.
11. Ne pas laisser le cordon entrer en contact avec des surfaces chaudes, incluant la cuisinière.
12. Débrancher de la prise murale dès la fin de l'utilisation, avant d'installer ou de retirer des pièces et avant le nettoyage.
13. Ne pas utiliser aucun appareil dont le cordon ou la prise est endommagé, ou toutes anomalies de fonctionnement de l'appareil, une chute ou tout autre dommage quel qu'il soit. Appeler la ligne sans frais du Service à la clientèle pour plus d'information à propos d'une vérification, réparation ou réglage électrique ou mécanique.

CONSERVER CES INSTRUCTIONS !

Autre consigne de sécurité pour le consommateur

Cet appareil est conçu pour une utilisation domestique seulement.

AVERTISSEMENT ! Risque d'électrocution : Cet appareil est doté d'une fiche polarisée (lame large) qui réduit le risque d'électrocution. Cette fiche s'insère d'une seule manière dans une prise polarisée. Ne pas transformer le dispositif de sécurité de la fiche en modifiant celle-ci de quelque manière que ce soit ou en utilisant un adaptateur. Si la fiche refuse de s'insérer, inversez-la. Si elle refuse toujours de s'insérer, faites remplacer la prise par un électricien.

AVANT LA PREMIÈRE UTILISATION : Laver les accessoires conformément aux instructions.

Pièces et caractéristiques

- | | |
|-----------------------------------|--------------------------|
| 1. Boutons de commande de vitesse | 4. Fouet l'attache ment |
| 2. Logement de moteur | 5. Bouton basse vitesse |
| 3. Accessoires de mélange | 6. Bouton vitesse élevée |
- NOTE :** La puissance nominale maximale est basée sur la lame accessoire. Les accessoires de fouet et de hachoir à lame pourraient fonctionner à une puissance moins élevée.

Accessoires en option (sur certains modèles)

- | | |
|--|-----------------------------------|
| Gobelet pour mélange et mesures avec couvercle | Hachoir accessoire avec couvercle |
|--|-----------------------------------|

Utilisation du mélangeur à main/ fouet l'attache ment

AVERTISSEMENT Risque de coupure. Toujours vérifier les accessoires avant chaque utilisation. Ne pas utiliser d'accessoires fissurés, tordus ou endommagés.

- Le mélangeur à main n'est pas conçu pour être utilisé au-dessus d'une source de chaleur.
- Cet appareil n'est pas conçu pour concasser de la glace. Ajouter la glace aux boissons au moment de servir.
- N'immergez pas le caisson moteur au-delà de la partie métallique supérieure de chaque accessoire de malaxage.

