

READ BEFORE USE

使用前阅读



Visit www.hamiltonbeach.cn for our complete line of products and Use and Care Guides – as well as delicious recipes, tips, and to register your product online!



有关我们所有系列产品的使用与维护指南 – 以及美味食谱、生活小贴士和产品在线注册的更多信息，请访问 www.hamiltonbeach.cn。

Questions?

Please call us – our friendly associates are ready to help.
China: 400-852-2655

如有疑问?

请致电我们，我们的团队随时准备为您提供帮助。

中国大陆客服热线：

400-852-2655

官方网站：www.hamiltonbeach.cn

型号：31156-CN

此说明书中图片仅供参考，产品以实物为准。

使用产品前请仔细阅读本使用说明书，并妥善保管。

Hamilton 汉美驰 Beach®

2-in-1 Oven & Toaster Four grille-pain 2 en 1 多功能烤箱



English 2

简体中文 9

⚠️ WARNING



Fire Hazard.

- Do not operate while unattended.
- Do not use in toaster mode with food that has been spread with butter, jelly, frosting, etc.
- Do not use in toaster mode with rice cakes, fried foods, frozen prepared foods, or nonbread items.
- Do not use in toaster mode with toaster pastries. Always cook toaster pastries in a toaster oven broiler.
- Do not cover or use near curtains, walls, cabinets, paper or plastic products, cloth towels, etc.
- Closely supervise when used by or near children.
- Always unplug oven and toaster when not in use.

Failure to follow these instructions can result in death or fire.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against electric shock, do not immerse cord, plug, or toaster oven in water or other liquid.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning appliance and putting on or taking off parts.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. To disconnect, turn all controls to OFF (ⓘ); then remove plug from wall outlet.
13. Use extreme caution when removing pan or disposing of hot grease.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electrical shock.
15. Oversized foods, metal packages, or metal utensils must not be inserted into the toaster slot, and oversized foods or metal utensils must not be inserted into the toaster oven as they may create a fire or risk of electric shock.
16. A fire may occur if the toaster oven is covered, touching, or near flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation or before the appliance cools down.

17. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
18. Do not store any materials, other than appliance manufacturer recommended accessories, in this oven when not in use.
19. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
20. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
21. To turn oven off, turn the timer knob to OFF (O). To stop the toasting cycle, press the "Cancel" button or lift up the bread lifter.
22. Do not place eyes or face in close proximity with tempered safety glass door, in the event that the safety glass breaks.
23. Always use appliance with crumb tray securely in place.
24. Do not use appliance for other than intended use.
25. Before using this appliance, move it 2 to 4 inches away from wall or any object on the countertop. Remove any object that may have been placed on top of the appliance. Do not use on surfaces where heat may cause a problem.
26. If plug gets hot, please call a qualified electrician.
27. The oven door is not a shelf. Do not place anything on the door.
28. Use extreme caution when extending loaded rack or adding food to extended rack.
29. Clean oven interior carefully. Do not scratch or damage heating element tube.
30. Do not operate toaster function unattended.
31. Do not operate the appliance by means of an external timer or separate remote-control system.
32. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
33. **▲CAUTION! HOT SURFACE.** The temperature of accessible surfaces may be high when the appliance is operating. Do not remove crumb tray until appliance cools down to room temperature.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

This appliance is intended for household use only.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

This appliance is equipped with a fully tempered safety glass door. The tempered glass is four times stronger than ordinary glass and more resistant to breakage. Tempered glass can break; however, it breaks into pieces with no sharp edges. Care must be taken to avoid scratching door surface or nicking edges. If the door has a scratch or nick, call our toll-free customer service number.

When heavy foods are on the oven rack, do not pull the oven rack out more than halfway. To baste or check for doneness, remove food from the oven and place on heat-resistant countertop surface or trivet.

 
Do not place baking pan directly on heat shields that protect lower heating elements.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

Parts and Features

BEFORE FIRST USE: Most heating appliances produce an odor and/or smoke when used the first time. Plug the toaster oven into an outlet. Turn temperature dial to 230°C. Heat at this temperature for 10 minutes. The odor should not be present after this initial preheating. **Wash baking pan and oven rack before using.**

 **CAUTION: HOT SURFACE.** The temperature of accessible surfaces may be high when the appliance is operating.

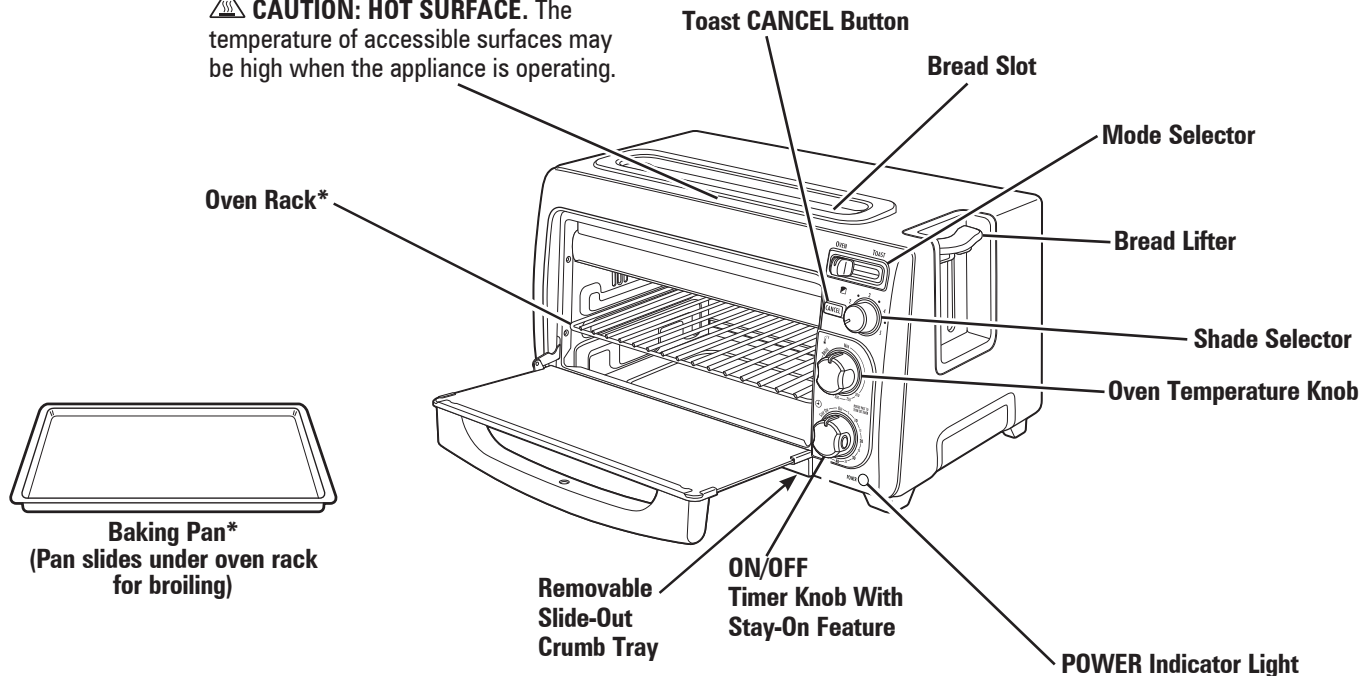




How to Toast

⚠ WARNING Fire Hazard.

- If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and cool before opening door.
- Do not leave appliance unattended when in operation.
- Always unplug toaster oven when not in use.

NOTES:

   - The bread lifter will not latch down unless the toaster is plugged in.
- When toasting, always remove baking pan from oven.

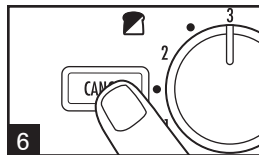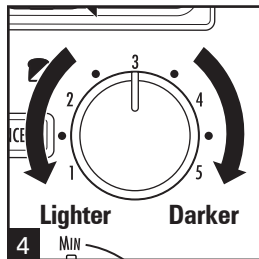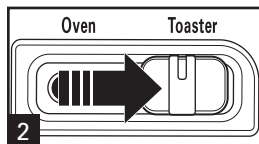

1. Plug into outlet.
2. Slide the mode selector to TOAST.
3. Add bread slices to the bread slot.
4. Rotate shade selector to desired shade and press down on the bread lifter. At the end of the toasting cycle, the bread will pop up automatically.
5. Lift up bread lifter to reach small bread items.
6. Press the CANCEL button to stop toasting at any time.
7. Unplug.

NOTE: For bagels and one-sided browning, use the oven in the BROIL mode. See next page for broiling.

FOOD	SHADE SETTING	MODE/TEMP.
Regular bread	2–5	Toast
English muffins	4	Toast
Bagels	3–5	Toast or Broil
Frozen bread or buns	4	Toast
Frozen waffles	4	Toast
Toaster pastries* (such as Pop Tarts®)	N/A	Oven/175°C for 2 minutes
Frozen prepared foods* (such as Toaster Strudel™ or Hot Pockets®)	N/A	Oven/175°C (follow manufacturers' instructions)

To remove food that becomes lodged in food slots, disconnect from outlet and allow toaster to cool. Turn toaster upside down and shake. Do not use fork or other utensil that could damage heating element or result in risk of fire or electrical shock.

*Pop Tarts is a registered trademark of the Kellogg Co.

™Toaster Strudel is a trademark of the Pillsbury Co.

®Hot Pockets is a registered trademark of Nestlé.

*Do not heat in toaster—use the OVEN mode position. NEVER heat cracked, broken, or warped pastries, and NEVER leave unattended.

 
How to Bake or Broil

⚠ WARNING Fire Hazard.

- Do not leave oven unattended during operation.
- Keep 1" (2.5 cm) between food and heating element.
- Do not use oven cooking bags.
- Do not heat foods in plastic containers.
- Follow food manufacturers' instructions.



NOTE: Wash baking pan before using.

1. Plug into outlet.
2. Slide mode selector to **OVEN**.
3. Turn oven temperature knob to the desired temperature or **BROIL**. The red **POWER** light will illuminate. Let the oven preheat for 5 minutes.

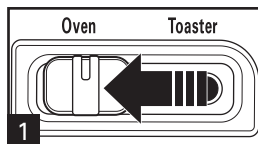

For broiling:

  1. Move the oven rack to the upper position and slide baking pan under rack.
2. Turn the oven temperature knob to **BROIL**.
3. Rotate the timer knob past 10 minutes, and then rotate back for less than 5–10 minutes, or rotate timer to **STAY ON** while pressing in and holding the buttons on the side of the dial.
4. When finished, turn timer knob to **OFF**.
5. Unplug.

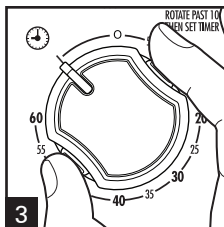
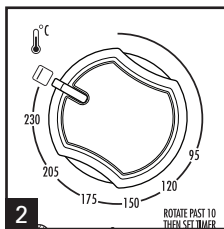


For baking:

Upper position: Use for pizza and chicken nuggets/pieces and small frozen snack items.

Lower position: Use for cakes and small whole chicken baked in the pan and baked potatoes in foil on rack or in the pan.

  1. Move the oven rack to the lower position for cakes, pizza, chicken nuggets, and appetizers.
2. Turn the oven temperature knob to the desired temperature.
3. Rotate the timer knob past 10 minutes for the desired time, or rotate timer to **STAY ON** while pressing in and holding the buttons on the side of the dial.
4. When finished, turn timer knob to **Off**.
5. Unplug.

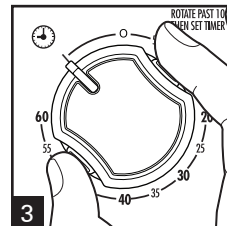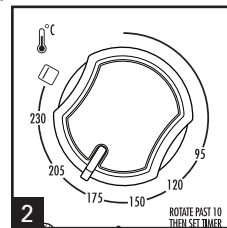

NOTE: When toasting, condensation may form on oven door. A toaster oven is enclosed, so moisture is slow to escape. After cooling the oven, wipe the door with a paper towel to dry.

How to Bake or Broil (cont.)

Baking Tips

- **Most foods should be baked** according to package or recipe directions. Watch carefully and adjust time or temperature if needed.
- **To reheat pizza**, never place box in oven. Cook at 450°F (232°C) for 3 minutes or until ready.
- **For pizza**, cook frozen or refrigerated pizza directly on oven rack.
- **For homemade crust pizza** (or any soft dough), cook pizza on baking pan.
- **For baked potato**, bake directly on oven rack at 205°C for 1 hour.
- **For toaster pastry**, heat directly on oven rack. If pastry has a filling, glaze, or frosting, use baking pan.
- **Remove food immediately** or heat remaining in toaster oven will continue to bake and dry out your food.

Care and Cleaning

⚠ WARNING Electrical Shock Hazard.

Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts.

Your 2-in-1 Oven & Toaster should be cleaned regularly for best performance and long life.

Regular cleaning will also reduce the risk of fire hazard.

1. Unplug and allow to cool.
2. Wash the oven rack, baking pan, and slide-out removable crumb tray in hot, soapy water. Rinse and dry.
3. Slide the crumb tray into the crumb tray opening.
4. To clean inside of oven, wipe oven walls, bottom of oven, and glass door with a damp, soapy cloth. Repeat with a damp, clean cloth and dry.
5. Wipe the outside of the oven with a soft damp cloth and dry.

Troubleshooting

Oven will not heat.

- Check to make sure electrical outlet is working and the oven is plugged in. Rotate the temperature knob to the desired temperature setting.
- Make sure mode selector is set to OVEN.

Moisture forms on inside of oven door when toasting.

- This is normal when toasting in a toaster oven. Moisture is slower to escape from toaster oven than from a toaster. The amount of moisture will differ between fresh bread, bagels, and frozen pastries.

An odor and smoke comes from oven.

- Smoke and odor are normal during the first use of most heating appliances. This will not be present after the initial heating period.

Some foods burn and some are not done.

- Adjust oven temperature or cooking time for best results with your recipes.

Bread, bagel, or English muffin didn't toast as expected.

- Toasting is affected by the temperature of the bread. Room-temperature bread may toast to a medium color on the medium setting. The same type of bread that has been refrigerated may require a darker setting to reach a medium color.
- The moisture content will also affect toasting. Fresh bagels, made locally, will have a higher moisture content than bagels purchased in the bread section of the supermarket. A second, shorter toasting cycle may be needed to reach desired brownness. Fresh bagels made locally may require two toasting cycles.
- Because of the irregular surface of English muffins, they may require more than one toasting cycle. After toasting for one cycle on the darkest setting, if a darker shade is desired, adjust shade selector to a lighter setting and toast for a second cycle. Watch closely to avoid overbrowning. English muffins cut with a knife toast more evenly than English muffins split with a fork.

Food is wedged in the toaster slot.

- If food becomes jammed, the toaster will automatically shut off at the end of the toasting cycle. Unplug the toaster and let cool. Turn toaster upside down and shake. Do not use fork or other utensil that could damage heating element or result in risk of fire or electrical shock.

警告



火灾危险。

- 请勿在无人看护时使用。
 - 请勿使用多士炉模式烘烤涂有黄油、果酱、调料等的食物。
 - 请勿使用多士炉模式烘烤米糕、油炸食物、冷冻食物或非面包类食物。
 - 请勿使用多士炉模式烘烤油酥糕点。务必在多功能烤箱的烤炉中烘烤油酥糕点。
 - 请勿在窗帘、壁纸、橱柜、纸或塑料制品、毛巾布等附近使用或被此类物品覆盖。
 - 当儿童使用或附近有儿童时，请密切看护。
 - 未使用时，务必拔下多功能烤箱的电源插头。
- 不遵守这些说明会导致死亡或火灾。

重要安全说明

当使用电器时，应始终遵守基本的安全防范措施，以减少火灾、触电和/或人身伤害的风险，包括以下内容：

1. 阅读所有相关说明。
2. 本电器不适合以下人群（包括儿童）使用：行动不便者、精神或智商缺陷者、缺少经验和常识者，除非他们在监护人的密切监督和指导下使用，以确保安全。
3. 当电器由儿童使用，或在其附近使用时，应予以密切监护。请勿将本电器用于儿童玩耍。
4. 请勿接触设备热表面。应使用手柄或旋钮。
5. 为了防止触电，请勿将电源线、插头或多功能烤箱浸入水或其他液体中。
6. 不使用与清洁前，请拔下电源插头。拆装部件前以及清洁前，必须让电器冷却。
7. 在下列情况下，请勿使用本电器：电源线或插头破损、本机出现故障、本机跌落或已经出现任何形式的损坏。电源线更换和维修必须由制造商、维修代理商或同等资质的人员进行，以避免险情。请拨打我们的客服电话，咨询有关电器检查、修理或调整的相关信息。
8. 使用非本电器制造商推荐的配套附件有可能造成危害。
9. 请勿在室外使用。
10. 请勿将电源线悬挂在桌子或柜台边缘，或接触包括炉子在内的热表面。
11. 请勿将电器置于燃气、电炉、热烤箱之上或附近。
12. 断开电源前，将所有的控制器调整到 OFF (O) 位置，然后从壁装电源插座中拔下插头。
13. 取下烤盘或处理热油时应特别小心。
14. 请勿使用金属清洁球清洁本电器。碎片会脱离清洁球并触碰电气元件，有触电的危险。
15. 严禁将超规格的食物、金属箔包装或餐具放入多士炉插槽中，此外也严禁将超规格的食物或金属餐具放入到多功能烤箱中，因为会带来火灾和触电的风险。
16. 在操作时，如果多功能烤箱被覆盖、接触或靠近易燃材料，包括窗帘、布料、墙壁等时，容易引起火灾。当操作时或本电器冷却前，请勿在电器顶部放置任何物品。

17. 使用金属或玻璃以外材料构成的容器时，应谨慎行事。
18. 当烤箱不使用时，请勿将任何非本电器制造商推荐的配件存放到烤箱中。
19. 请勿下列材料放入到烤箱中：纸、纸板、塑料等类似材料。
20. 请勿使用金属箔盖住屑盘或烤箱的任何部件。这将导致烤箱过热。
21. 关闭烤箱时，将定时器旋钮旋转到 OFF (O) 位置。停止烤面包片时，按取消按钮或上提面包拨杆。
22. 请勿让脸部或眼睛靠近钢化安全玻璃门，以防安全玻璃门破裂。
23. 使用本电器时务必将面包屑盘固定到位。
24. 请勿将本电器用于非预期用途。

25. 使用本电器前，让其与墙面或台面上的任何物体间隔2-4英寸（5-10厘米）。使用时，请移除先前放置在本电器顶部的任何物体。请勿放在任何发热表面上使用，可能会导致故障。
26. 如果电源插头发热，请咨询合格的电工进行处理。
27. 烤箱门不可用作货架。请勿在烤箱门上挂放任何物体。
28. 将加装烤架或向加装的烤架上添加食物时，应务必小心。
29. 小心清洁烤箱内部。请勿刮伤或损坏加热元件管。
30. 请勿在无人看护时使用多士炉功能。
31. 本电器不可用通过外部定时器或单独的遥控系统进行操作。
32. 面包可能会燃烧，因此在可燃性材料（如：窗帘）附近或下方请勿使用多士炉。
33. **△小心！**高温表面。当本电器工作时，可触及的外部表面温度会很高。在本电器冷却到室温以前，请不要移动可拆卸屑盘。

请妥善保管说明书！

其他用户安全信息

本电器建议于家庭使用。

小心：为了避免由于电动机热保护装置意外重置导致的危险，本电器禁止通过外接开关设备（例如：定时器）进行供电，或禁止连接到由供电部门定期开启和关闭的电路。

本电器电源线的长度经过设计挑选，以减少长电源线缠绕或绊倒的危险。倘若需要更长的电源线，可使用经认证的电源延长线。电源延长线的额定功率必须等于或大于本电器的额定功率。电源延长线使用时需特别注意，以防将其搭设在工作台或桌面上，造成儿童扯拉或绊倒他人。

本电器装有钢化安全玻璃门。钢化玻璃具有四倍于普通玻璃的强度，更具抗裂性。钢化玻璃会碎裂；但是碎屑没有锋利边缘。需小心清理，避免刮花玻璃门表面或刮伤玻璃门边缘。如果烤箱门有刮花或刻痕，请拨打我们的免费客服电话。

 
当烤架上有沉重的食物时，请勿将烤架拉出超过一半以上。涂油或检查食物的熟度时，请从烤箱中取出食物并将其放置在一个耐热台面或隔热垫上。

请勿直接将烤盘放置在保护底部加热元件的挡热板上。

为避免电路过载，请勿在您电器的同一电路上使用其他高功率电器。

部件和功能

首次使用前：大部分加热器在初次使用时会散发异味和/或冒烟。将多功能烤箱插头插入插座。将温控器旋钮旋至230°C。在此温度下加热10分钟。初次预热后，异味消失。**使用前，请清洗烤盘和烤架。**

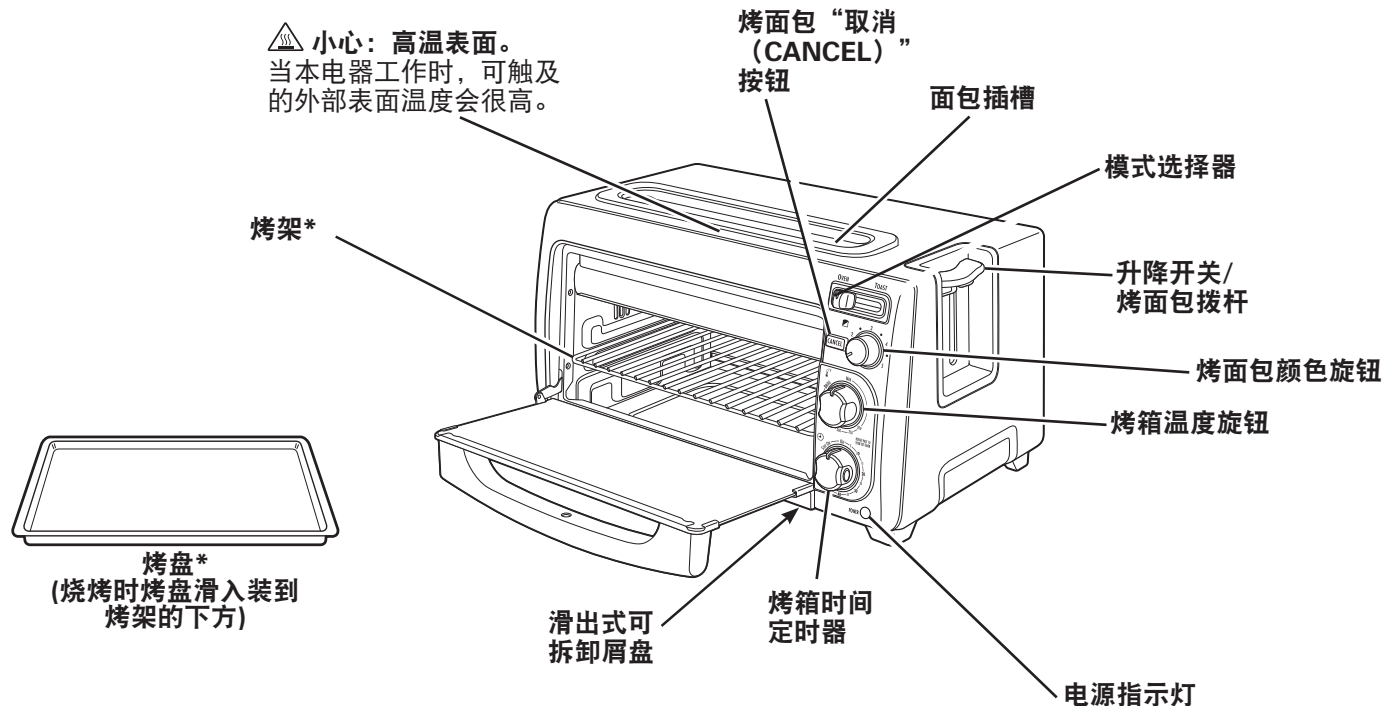




如何烤面包

警告 火灾危险。

- 如果烤箱内物件着火，请勿打开烤箱门。拔下烤箱电源插头，待着火物件停止燃烧并冷却后再打开烤箱门。
- 请勿让电器在无人看管的情况下运行。
- 未使用时，务必拔下多功能烤箱的电源插头。

注意：

   - 多士炉通电状态下面包拨杆才会被锁定。
- 烤面包片时，请从烤箱中取出烤盘。

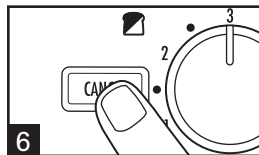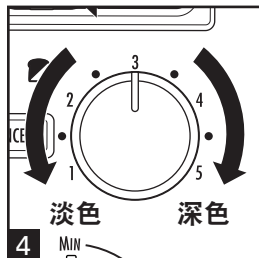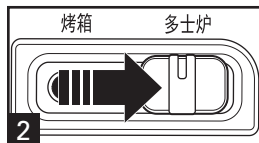

1. 将电源插头插入插座中。
2. 滑动模式选择器到“多士炉”位置。
3. 向面包插槽中放入面包片。
4. 旋转烘烤色度旋钮到所需的位置，然后按下面包拨杆。完成烤面包后，面包片会自动弹出。
5. 上提面包拨杆以取出小的面包片。
6. 可随时按“取消 (CANCEL)”按钮以停止烘烤。
7. 拔掉电源插头。

注意：对于烤单面焦黄色的面包圈时，请使用烤箱并调整到“烧烤”模式。有关烧烤，请见下页介绍。

食物	烘烤色度设置	模式/温度
普通面包	2-5	烤面包
英式松饼	4	烤面包
面包圈	3-5	烤面包或烧烤
冷冻面包或小圆面包	4	烤面包
冷冻华夫饼	4	烤面包
油酥糕点* (例如：果酱馅饼 Pop Tarts®)	不适用	烤箱/175°C 2 分钟
冷冻预制食品* (例如：果馅卷 Toaster Strudel™ 或热包 Hot Pockets®)	不适用	烤箱/175°C (依照制造商说明)

取出卡在食物插槽的食物时，请从插座上拔下电源插头并让多士炉冷却。倒转多士炉并摇晃。请勿使用叉子或其他可能导致损坏加热元件或导致火灾或触电的器具。

® Pop Tarts 是 Kellogg Co. 公司的注册商标。
™ Toaster Strudel 是 Pillsbury Co. 公司的商标。
® Hot Pockets 是 Nestlé 的注册商标。

*请勿在多士炉中进行加热—请使用“烤箱 (OVEN)”模式。禁止加热碎、破或扭曲的糕点，并禁止无人看护使用。

 
如何烘烤或烧烤

警告 火灾危险。

- 请勿让烤箱在无人看管的情况下运行。
- 烤箱内的食材和加热元件之间保留至少1英寸（2.5厘米）间隙。
- 请勿使用烤箱蒸煮袋。
- 请勿在热塑容器中加热食材。
- 请遵循食材制造商的说明。



注意：使用前应清洗烤盘。

1. 将电源插头插入插座中。
2. 滑动模式选择器到“烤箱”位置。
3. 将烤箱温度旋扭转到所需的温度位置或“烧烤”位置。红色电源指示灯将点亮。让烤箱预热约5分钟。

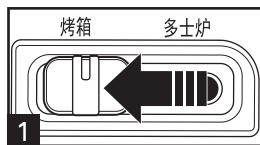

烧烤：

  1. 将烤架装入到上层位置，并将烤盘装入到烤架的下层。
2. 将烤箱温度旋扭转到“烧烤”位置。
3. 旋转定时器旋扭过10分钟位置，然后向后旋转不超过5-10分钟，或按住该旋扭侧面的按钮同时旋转定时器到“长通 (I)”位置。
4. 操作完成后，定时器旋扭到“关闭 (O)”位置。
5. 拔掉电源插头。

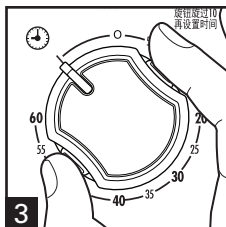
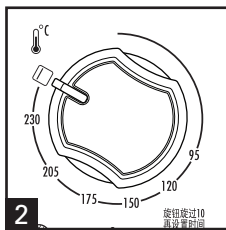


烘烤：

上层位置：用于烘烤披萨饼和鸡块/丁和小的冷冻点心。

下部位置：用于烘烤蛋糕和小全鸡（放在烤盘中）、烤土豆（放在烤架并垫上金属箔纸或在烤盘中）。

  1. 烤蛋糕、披萨饼、鸡块和开胃菜时，将烤架装到下部位置。
2. 将烤箱温度旋扭转到所需的温度位置。
3. 旋转定时器旋扭过10分钟位置以设置所需的时间，或按住该旋扭侧面的按钮同时旋转定时器到“长通 (I)”位置。
4. 操作完成后，定时器旋扭到“关闭 (O)”位置。
5. 拔掉电源插头。

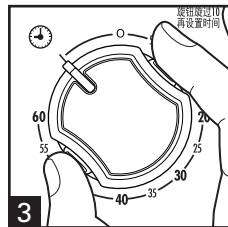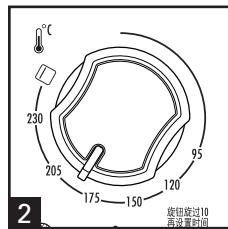

注意：烘烤时，烤箱门上可能会凝结水珠。多功能烤箱是封闭的，因此湿气会慢慢散去。烤箱冷却后，使用厨房用纸巾擦干烤箱门。

如何烘烤 或烧烤 (续)

烘烤小贴士

- **烘烤大部分食物应：**根据包装或食谱说明。仔细观察，并根据需要调整时间或温度。
- **再加热披萨饼：**禁止将包装盒直接放入到烤箱中。以230°C的温度烹饪3分钟或直到可以食用。
- **披萨饼：**直接将冷冻或冷藏的披萨饼放到烤架上烹饪。
- **自制的披萨皮 (或任何软面团)：**应在烤盘上烹饪披萨。
- **烤土豆：**直接将其放在烤架上以205°C的温度烘烤1小时。
- **油酥糕点：**直接在烤架上加热。如果糕点含有馅料、糖浆或糖霜，请使用烤盘。
- **烹饪好后应立即取出：**继续在多功能烤箱中烘烤将会使食物将变干。

保养与清洗

警告 触电危险。

请勿使用金属清洁球清洁本电器。碎片会脱离清洁球并触碰电气元件。

多功能烤箱需定期清洁，以保证最佳性能和使用寿命。定期清洁也将减少火灾危险。

1. 拔掉电源插头让其完全冷却。
2. 在带清洁剂的温水中清洗烤架、烤盘和滑出式可拆卸屑盘。冲洗，然后晾干。
3. 将屑盘滑入安装到屑盘插孔中。
4. 使用蘸清洁剂的湿布清洁烤箱内部、擦拭烤箱壁、烤箱底部和玻璃门。再使用干净的湿布擦干。
5. 请使用软湿布擦拭烤箱的外部并使其干燥。

故障排除

烤箱无法加热。

- 检查确定电源插座是否正常工作且烤箱插头已插上。将温度旋钮旋至所需的温度设置。
- 确保模式选择器被设置在“烤箱 (OVEN)”位置。

烘烤时，烤箱门内表面出现水雾。

- 这属于多功能烤箱烘烤的正常现象。水分从多功能烤箱中散发出来的速度慢于从多士炉中散发出来的速度。新鲜面包、面包圈和速冻面点所散发的水汽量各有不同。

烤箱散发异味和冒烟。

- 大部分加热电器在初次使用时出现冒烟和异味属正常现象。初次加热后，这些现象将会消失。

部分食材被烧焦而部分未熟。

- 为实现所用食谱的最佳效果，可适当调整烤箱温度或烹饪时间。

面包、面包圈或英式松饼达不到所要的烘烤效果。

- 烘烤程度受面包温度影响。常温面包烤至适中色要用“中等”档设置。同种被冷藏过的面包可能需要用“深色”档设置才能达到中色效果。
- 食物的水分量也会对烘烤效果有影响。现制新鲜的面包圈水分含量比超市里糕点区购买的要高。可能需要再一次短暂的烘烤来达到所需要的褐色。新鲜现制的面包圈可能需要两次烘烤。
- 由于英式松饼的外皮不太一样，可能需要至少两次烘烤。按最大深色设置完成一次烘烤后，如果还要颜色再深一些，请将烘烤色度旋钮调整到淡色设置，再进行第二次烘烤。注意观察避免烤焦。英式松饼用刀切开烘烤比用叉子烤的更均匀。

食物被夹在多士炉的插槽里。

- 如果食物被夹住，多烘烤周期结束后多士炉将自动关闭。拔下多士炉的电源插头并让其冷却。倒转多士炉并摇晃。请勿使用叉子或其他可能导致损坏加热元件或导致火灾或触电的器具。

备注

备注

食品接触材料信息



本产品符合相应食品安全国家标准要求，食品接触用材料及其执行标准的符合性信息说明如下：

序号	部件名称	材质	执行标准	备注
1	烤网架，面包网架	基材:冷轧钢丝(Q195) 镀层:镀铬	GB4806.1-2016,GB4806.9-2016	/
2	镀铝烤盘，面包推条	镀铝板(SA1C)	GB4806.1-2016,GB4806.9-2016	/
3	面包插槽上盖板	不锈钢10Cr17 (SUS430)	GB4806.1-2016,GB4806.9-2016	/

注：特殊使用说明：请严格遵照说明书及产品所带附件资料使用本产品。

产品中有害物质的名称及含量

Name and content of hazardous substances in product

部件名称 (Component name)	有害物质(hazardous substance)					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr(VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
多士炉通断线路板 (Toaster ON/OFF PCB)	0	0	X	0	0	0
电源板线路板 (Power PCB)	X	0	0	0	0	0
多士炉面包烤色线路板(Toaster bread color PCB)	X	0	0	0	0	0
微动开关 (Micro switch)	0	0	X	0	0	0
温控器 (Thermostat)	X	0	X	0	0	0

本表格依据 SJ/T 11364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

Indicates that the said hazardous substance contained in all the homogeneous materials for this component is below the limit requirement in GB/T 26572.

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。这是由于目前技术或经济等的原因暂时无法实现替代。

Indicates that the said hazardous substance contained in at least one of the homogeneous materials used for this component is above the limit requirement in GB/T 26572. Due to technological and/ or economic reasons, these hazardous substances cannot be easily replaced at this time.



这是环保使用标志。标志内的数字代表在正常使用状态下，产品的环保使用推荐年限。

This is the logo of environmental protection use. The number inside indicates the environmental protection use recommended period (Year) of product in normal use.

Model/型号:
31156-CN

Type/类别:
O63

Rating/规格
220-240V~ 50-60Hz 1325-1580W

制造商：汉密尔顿海滩电器（深圳）有限公司
地址：深圳市福田区深南西路车公庙工业区天安数码时代大厦主楼 1306-1308,1309-1311 单元
本产品执行标准：GB4706.1-2005, GB4706.14-2008

以上内容如有改动，恕不预先通知



添加官方微博 微信
开启美食人生