



High-Performance Blender



Let's get started on some healthfully delicious blending!

4 pre-programmed settings. Delicious creations with the push of a button.

HOT SOUP
Pureé and heat ingredients



SMOOTHIE
Ideal for fresh smoothies

WHOLE JUICE
Blend fruits and vegetables into smooth drinks



ICE CRUSH
Break ice effortlessly for drinks or frozen treats



QUICK TIPS:



Always add liquids first, followed by other ingredients. Add frozen ingredients and ice last.



For thicker, more dense foods, use the included tamper to move the ingredients within the jar while blending.



Use the infinite speed dial for maximum control while blending. Press START/STOP (◊/⊗), then rotate the dial. Press START/STOP (◊/⊗) again to finish blending.



Create creamy dressings and sauces using the integrated emulsion cup.

For more information, read your Use & Care Manual or refer to www.hamiltonbeach.cn

58911-CN, 58912-CN, 58913-CN

©2017 HAMILTON BEACH BRANDS, INC.

880024101



多功能高速破壁料理机



欢迎选用我们的料理机，开始健康美味新生活！

4种程序设置按一下按钮即可创造美味美食。

热汤
菜泥和热配料



果昔
制作新鲜果昔的理想之选

纯果汁
把水果和蔬菜搅拌成
润滑可口的饮料



刨冰
不费吹灰之力将冰制作成饮
料或冰沙



快速提示：



务必首先添加液体，然后再添加其他配料。最后添加冰冻配料和冰块。



对于较稠、较粘的食物，搅拌时使用附带的搅拌棒搅动搅拌杯内的配料。



搅拌期间，使用无极变速旋钮实现最佳控制。按启动/停止 (◀/▶) 按钮，然后旋转旋钮。再次按启动/停止 (◀/▶) 按钮便可完成搅拌。



使用一体式加料口盖可制作奶油色拉酱和调味汁。

了解更多信息，请参阅说明书或访问www.hamiltonbeach.cn

58911-CN, 58912-CN, 58913-CN

©2017 HAMILTON BEACH BRANDS, INC.

880024101