

HOW TO DISASSEMBLE AND CLEAN

CAUTION: ALWAYS DISCONNECT CORD FROM ELECTRIC OUTLET BEFORE INSERTING OR REMOVING BLADES.

1. Unplug cord from electric outlet.
2. Press blade release button. Grasp blades from top dull edge near plastic guard and carefully pull until blades release.
3. Carefully separate blades by sliding apart to disengage rivet from keyhole.
4. Wash blades in hot, soapy water. Rinse and dry thoroughly.
5. After washing and drying, immediately place blades into the plastic sheath for storage.
6. To clean motor housing and cord, wipe with a damp cloth.

HINTS FOR BEST RESULTS

1. Simply move knife through the food. You need not use a back and forth sawing motion.
2. Meat and poultry will slice more easily if allowed to stand about 15 minutes after cooking and before slicing.
3. Slice down to and around bone. Do not attempt to slice through bone.
4. The knife blades are not designed to cut through frozen foods.
5. Do not attempt to sharpen the serrated blades at home. Replacement blades may be purchased from Hamilton Beach /Proctor Silex, Inc. or at the nearest authorized service center.

ONE YEAR LIMITED WARRANTY

Hamilton Beach/Proctor-Silex, Inc. warrants this appliance to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. There are no warranties with respect to any glass parts or containers which may be supplied with this appliance. This warranty does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in printed directions. HAMILTON BEACH/PROCTOR-SILEX, INC. DISCLAIMS ALL RESPONSIBILITY FOR CONSEQUENTIAL, INCIDENTAL, OR COMMERCIAL LOSSES CAUSED BY USE OF THIS APPLIANCE. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER ASSISTANCE HOT LINE in Washington, N.C. between 8:00 a.m. and 6:00 p.m., Eastern Time, Monday through Friday. (For faster service, please have model number ready for operator to assist you.)

1-800-851-8900

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.



HAMILTON BEACH ♦ PROCTOR-SILEX, INC.

Washington, North Carolina 27889

840006300

Hamilton Beach®

*Use & Care
for Electric Knife*

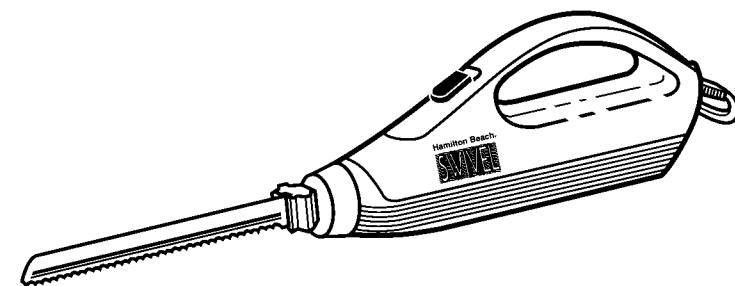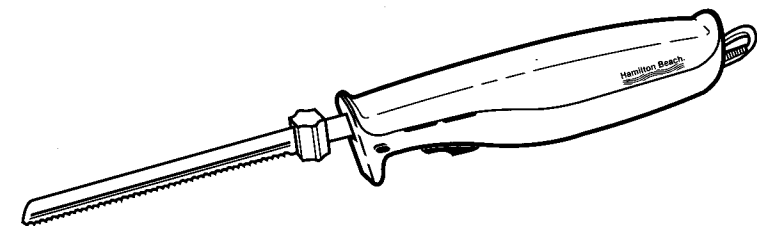

Customer Service Number

1-800-851-8900

(8:00 AM-6:00 PM Eastern Time)

Call to find the nearest authorized service center or to order parts and accessories.

KEEP THIS NUMBER FOR FUTURE REFERENCE!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including:


1. Read all instructions.
2. To protect against risk of electrical shock, do not immerse motor in water or other liquid. Do not operate knife in water or under running water.
3. Close supervision is necessary when used by or near children.
4. Unplug cord from outlet when not in use, before putting on or taking off parts and before cleaning. Disconnect when changing blades.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to Hamilton Beach/Proctor-Silex, Inc. or the nearest authorized service center for examination, electrical repair, mechanical repair or adjustment.
7. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including stove.
10. Blades are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Always store blades with cutting edge away from you.

This appliance is intended for household use only.

SAVE THESE INSTRUCTIONS


KNOW YOUR ELECTRIC KNIFE

* Feature on selected models.

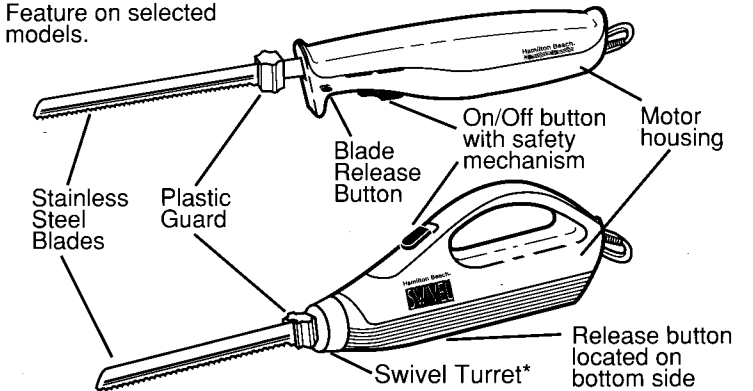

BEFORE FIRST USE: Wash blades in hot, soapy water. Rinse, then dry thoroughly. Handle carefully. Blades are sharp.

HOW TO ASSEMBLE AND USE

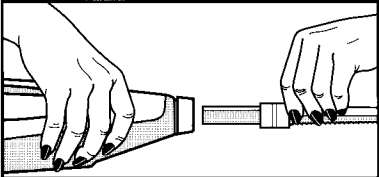1. **CAUTION:** Be sure cord is not connected to electric outlet when removing or inserting blades and when knife is not in use. The blades are extremely sharp. Always handle by the side opposite the cutting edge, or by the plastic guards.
2. If blades are separated, pick up by the plastic guard. Slide the rivet on one blade into the keyhole slot in the other blade until they are locked together.
3. Holding blades together at the base of the blade with cutting edge down, slide into motor housing until both blades click into place. 
4. Plug cord into 120 volt AC outlet.
5. Hold knife by handle. If the swivel model, slide the On button forward and push in to operate the knife. If handle grip model, slide On button back and squeeze to operate.
6. To stop, release button.
7. To rotate the blade on the swivel model, first unplug from outlet. Next, insert blades as instructed. From the top, grasp the turret on the sides, push in and rotate one-quarter turn. The blade will turn and lock. (A left-handed person should insert the blades upside down to achieve a horizontal blade that is comfortable to use.)