

IMPORTANT TIPS

- For best performance FREQUENTLY REMOVE CRUMBS FROM TOASTER.
- Avoid torn slices of bread or broken pastries; they may lodge in toaster wells.
- To free broken toast or pastries lodged in wells, disconnect toaster cord from outlet and allow toaster to cool. Turn toaster upside down and shake. Never use a fork or sharp-edged instrument as it may damage heating element.
- While many types of products can be toasted in this toaster, DO NOT toast buttered breads or foil-wrapped foods as they may damage the toaster or result in the risk of fire or shock hazard.

TO OPERATE TOASTER

1. Plug cord into 120 volt A.C. electric outlet.
2. Adjust Toast Shade Selector to desired setting.
3. Place bread slices or toaster pastries in slots.
IMPORTANT: When toasting one slice of bread, always use the toasting well marked "ONE SLICE".
4. Press down Bread Lifter Knob to activate toasting cycle. At the end of cycle, food will pop up automatically.
5. To stop cycle before automatic pop-up, simply lift Bread Lifter Knob up.
6. Do not be alarmed if the Bread Lifter does not "latch" when you attempt to toast in rapid succession. This is a normal reaction. Wait for a few seconds, allowing the thermostat to reset, then lower the Bread Lifter again.

CARE AND CLEANING

Always unplug Toaster before cleaning.

1. Check and clean Crumb Tray frequently
 - Place Toaster on side to swing tray open.
 - Brush crumbs from tray, wipe with damp cloth; dry.
 - Rub stubborn spots with plastic scouring pad dampened in sudsy water; dry.
 - Snap tray securely in place.
2. To clean Toaster exterior:
 - **Do not immerse Toaster in water.**
 - Wipe surfaces with a cloth dampened in sudsy water, or use a household cleaner recommended for chrome, painted or plastic surfaces; dry with soft dry cloth.

NEVER USE STRONG OR BRASIVE CLEANERS THAT WILL SCRATCH THE SURFACE OF THE TOASTER.

ONE YEAR LIMITED WARRANTY

This product is warranted, to the original purchaser or gift recipient, to be free from manufacturing defects under normal use and conditions for one (1) year.



If warranty service is required during the warranty period, the seller will at its option repair or replace the product without charge upon delivery of the product to the store with proof of date of purchase. In event of product replacement, the then current model will be provided. This warranty does not cover breakage caused by misuse, or damage caused by product use outside the United States.

For warranty service, just bring the warranted product with sales receipt to any Kmart store. Warranty performance is assured by the Kmart Corporation, Troy, Michigan 48084. Federally required law statement: "This warranty gives you specific legal rights, and you may also have other rights which vary from state to state."

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.

Washington, North Carolina 27889

USE & CARE

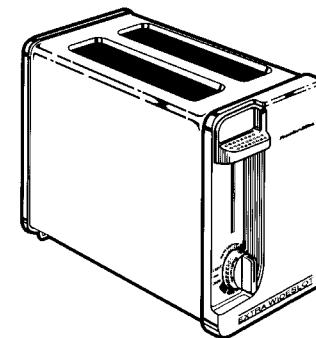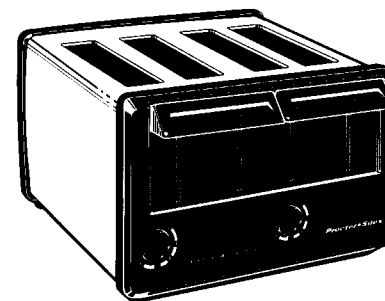

Extra Wide Slot 2 & 4 Slice Toasters

With Self-Adjusting
Bread Guides

Proctor-Silex®

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be observed including the following:



1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. **Unplug from outlet** when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. To disconnect, make sure bread lifter is in the up position, then remove plug from wall outlet.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
8. The use of accessory attachments not recommended by Hamilton Beach/Proctor-Silex, Inc. may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Failure to clean Crumb Tray may result in a fire hazard.
13. Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electrical shock.
14. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, etc., when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
17. Do not leave appliance unattended and do not use it for other than intended use.

SAVE THESE INSTRUCTIONS

CONSUMER SAFETY INFORMATION

ALWAYS ATTEND THE TOASTER DURING OPERATION.

- The Toaster has a short cord to reduce the hazards of becoming entangled or tripping over a longer cord. An extension cord may be used if the marked electrical rating of the extension cord is equal to or greater than the rating of the toaster. Use an extension cord rated 13 amperes or greater. Care must be taken to arrange the extension cord so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.
- Operating the Toaster and another appliance at the same time from the same electrical circuit could cause an electrical overload condition which would blow the fuse or trip the circuit breaker.
- This product is intended for household use only.

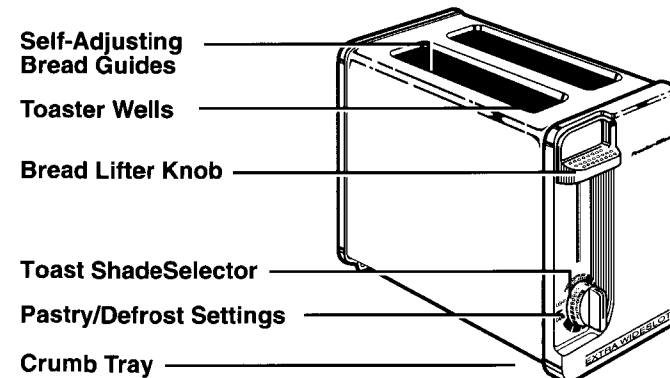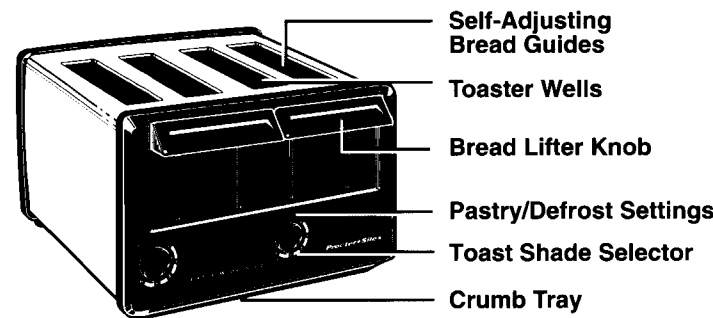

TOAST SHADE SELECTOR: Range of color from "Light" to "Dark". Start at middle of color range, then move lighter or darker as desired. Breads toast differently. Adjust setting to find the setting that works best for you.

PASTRY SETTING:

When toasting toaster pastries:

- **Always** use the PASTRY/DEFROST setting.
- Place pastry vertically in Toaster Well.
- Press Bread Lifter Knob down.
- **Attend toaster during toasting.** Children should be closely supervised when using toaster.

Caution: Some frozen toaster items have large amounts of filling which cannot be heated sufficiently by a toaster.


WARNING: DO NOT toast toaster pastries or other food products with frosting or runny fillings that could drip into Toaster Well and cause possible damage or result in the risk of fire. If frosting or filling does drip into Toaster Well, follow instructions on "Cleaning Your Toaster" before using the toaster again to prevent risk of fire.

DEFROST SETTING: To defrost bread, place Toast Shade Selector on PASTRY/DEFROST Setting. Press Bread Lifter Knob down.


NOTE: Bread may be slightly dry or toasted after defrosting. Toasting this bread on Medium Setting may produce dark toast. Adjust the Toast Shade Selector to produce the toast color you desire.

WARNING: The Defrost Setting has been designed to defrost bread. **DO NOT** defrost other foods, such as meats, as damage to the toaster, shock, and/or risk of fire may result.

SELF-ADJUSTING BREAD GUIDES: Automatically adjust to hold **Thin** and **Thick** breads in place while toasting.

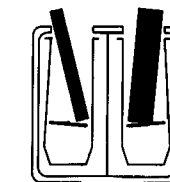

**Before
Toasting**

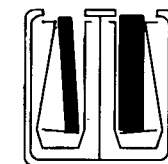

**During
Toasting**
Bread
Guides Hold
Slices
Upright