

READ BEFORE USE

Visit www.hamiltonbeachappliances.co.uk for our complete line of products and Use and Care Guides – as well as delicious recipes, tips, and other useful information!

Questions?
Please call us – our friendly associates are ready to help.
0808-234-4688

Hamilton Beach®

Stainless Steel Hand Blender



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use, cleaning, or maintenance by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
3. To protect against risk of electrical shock, do not put motor housing, cord, or plug in water or other liquid.
4. Avoid contact with moving parts. Keep hands, hair, clothing, and utensils away from blades and out of container during operation to prevent the possibility of severe injury to persons and/or damage to the appliance. A scraper may be used but must be used only when the unit is not running.
5. The use of attachments not recommended or sold by the appliance manufacturer for use with this model may cause fire, electric shock, or injury.
6. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
7. Blades are sharp; handle carefully when emptying food contents and during cleaning.
8. Do not use over a stove or other heat source.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surfaces, including the stove.
12. Do not place appliance on or near a hot gas or electric burner, or in a heated oven.
13. Unplug from socket when not in use, before putting on or taking off parts, and before cleaning.

14. Do not operate any appliance with a damaged supply cord, or after the appliance malfunctions, or is dropped or damaged in any manner. All repairs must be conducted by the manufacturer, its service agent, or similar qualified persons in order to avoid a hazard. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment.

15. Be certain the cover is securely locked in place before operating appliance.

16. UK Models ONLY: The UK plug is provided with a 13-amp fuse approved by ASTA to B.S. 1362. If you need a replacement fuse carrier, it must be replaced with the same colour-coded carrier with the same markings. Fuse covers and carriers can be obtained from approved service agents.

SAVE THESE INSTRUCTIONS!

Other Consumer Safety Information

This product is intended for household use only.

 
This product is only intended for the preparation, cooking, and serving of foods. This product is not intended for use with any nonfood materials or products.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used.

The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.





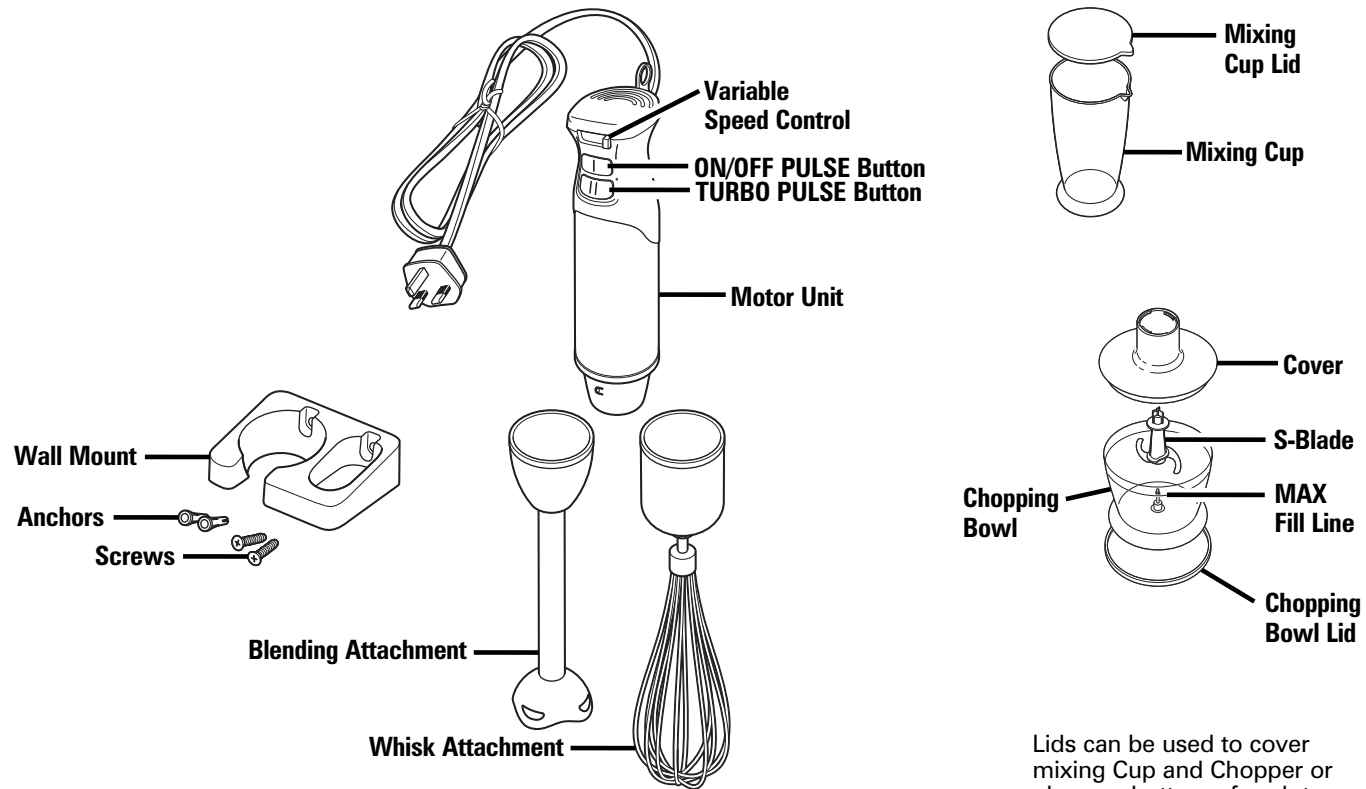








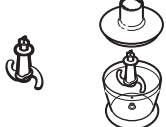 



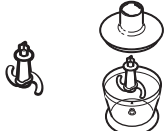 
To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

Parts and Features




Lids can be used to cover mixing Cup and Chopper or place on bottom of each to protect a surface.

Blending Guide

FOOD	SPEED	ATTACHMENT
	LO	
	TURBO	
	LO	
	LO	
	HI	
	LO	
	LO	
	TURBO	
	TURBO	

 
ON/OFF PULSE Button
TURBO PULSE Button

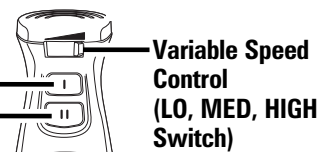

Helpful hints

- The hand blender is not designed for use over a heat source.
- This appliance is not intended to chop ice. Add ice to beverage after blending.
- To use the hand blender in a saucepan, be sure to remove the pan from the stove.
- To puree foods, liquid is needed. Add cooking liquid, broth, juice, milk, or cream until desired consistency is reached.
- For thorough blending, move hand blender up and down in mixture until smooth.
- To achieve best blending results and to reduce splattering (especially hot foods or liquids), use deep, tall containers.
- The plastic lid of the measuring jar may be flipped upside down and placed underneath the base of the cup or chopping bowl in order to provide a more stable surface while blending.
- Maximum operation duration is 30 seconds.

 How to Install Wall Mount

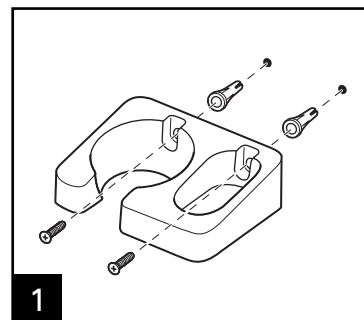

Attach wall mount to wall using the included anchors and screws.

 
5

How to Use the Hand Blender/Whisk Attachment




Set the variable speed level first and then press the ON/OFF PULSE button. Variable speed is for the ON/OFF PULSE button only. The TURBO PULSE button is not affected by the variable speed button.

⚠ WARNING Cut Hazard.

Always inspect attachments before each use. Do not use cracked, bent, or damaged attachments.

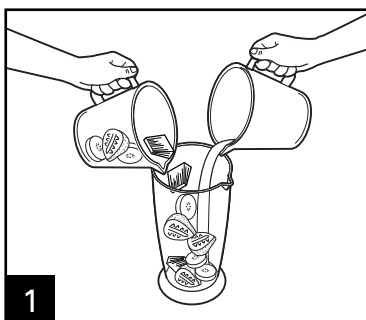


Do not use frozen ingredients.

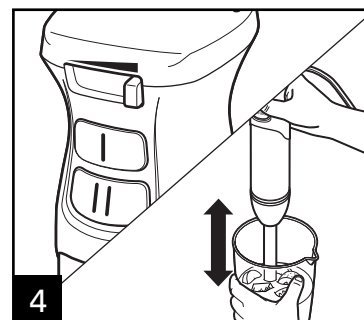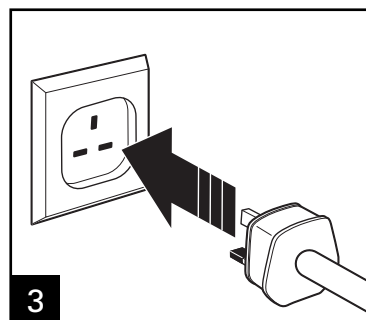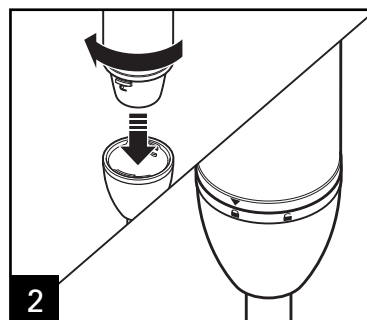   





NOTE: Do not immerse the motor unit past the top metal portion of each attachment.

 6


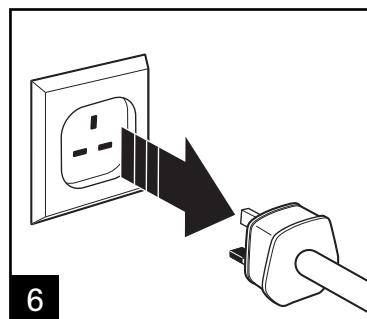


NOTE: Do not use nonfood items in this hand blender. This product is not meant for soap making.

    
How to Use the Chopper

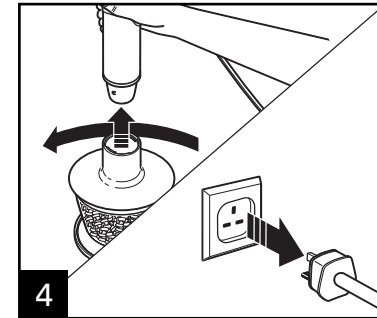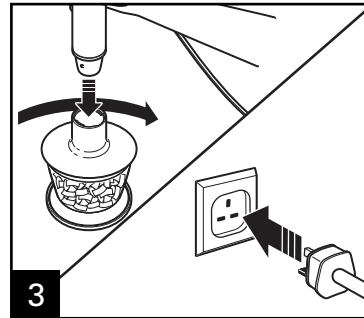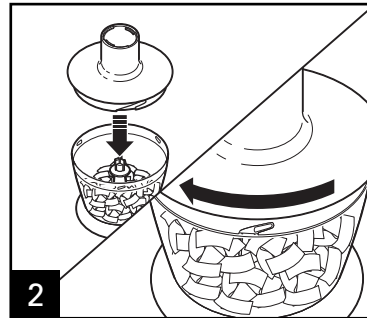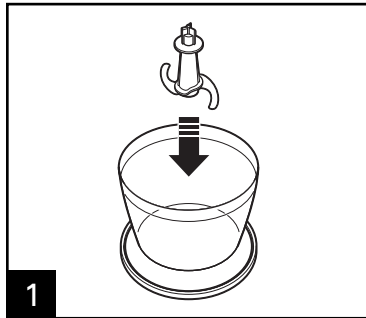

How to Clean the Hand Blender

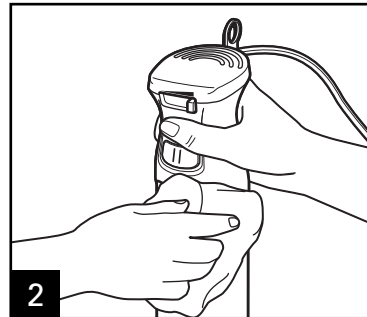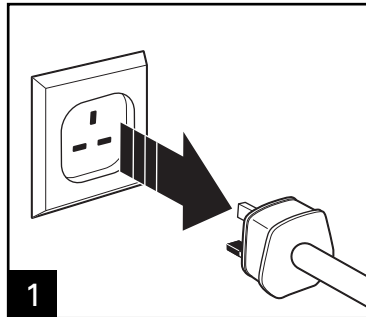  

 ⚠ WARNING
Electric Shock Hazard.
Never hold motor housing portion of hand blender under running water. Simply wipe clean with a damp cloth.

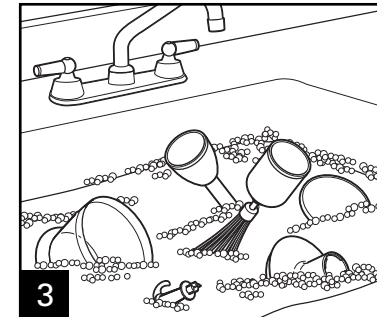

Hamilton Beach 1-Year Guarantee

This guarantee applies to products purchased and used in the United Kingdom. This is the only express guarantee for this product and is in lieu of any other guarantee or warranty.

This product is guaranteed to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this guarantee to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This guarantee does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This guarantee extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a guarantee claim. This guarantee is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 220–240 V 50/60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied guarantee or warranty. All liability is limited to the amount of the purchase price. **Every implied guarantee or warranty, including any statutory guarantee or warranty of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such guarantee or warranty is limited to the duration of this written guarantee.** This guarantee gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some countries do not allow limitations on guarantees or warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a claim under this guarantee, do not return this appliance to the store. Please contact us by email at customer.service@hamiltonbeachappliances.co.uk or by phone at 0808-234-4688.

Hamilton Beach Brands, Inc.
4421 Waterfront Drive
Glen Allen
Virginia 23060
USA

840256200

3/15