



**CAUTION: READ
OPERATOR'S MANUAL
BEFORE USE**

**警告：使用前閱讀操作
手冊**

Visit www.hamiltonbeach.com.tw for our complete line of products and Use and Care Guides – as well as delicious recipes and tips.

請造訪 www.hamiltonbeach.com.tw 瞭解我們完整系列的產品並獲得「使用和維護指南」 – 以及美味佳餚食譜和製作訣竅。

Hamilton Beach Brands, Inc.
4421 Waterfront Drive
Glen Allen, VA 23060 USA

840280802

6/17



Blender 調理機

English – Original Translation.....	2
中文.....	13

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use, cleaning, or maintenance by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety.
3. This appliance should not be used by children. Keep the appliance and its cord out of reach of children. Children should be supervised to ensure they do not play with the appliance.
4. To protect against risk of electrical shock, do not put cord, plug, base, or motor in water or other liquid.
5. Unplug cord from socket when not in use, before putting on or taking off parts, and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of attachments, including canning jars, not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Keep hands and utensils out of the jar and away from the cutting blade, while blending or chopping food, to reduce the risk of severe personal injury and/or damage to the blender or available attachments (attachments may not be provided with blender). A rubber spatula may be used but must be used only when blender is not running.
13. Blades are sharp; handle carefully—especially when cleaning inside blender jar.
14. Do not use a broken, chipped, or cracked blender jar.
15. Do not use broken, cracked, or loose cutting blade assembly.
16. Always operate blender with lid in place. Remove filler cap only for adding ingredients or to insert the tamper.
17. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to sudden steaming.
18. When blending hot liquids in the open top blender jar, remove center filler cap and close any edge lid opening intended for pouring. To prevent possible burns: Do not exceed the 2-cup (473-ml) level. Hot liquids may push off lid during blending; therefore, with the protection of an oven mitt or thick towel, place one hand on top of the lid, keep exposed skin away from the lid, and start blending at lowest speed.
19. Ensure cutter assembly is tight and secure to jar. Injury can result if moving blades accidentally become exposed.
20. Do not leave blender unattended while it is operating.
21. Before plugging cord into wall socket, turn off the appliance. To disconnect cord, switch to OFF (●). Then remove plug from wall socket.
22. Do not use appliance for other than intended purpose.

23. **CAUTION!** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
24. Do not operate more than 3 minutes ON at a time.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices, and other working environments;
- farm houses;
- by clients in hotels, motels, and other residential-type environments;
- bed and breakfast-type environments.

⚠ WARNING Electrical Shock Hazard:

This appliance is provided with a grounded (3-prong) plug to reduce the risk of electric shock. The plug fits only one way into a grounded socket. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit into the socket, have an electrician replace the socket.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. The extension cord must be a grounding-type, 3-wire cord. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

 
If the cutting blade assembly locks and will not move, it will damage the motor. Do not use. Call the toll-free customer service number for information.

Do not place blender jar in the freezer filled with food or liquid. This can result in damage to the cutting blade assembly, jar, blender, and possibly result in personal injury.

NOTE: This machine is equipped with motor overload protection. If the motor stops during operation due to overheating, unplug and allow it to cool down for approximately 15 minutes. Plug machine back in to resume normal operation.

Parts and Features

BEFORE FIRST USE: After unpacking the blender, follow the instructions in "Cleaning Your Blender."

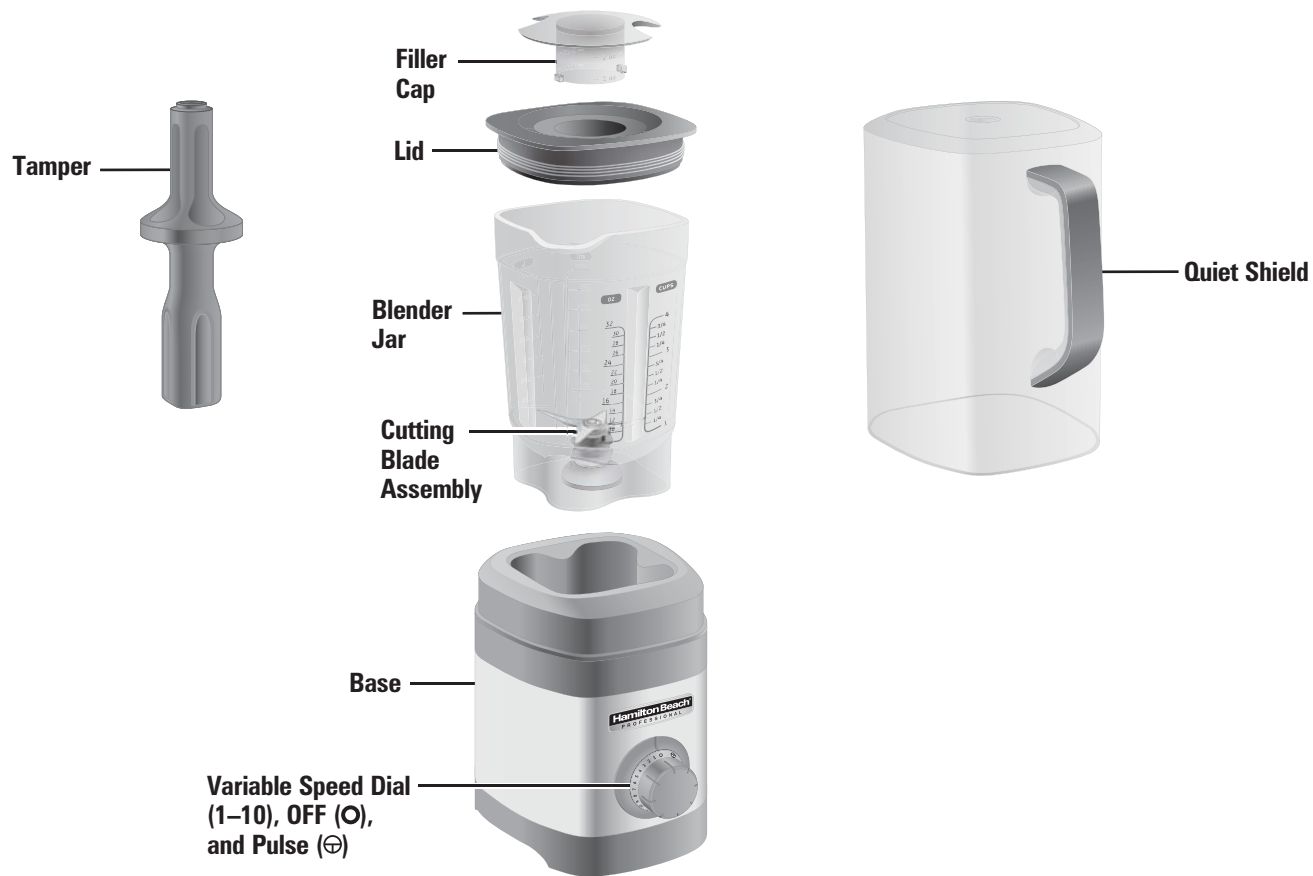

Parts and Features (cont.)

Quiet Shield: The quiet shield reduces the amount of noise from your blender. When placed over the blender jar, it muffles the sound that your blender produces.

Filler Cap: Doubles as a small volume measuring cup with markings.

Lid: The lid is easy to put on, take off, and clean. Always use the lid and the filler cap when the machine is in operation.

 
Blender Jar: Ounces, cups, and milliliters are clearly marked.

Tamper: The tamper helps mix thick or frozen recipes that cannot be processed with regular blending. It prevents air pockets from forming and is a handy tool when making nut butters or frozen desserts.

PULSE ⊕: This is a high-speed pulse, perfect for quick chopping or eliminating ice chunks.

Variable Speed Dial: The center VARIABLE SPEED DIAL determines the blender speed setting.

Automatic Overload Protection: This machine is equipped with motor overload protection. If the motor stops during operation due to overheating, unplug and allow it to cool down for approximately 15 minutes. Plug machine back in to resume normal operation.

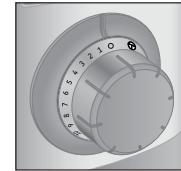


Using Your Blender

IMPORTANT: The blender jar and cutting blade assembly are subject to wear during normal use. Always inspect jar for nicks, chips, or cracks. Always inspect cutting blade assembly for broken, cracked, or loose blades. If jar or cutting blade assembly is damaged, do not use. Call the toll-free customer service number to obtain replacement parts.



 
1. Place blender jar on base.

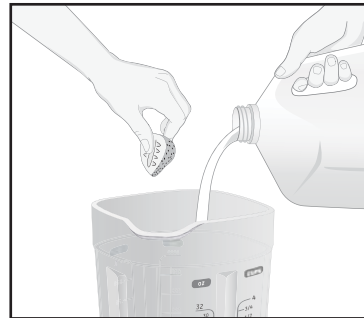

2. Add ingredients. Do not fill blender jar beyond the 2-cup (473-ml) level when liquid is more than half the ingredients.



 3. Place lid and filler cap on jar.

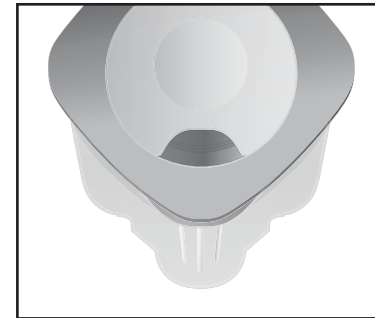


4. Align lid corner with jar pour spout.




5. Push lid fully down into jar and ensure filler cap is secure by turning clockwise.



 6. Place quiet shield over blender jar assembly. Remove the quiet shield and filler cap to use the tamper or to add ingredients.

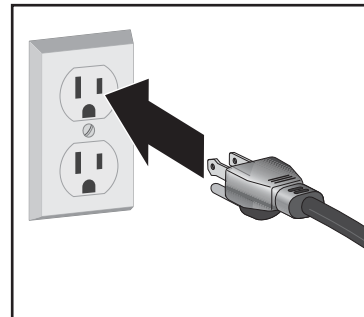

 7. Plug into socket.

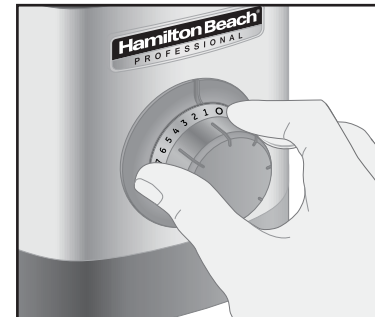


8. Rotate the VARIABLE SPEED DIAL to 1 to start blending.

Using Your Blender (cont.)



9. Slowly rotate the VARIABLE SPEED DIAL to the right or left during blending to increase or decrease blending speed.

 The blender will only pulse when the dial is turned and held on PULSE (⊖).

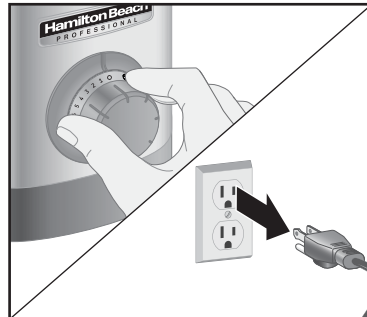

10. At the end of the blending cycle, rotate the VARIABLE SPEED DIAL back to the 0 position to stop blending. Unplug blender after blending.



 
11. Remove blender jar.

⚠ WARNING Burn Hazard.



Metal parts under blending jar get hot after extended use.

Using Your Blender (cont.)

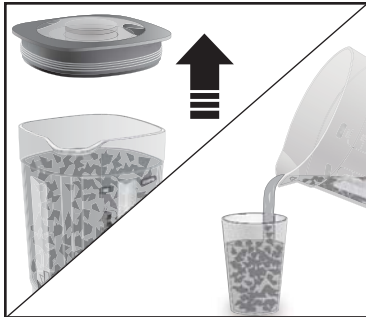

12. Remove lid by lifting up on any corner while holding blending jar securely. Serve.



13. **⚠ WARNING Burn Hazard.** Do not fill blender jar with hot liquid beyond the 2-cup (473-ml) level. Remove filler cap and with the protection of an oven mitt or thick towel, place one hand on top of lid. Keep exposed skin away from lid. Start blending at lowest speed.



14. Turn blender OFF (⏻) before removing quiet shield. Remove quiet shield and filler cap to insert tamper into hole in lid. Rotate filler cap counterclockwise from "locked" to "unlocked" position and lift out.



15. For thicker, more dense foods, use tamper to move the ingredients within the jar while blending. Place one hand on top of the lid while moving the mixtures around the blender jar with the tamper.

Blender Tips

- For soup and soymilk: It is recommended to either blend ingredients first and then cook in stovetop pot OR cook in stovetop pot first and then blend ingredients.
- To add foods when blender is operating, remove filler cap and add ingredients through the opening.
- For best performance, the minimum amount of liquid needed per recipe is 1 cup (8 ounces/237 ml). Add more liquid if food is not blending properly. The amount of liquid needed will vary based on the other ingredients required for blending.
- If blending action stops during blending or ingredients stick to sides of jar, insert tamper to help move the mixture around or add more liquid to blender jar.
- Do not store food or liquids in blender jar.
- Avoid bumping or dropping blender jar when in operation or at any time.
- Use tamper when making nut butters and blend in 1-minute intervals.

Using the Tamper

- The hand protector on the tamper and the lid work together to prevent the tamper from hitting the blades when the lid is secured properly on the blender jar.
- The blender jar should not be more than two-thirds full when the tamper is used during blending.
- Only use the tamper provided with this model blender. Do not use tampers made for any other blender or blender model.

- Cutting large whole fruits and vegetables may allow them to blend more quickly.
- Do not fill blender jar past highest graduation marking.
- Always place liquid in blender jar first, then remaining ingredients.
- If ice or frozen fruit pieces are not blending, stop the blender and pulse a few times.
- Do not allow ice to stand or freeze in jar. Immediately crush ice after placing in jar.

NOTE: This machine is equipped with motor overload protection. If the motor stops during operation due to overheating, unplug and allow it to cool down for approximately 15 minutes. Plug machine back in to resume normal operation.

- If food does not circulate, an air bubble may be trapped in the mixture. Remove the blender jar from the blender base. Remove the filler cap. Release the air bubble by inserting the tamper through the filler cap opening.
- Holding the tamper straight down may not help ingredients circulate. If necessary, point the tamper toward the sides or corners of the blender jar. DO NOT try to force the tamper deeper into the jar.

Cleaning Your Blender

⚠ WARNING Electrical Shock Hazard.

 
Disconnect power before cleaning. Do not immerse cord, plug, base, or motor in water or other liquid.

⚠ WARNING Burn Hazard.


Metal parts under blending jar get hot after extended use.

⚠ CAUTION Cut Hazard.

Handle blades carefully; they are very sharp.

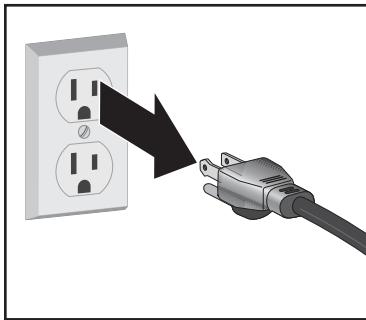

 1. Unplug.

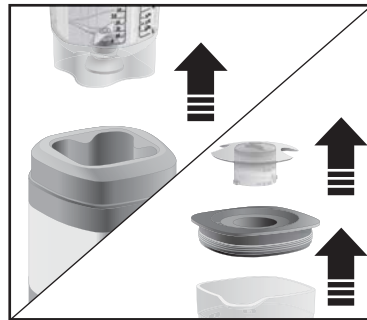

2. Remove quiet shield, jar, lid, and filler cap.



3. Wipe blender base, control panel, and cord with a damp cloth or sponge. To remove stubborn spots, use a mild, nonabrasive cleanser.



DISHWASHER-SAFE

4. DO NOT use the "SANI" setting when washing in the dishwasher. "SANI" cycle temperatures could damage your product. Parts may also be washed with hot, soapy water. Rinse and dry thoroughly. Do not soak.

Blender Jar:

- **HAND WASH ONLY.** Alternative is to fill jar halfway with water and add 2–3 drops of dish soap. Blend for 30 seconds. Rinse and dry thoroughly.
- To clean after blending oily foods, sprinkle 1/4 cup (59 ml) baking soda in blender. Add 1/2 cup (118 ml) white vinegar. Mixture will bubble. When bubbling subsides, add 1 cup (237 ml) water, turn the dial to 3, and blend. Wash any remaining residue with dish soap and water. Rinse and dry thoroughly.

Troubleshooting

Ingredients will not mix properly.

- Check to see if enough liquid has been added to the ingredients. Mixture should be fluid and free-running at all times.
- Solid pieces are too large.
- Container is too full. Do not fill past highest (2 cups/473 ml) graduation marking.
- Cutter assembly blades are not sharp or are damaged. Inspect container and cutter assembly daily.
- Select speed to create a fluid blend.

Blender smells like it is burning.

- Turn off blender and allow unit to cool.
- Although motors are tested during the manufacturing process, heavy use may cause curing of motor windings. The smell may quickly dissipate after a few heavy uses.
- If smell continues after additional heavy uses, call our customer care center.

There is grease around the bottom of the blender jar or on the counter top.

- Monitor the problem and source. This may indicate an issue with the jar bearings.
- Call our customer care center if the condition persists.

Blender jar is cloudy, stained, or scratched.

- Some cloudiness may be natural after use. The minerals from fruits, produce, and leafy greens, in addition to the oils of various nut butters, can sometimes cause a film on the blender jar or may be difficult to clean.
- Sprinkle 1/4 cup (59 ml) baking soda in blender. Add 1/2 cup (118 ml) white vinegar. Mixture will bubble. When bubbling subsides, add 1 cup (237 ml) water, turn the dial to 3, and blend. Wash any remaining residue with dish soap and water. Rinse and dry thoroughly.
- Some permanent scratching may result from blending hard ingredients like spices.

Limited Five-Year Warranty

This warranty applies to products purchased and used in Taiwan and will not be re-issued. This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase or 9,500 cycles. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you.

This warranty does not cover wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, misuse or damage to the product resulting from fire, earthquake, flood, lightning and other natural disasters, abnormal voltage and other external factors.

Original sales receipt is required as proof of purchase to make a warranty claim. This warranty is void if the product is used for other than single-family household use.

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty.

To make a warranty claim, please contact us at:

Tel: +886-2995-9258

Email: shop@Quoview.com

Address:

Quoview Technology, Inc.

No. 646-1, Chongxin Road, Section 5, Sanchong District

New Taipei City, Taiwan 24158

www.hamiltonbeach.com.tw

Customer Name: _____

Address: _____

Phone: _____

Email: _____

840280802

6/17

重要安全說明

使用電器時，為降低火災、觸電及/或人身傷害等事故風險，應始終遵守基本安全防範措施，具體如下：

1. 閱讀所有說明。
2. 有身體、感官或智力缺陷的人士，或者缺乏經驗和知識的人士（包括兒童）不得使用、清潔或維護本電器 - 除非在負責他們的安全的人員的嚴密監督和指導下使用。
3. 兒童不得使用本電器。避免兒童觸碰本電器及其電纜。請監督好兒童，確保他們不會把本電器當玩具玩。
4. 為防止觸電，請勿將電源線、插頭、底座或電機浸入水或任何其他液體中。
5. 不使用時，在安裝和拆卸零件之前以及進行清潔之前，請將電源線插頭從插座上拔出。
6. 避免接觸運動部件。
7. 請勿使用任何電源線或插頭已損壞的電器，也不要再在電器發生故障、跌落或以任何方式損壞後使用。電源線的更換和維修必須由製造商、其服務代理商或具備相似資歷的人員執行，以防發生危險。請致電所提供的客服電話，獲得關於檢查、修理或調整的資訊。
8. 使用非由電器製造商建議或出售的包括玻璃廣口瓶在內的附件，可能導致人身傷害。
9. 請勿在戶外使用。
10. 請勿讓電源線懸掛在桌子或臺面邊緣，或接觸高溫表面，包括加熱器。
11. 請勿將電器放置在高溫氣體或電爐之上或附近，或放置在加熱的爐子內。
12. 在攪拌或切碎食物時，手和器具請勿置於容杯中，並且要遠離刀片，以降低嚴重人身受傷及/或裝置或現有配件損壞（調理機可能未配備配件）風險。僅在攪拌機未執行的情況下，可使用橡皮刮刀。
13. 刀片十分鋒利，請小心操作，特別是在清潔攪拌罐時。
14. 請勿使用破損、碎裂或破裂的容杯。
15. 請勿使用破損、破裂或鬆動的切割刀片元件。
16. 使用調理機時，請總是蓋上調理機蓋。僅當需要添加原料或插入攪棒，方可取下加注器蓋。
17. 當將熱燙的液體倒入攪拌罐時，請小心謹慎，因為液體可能因為突然沸騰而從本電器噴出。
18. 當在頂部開口的攪拌罐內攪拌高溫液體時，請取下中央的加注器蓋，封閉任何邊緣蓋空隙以防液體流出。為防止可能的燙傷：請勿超過 2 杯（473 毫升）。攪拌時，熱湯液體可能會推動蓋子；因此，請佩戴放熱手套或使用厚毛巾加以防護後，將一隻手置於蓋子頂部，保持曝露在外的皮膚部位遠離蓋子，並以最慢的速度開始攪拌。
19. 請確保切割組件緊固且於容杯無害。一旦執行的刀片意外暴露在外，可能會造成傷害。
20. 調理機工作時，不得無人照看。
21. 將電源線插入牆上插座前，請關閉電器。要斷開電源線，請將開關打在關閉 (O) 位置上。隨後從牆上插座中拔出插頭。
22. 請勿將電器用作其他非預期用途。
23. **警告！** 為避免因熱熔斷路器意外重設導致的危險，不得透過外部開關裝置（例如計時器）給本電器供電，也不得將本電器連接到公用設施經常開關的電路上。
24. 本電器一次工作不得超過 3 分鐘。

請妥善保管這本說明書

其他使用者安全資訊

本電器的設計用途為家用和類似應用，例如：

- 商店、辦公室和其他工作環境中的員工廚房區域；
- 農舍；
- 由酒店、汽車旅館和其他居住型環境中的客戶使用；
- 臥室和進食早餐的場所。

警告 電擊危險：

本產品帶有地線插頭（3 座）以降低電擊危險。此插頭僅適用於接地插座。請勿對插頭進行任何形式的改裝或使用轉接頭，從而損毀插頭的安全功效。如果插頭無法插入插座，請找電工更換插座。

此電器使用的電源線長度經過設計挑選，以降低線纜纏結或過長導致誤絆的危害。如果需要使用更長的線纜，可使用經過認可的加長線纜。加長線纜的電效能需等同或優於此電器的電效能。加長線纜必須為接地型的 3 線電源線。必須小心謹慎地安置延長線，避免其垂吊於臺面或桌面，從而避免被兒童拉扯或意外絆倒事故。

如果切割刀片元件被鎖住且將不能移動，電機將因此受到損害。請勿使用。請致電免費客服電話，獲得資訊。

請勿將調理機蓋放置在塞滿食物或液體的冷藏箱中。這將損害切割刀具元件、蓋子、調理機，且可能造成人員傷害。

注意：此款電器具備電機超載保護功能。如果電機因過熱而在使用過程中停止工作，請拔出插頭，讓其冷卻大約 15 分鐘。重新插上插頭以復原正常操作。

部件與功能

首次使用前：開啟調理機包裝後，請按照「清洗 您的調理機」指令操作。



部件與功能 (續)

隔音罩： 隔音罩可降低您的攪拌器產生的噪音。當放置在攪拌罐上方時，它可以減弱您的攪拌器產生的噪音。

加注器蓋： 兼具帶有刻度的小容量量杯的功能。

蓋子： 蓋子的設計便於上蓋、拿下及清理。電器工作時，請總是使用蓋子和加注器蓋。

 
攪拌杯： 單位（盎司、杯和毫升）清楚標明。

攪棒機： 攪棒有助於那些不能用普通攪拌功能攪拌的濃稠或冷凍材料的攪拌。它可防止氣泡形成，為果仁醬或冷凍甜點製作的好幫手。

脈衝 Ⓢ： 這是一個高速脈衝，非常適合快速切碎操作或破碎大冰塊。

變速轉盤： 中央的變速轉盤可執行調理機速度設定。

自動超載保護： 此款電器具備電機超載保護功能。如果電機因過熱而在使用過程中停止工作，請拔出插頭，讓其冷卻大約 15 分鐘。重新插上插頭以復原正常操作。

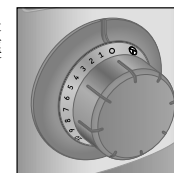

使用您的調理機

重要：容杯和切割刀具元件在正常使用過程中會磨損。請務必時常檢查容杯是否有刻痕、破碎或出現裂紋。請務必時常檢查切割刀具元件是否破損、破裂或出現刀片鬆動的現象。如果容杯或切割刀具被損壞，請勿使用。請致電免費客服電話，獲得更換零件。



 
1. 將容杯放置在底座上。



2. 新增材料。當液體超過原料的一半時，倒入容杯中的液體不得超過 2 杯 (473 毫升) 刻度線。



3. 將蓋子和加注器蓋放置在容杯上。

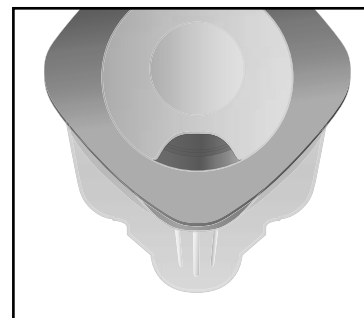


4. 將蓋角與攪拌罐注入口對齊。



5. 將蓋子完全推入攪拌罐，透過順時針方向旋轉注器蓋將其固定。



 6. 將隔音罩放置在攪拌罐組件上方。拆下隔音罩和加注器蓋，以便使用攪棒或添加原料。

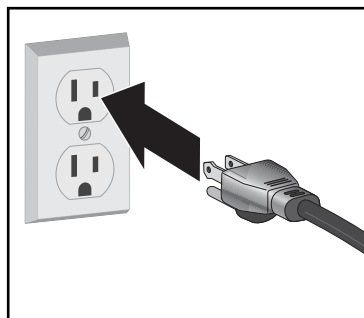

7. 將插頭插入插座。

 


8. 轉動變速轉盤至 1 以開始攪拌。


使用您的調理機 (續)



9. 攪拌過程中，緩慢轉動變速轉盤至右邊或左邊以提高或降低攪拌速度。
只有當轉動轉盤並保持在「脈衝」(⊕) 位置時，調理機才會脈衝。

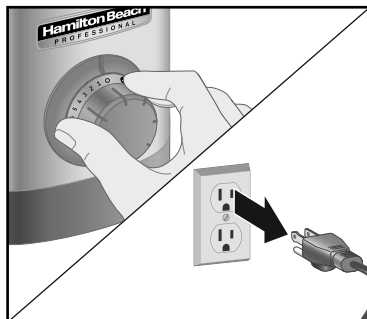

 10. 攪拌循環結束後，旋轉變速轉盤，使之回到 0 位置以停止攪拌。攪拌後拔出調理機插頭。

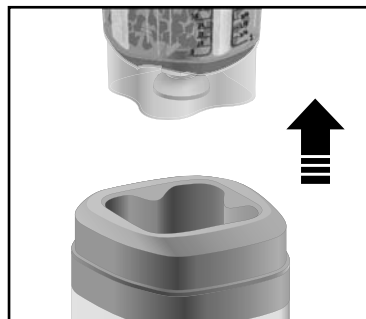

11. 取出容杯。

 
警告

燙傷危險。



長時間使用攪拌機後，其杯下的金屬部分會發燙。

使用您的調理機 (續)

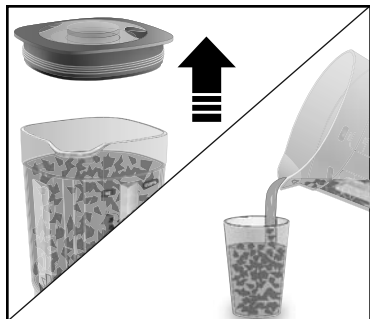

12. 握緊容杯的同時上提任一角，以此拆下蓋子。慢用。



13. **警告 燙傷危險。**
倒入容杯中的熱水量不得超過 2 杯 (473 毫升) 刻度線。取下加注器蓋，並使用烤箱手套或厚毛巾進行保護，將一隻手放在蓋上。保持裸露在外的皮膚遠離蓋子以最低速度開始攪拌。



14. 取下隔音罩之前，請關閉 (O) 攪拌器。拆下隔音罩和加注器蓋，以便將攪棒插入蓋子的洞口中。將加注器蓋子從「上鎖」位置逆時針旋轉至「解鎖」位置並且提出。



15. 對於較濃厚、較稠密的食物，攪拌時，請使用攪棒在攪拌罐內移動原料。當使用夯實機圍繞攪拌罐攪動混合物時，請將一隻手放置在蓋上。

調理機使用提示

- 對於湯和豆漿：建議首先攪拌原料，然後用煮鍋煮熟，或者首先用煮鍋煮熟，然後攪拌原料。
- 在調理機執行時添加食物，請拆下加注器蓋並從空隙處添加原料。
- 為發揮攪拌機最佳效能，每食譜所需的液體量不得低於一杯（8 盎司/237 毫升）。如果食物攪拌不當，請增加液體量。所需液體量因攪拌原料不同而有所差異。
- 如果在攪拌過程中攪拌停止或者原料黏在杯壁上，請插入攪棒以協助移動周邊攪拌物或往攪拌杯中新增更多液體。
- 請勿在容杯中儲存食物或液體。
- 攪拌時或任何時候，請避免碰撞攪拌機。
- 製作果仁醬時，請使用攪棒並且在 1 分鐘間隔間進行攪拌。

使用攪棒

- 攪棒護手和蓋子一起作用以防在蓋子正確固定在容機杯上時，攪棒碰撞刀片。
- 在攪拌過程中使用攪棒時，加入容杯的原料不得超過攪拌杯的三分之二。
- 僅能使用由本型號調理機提供的打夯機。不得使用為其他調理機或其他調理機型號製作的攪棒。

- 大型水果蔬菜的切割可能加快它們的攪拌速度。
- 加入到容杯中的食材量不得超過最高刻度標記。
- 請總是先將液體倒入攪拌杯中，然後加入其他原料。
- 如果未成功攪拌冰凍水果，請停止調理機工作，先脈衝幾次。
- 請勿讓冰塊在攪拌杯中存留或結冰。冰塊放入攪拌杯後，請即刻粉碎。

注意：此款電器具備電機超載保護功能。如果電機因過熱而在使用過程中停止工作，請拔出插頭，讓其冷卻大約 15 分鐘。重新插上插頭以復原正常操作。

- 如果食物不流通，攪拌物中將可能出現氣泡。將容杯從底座中移除。取下加注器蓋。將攪棒插入加注器蓋空隙中以排出氣泡。
- 垂直按下打夯機不能協助原料流通。如有必要，請將攪棒對著容杯的側面或角落。請勿嘗試強制性地讓攪棒進入攪拌杯的更深處。

清洗您的調理機

⚠ 警告 電擊危險。

 
清潔之前，先斷開電源。請勿將電源線、電插頭、底座或電機插入水或其他液體中。

⚠ 警告 燙傷危險。


長時間使用攪拌機後，其杯下的金屬部分會發燙。

⚠ 警告 切傷危險。

小心地拿放刀片，因為刀片十分鋒利。

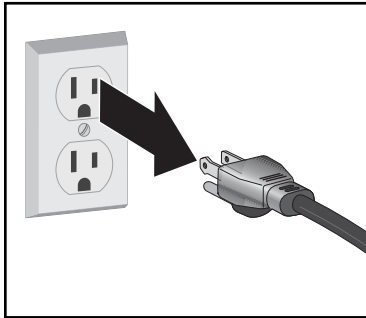

 1. 拔掉插頭。

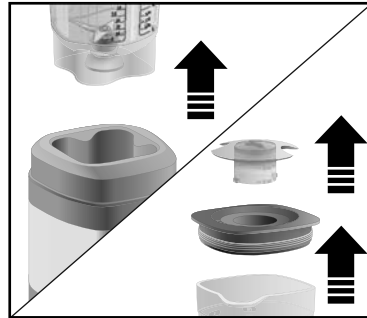

2. 取下隔音罩、攪拌罐、蓋子及加注器蓋。



3. 用濕布或海綿擦拭攪拌機底座、控制台和電纜線。使用溫和非研磨性的清潔劑來去除頑固污漬。



可使用洗碗機清洗

4. 在洗碗機中清洗時，請勿使用「清潔」設定。「清潔」循環溫度可能會損壞您的產品。也可以使用熱肥皂水清洗部件。徹底清洗、擦乾。請勿浸泡。

容杯：

- 僅能洗手。或者可以將罐中注入一半的水，然後新增 2 至 3 滴洗潔精。攪拌 30 秒鐘。徹底沖洗後擦乾。
- 要在攪拌了油性食物後進行清洗，在攪拌器上灑 1/4 杯 (59 ml) 小蘇打。加 1/2 杯 (118 毫升) 白醋。混合物將會起泡。泡沫消退時，請添加 1 杯 (237 毫升) 水，然後將轉盤轉到 3，然後進行攪拌。用洗潔精和清水沖洗掉所有的殘餘液體。徹底沖洗後擦乾。

故障排除

原料攪拌不當。

- 執行檢查，看看原料中是否新增了足夠量的液體。應保證攪拌物為流質且能隨時自由執行。
- 固體塊過大。
- 容器過滿。請勿超過最高（2 杯/473 毫升）刻度標記。
- 切割組件刀片不鋒利或已磨損。每日檢查容器和切割元件。
- 選擇速度，建立液體攪拌。

調理機有焦味。

- 關閉調理機，冷卻元件。
- 雖然在製造過程中對電機進行了測試，但是大量使用可能會導致電機繞組固化。頻繁使用幾次後，此味道迅速消失。
- 如果多次頻繁使用後仍有此味道，請致電我們的客戶服務中心。

容杯底部或頂部邊上有油脂。

- 監控問題和來源。這可能表示與容器軸承相關的問題。
- 如果情況持續，請致電我們的客戶服務中心。

攪拌罐顏色暗沉、汗跡斑斑或有劃痕。

- 使用後可能會出現一些顏色暗沉。除了各種果仁醬裏的油外，水果、農作物及綠色蔬菜中的礦物質有時可在容杯中形成一層薄膜，或者可能難以清洗。
- 在調理機內噴灑 1/4 杯（59 毫升）食用蘇打水。加 1/2 杯（118 毫升）白醋。混合物將會起泡。混合物將會起泡。泡沫消退時，請添加 1 杯（237 毫升）水，然後將轉盤轉到 3，然後進行攪拌。使用洗潔精和水清洗任何殘留物。徹底清洗、擦乾。
- 有些永久性劃痕可能是攪拌諸如調料等硬原料導致的。

Model/型號:
58915-TW

Type/類別:
B83

Capacity/容積:
1000 毫升

Rating/規格:
110 V~ 60 Hz 600 W

委製廠商:

Dist.: Hamilton Beach Brands, Inc., Glen Allen, VA 23060

© 2017 Hamilton Beach Brands, Inc.

USA 1-800-851-8900

注意

五年有限質保

此保固適用於臺灣購買和使用的產品，且無法重新簽發。本公司保證，從最初購買日期開始計算，本產品在一（5）年內或者工作 9,500 次循環之前不會出現材料缺陷和製程缺陷。在此期間內，唯一的補救措施為維修或替換產品或任何發現有瑕疵的部件，並由我們酌情辦理，但是您需負擔將產品送回以及依據此保固將產品或部件寄送給您的相關所有費用。

此保固不包含正常使用的磨損、未遵照書面指示使用或因意外、改動、濫用、不當使用造成的損害或因火災、地震、洪水、閃電和其他自然災害、電壓異常和其他外在因素造成的損害。

申請保固索賠時，需檢附原始銷售單據作為購買證明。如果產品未在單一家庭使用，則保固將無效。

我們排除因違反明示或暗示保固而導致的特殊、偶然和相應損害的所有索賠。

如需申請保固索賠，請聯絡我們，方式如下：

電話：+886-2995-9258

電子郵件：shop@Quoview.com

地址：

進口商：匯聚科技股份有限公司

24158 臺灣新北市三重區重新路 5 段 646-1 號

www.hamiltonbeach.com.tw

客戶姓名： _____

地址： _____

電話： _____

電子郵件： _____