

READ BEFORE USE

使用前阅读

Visit www.hamiltonbeach.cn for our complete line of products and Use and Care Guides – as well as delicious recipes, tips, and to register your product online!



有关我们所有系列产品的，使用与维护指南 – 以及美味食谱、生活小贴士和产品在线注册的更多信息，请访问www.hamiltonbeach.cn。

Questions?

Please call us – our friendly associates are ready to help.

China: 400-852-2655

如有疑问？

请致电我们，我们的团队随时准备为您提供帮助。

中国大陆客服热线：

400-852-2655

官方网站：

www.hamiltonbeach.cn

型号：46896-CN

此说明书中图片仅供参考，产品以实物为准。

使用产品前请仔细阅读本产品使用说明书，并妥善保管。

Hamilton 汉美驰 Beach®

Coffee Maker 咖啡机



English 2

中文 12

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
5. To protect against electric shock, do not place cord, plug, or coffee maker in water or other liquid.
6. Unplug from outlet when either the coffee maker or clock is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
7. Coffee maker must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
8. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Use only the carafe provided with the appliance.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
13. Be certain lid is securely in place during brew cycle and when pouring coffee. Do not use force when placing lid on carafe.
14. Do not place coffee maker on or near a hot gas or electric burner or in a heated oven.
15. To disconnect coffee maker, turn controls to OFF (O) and then remove plug from wall outlet.
16. **WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover. No user-serviceable parts are inside. Repair should be done by authorized service personnel only.
17. Do not use appliance for other than intended use.
18. The carafe is designed for use with this coffee maker. It must never be used on a range top or in a microwave oven.
19. Do not use a cracked carafe or one with a loose or weakened handle.
20. Keep-warm plate may remain hot after the coffee maker is turned off.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

This appliance is intended for household use only.

 
⚠ WARNING Electrical Shock Hazard: This appliance is provided with a polarized plug (one wide blade) to reduce the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.


To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

Parts and Features

BEFORE FIRST USE: Wash all removable parts in hot, soapy water. Rinse and dry. Brew one cycle with water on each side and discard water.

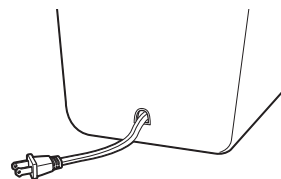

Cord Storage

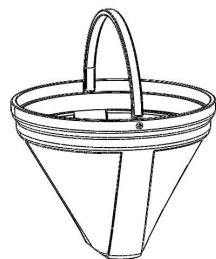 

Gold Cone Filter



**Thermal Carafe
(10-cup capacity)**




Clock and Controls

H PROG. M

Brew Strength Options	
	Regular
	Bold
	Robust

 Filter Holder

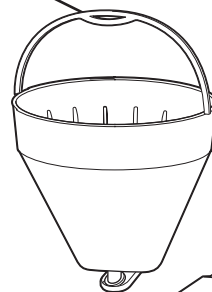


Water Reservoir

Filter Holder Well

Clock and Controls

 Keep-Warm Plate



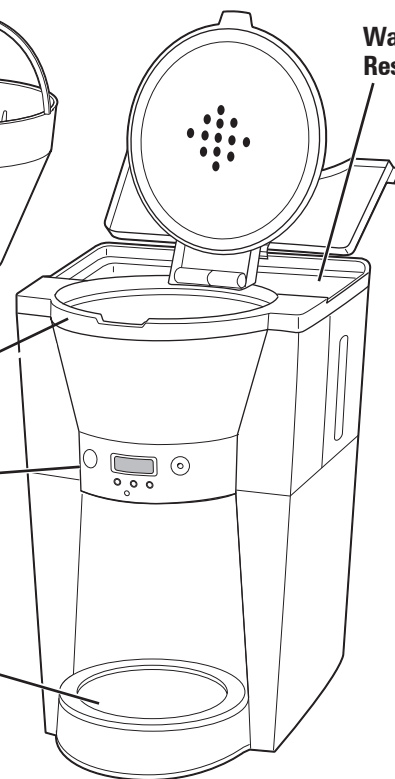


Using the Coffee Maker

⚠ WARNING Burn Hazard.

To avoid hot coffee overflowing from the filter basket:

   - When using decaffeinated coffee, do not exceed the coffee manufacturer's recommended serving amount.
- If filter basket overflow occurs, unplug coffeemaker and allow coffee in filter basket to cool before removing filter basket.

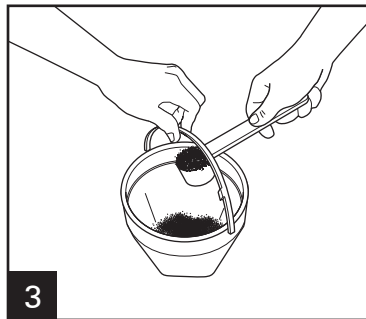
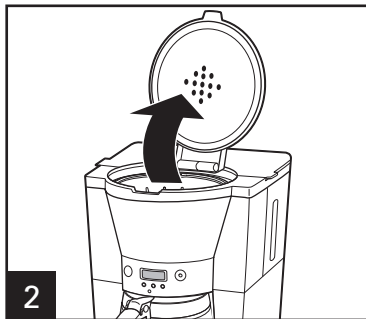
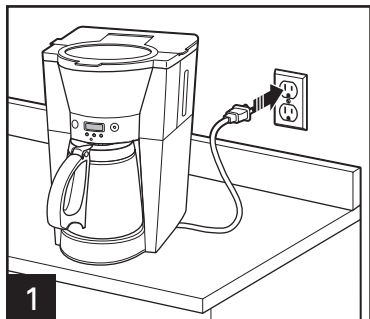


Use the enclosed gold cone filter and ensure the filter is fully inserted into the filter holder. If use disposable paper cone filters. It should be folded along the crimp on the sides and the bottom for proper placement. This will prevent the filter from collapsing during brewing.




For each cup of coffee being made, use one level tablespoon of grounds. Use slightly less grounds for decaf or flavored coffees—these blends can cause overflow if too much is used.

TIP: If using freshly ground coffee, a fine to medium grind will yield best results.

   Using the Coffee Maker (cont.)

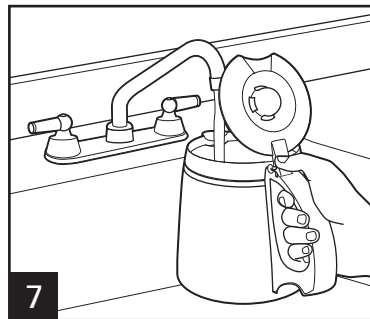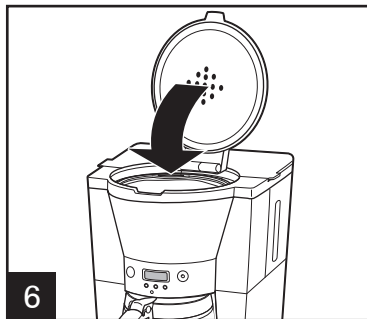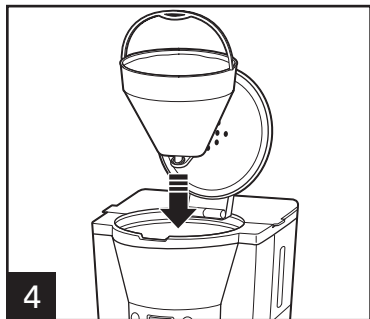

   NOTE: The filter holder will only fit one way into the filter holder well. The plastic handle should fold towards you when the filter holder is placed properly in the filter holder well.

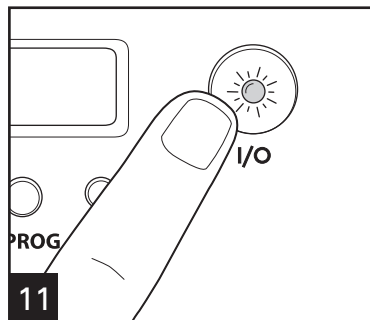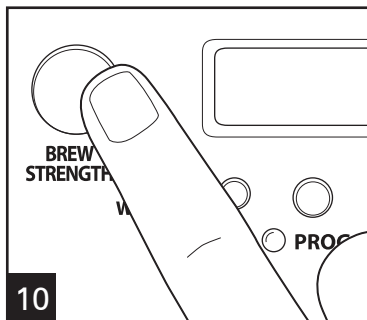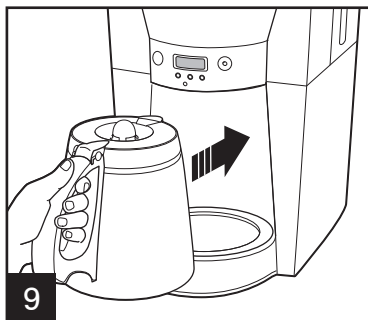

NOTE: When filling the water reservoir, using a carafe other than the one intended for this product may cause overflow. Use only the carafe supplied with your unit or its exact replacement.

 
 
When setting coffee strength, the "Regular" setting will make standard-strength coffee. To make stronger coffee, press the **BREW STRENGTH** button to select desired setting. Over time, you will be able to determine the best ratio of water, coffee grinds, and brew options you prefer. Press the **ON/OFF (I/O)** button to start the coffee maker.

Using the Coffee Maker (cont.)

PAUSE AND SERVE:

To serve coffee during the brewing cycle, remove carafe and pour a cup. By removing the carafe, the flow of coffee from the bottom of the filter basket will stop.

⚠ WARNING Burn Hazard. The carafe must be replaced within 20 seconds of being removed to prevent overflow.

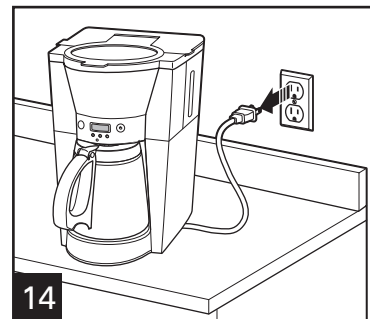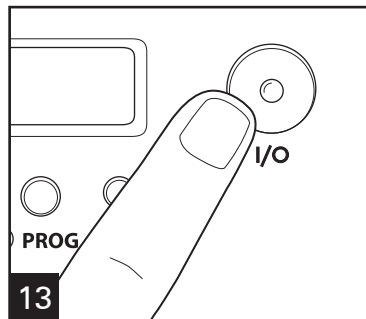


Press the ON/OFF (I/O) button again to turn the unit off.

NOTE: Thermal carafe models shut off immediately after finishing brewing.


Tips for Best-Tasting Coffee

- All coffees are made from either arabica beans or robusta beans, or some combination of both. Arabica beans are slightly more expensive, but tend to produce better-tasting coffee.
- Ground coffee will become stale much faster than whole beans. If buying preground coffee, choose a package with the latest expiration date or a smaller quantity.
- If grinding whole beans, set your coffee grinder on a fine/medium grind. This will yield the best-tasting grounds. Try to use freshly ground coffee within about a week of grinding.
- Using a water filter, filtered water, or bottled water will yield better-tasting coffee than tap water.
- Use approximately 1 tablespoon (5g) of grounds for each cup of coffee being made. To avoid overflow, use slightly less grounds (3/4 tablespoon [3.75g]) when brewing decaf or flavored coffees. Also, be aware that using coffee that is ground too finely may also cause the filter basket to overflow.
- Make sure your coffeemaker is clean. See "Care and Cleaning" section.


 
How to Make Iced Coffee (For Thermal Carafe models only)

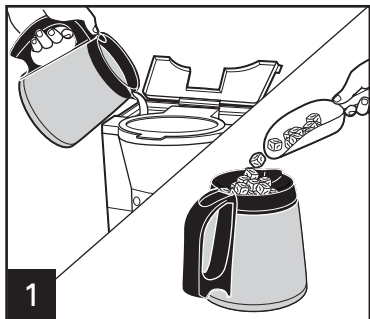



 
1 Fill water reservoir to a maximum of 5 cups and thermal carafe with ice to just below inside rim.

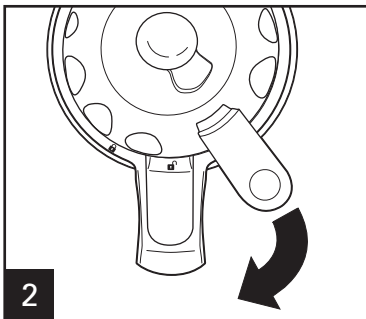

  2 Align with open lock and twist to lock in place.

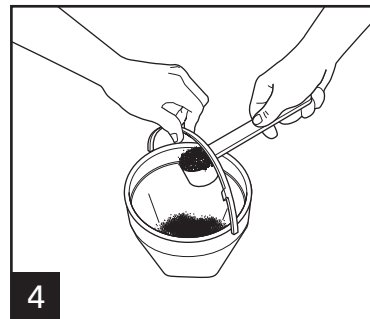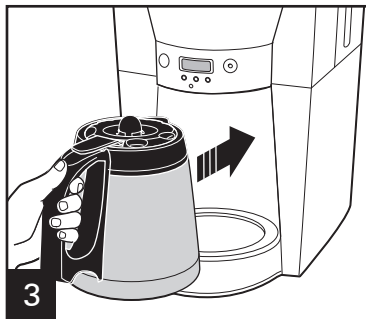

   
4 Brew double-strength coffee for iced coffee. For a full pot, use 10 scoops. For decaf and flavored coffees, use slightly less to prevent overflow.

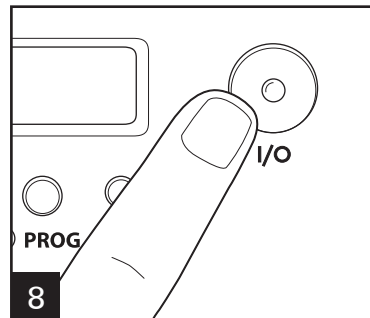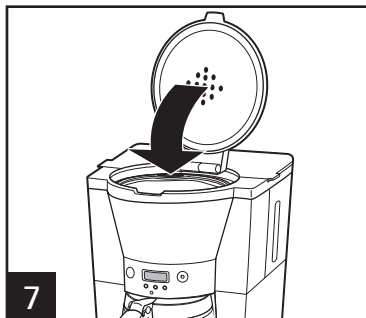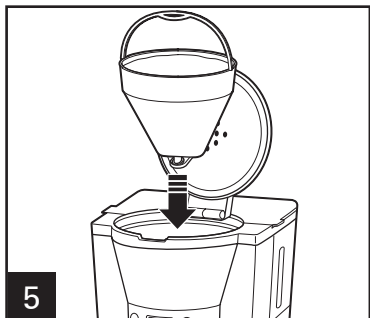


NOTE: The filter holder will only fit one way into the filter holder well. The plastic handle should fold towards you when the filter holder is placed properly in the filter holder well.

Press the ON/OFF (I/O) button to start the coffee maker.

 
Programming Auto Brew

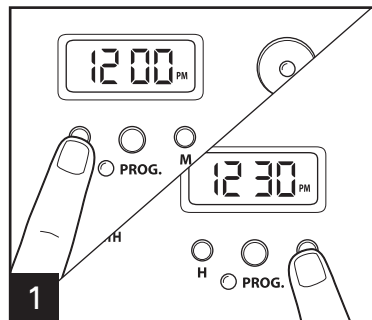

 
1 To set the time of day, first press the **H** (hour) button to set current hour; then press the **M** (minute) button until you reach the correct time.

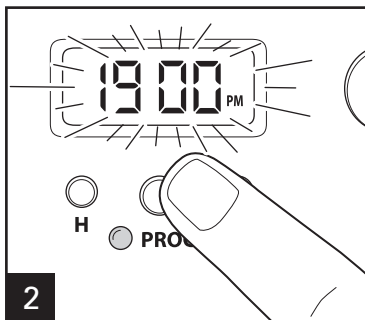

 2 To program the Auto Brew, press and hold the **PROG** (program) button until the display begins to flash.

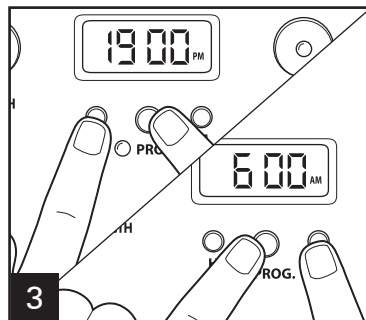

 
3 Then, while holding down the **PROG** button, press the **H** and **M** buttons until the desired Auto Brew time is reached.

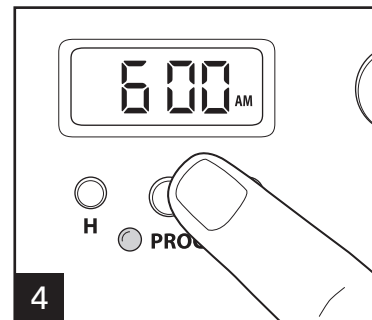


4 Press and release the **PROG** button again to set the Auto Brew. Do not hold the button down. Auto Brew is now set.

Cleaning With Vinegar

 
⚠ WARNING Electrical Shock Hazard. Disconnect power before cleaning the outside of the coffee maker. Do not immerse cord, plug, or base in any liquid.

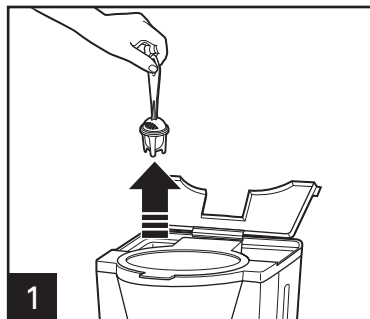


 
1
If your coffee maker has a water filter, remove prior to cleaning.

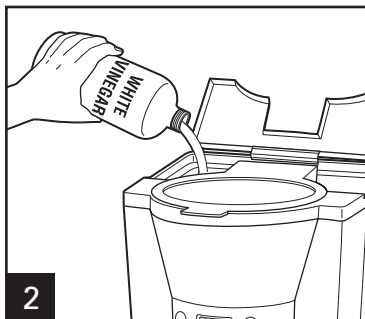

 
2
Pour 1 pint (2 cups/473 ml) vinegar into water reservoir.

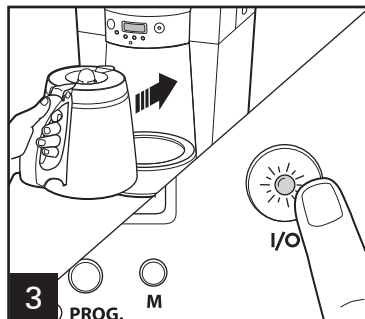

  3
Press ON (I). Press OFF (O) after 20 seconds and wait 30 minutes. Press ON (I). Press OFF (O) when finished. When cool, empty the carafe.

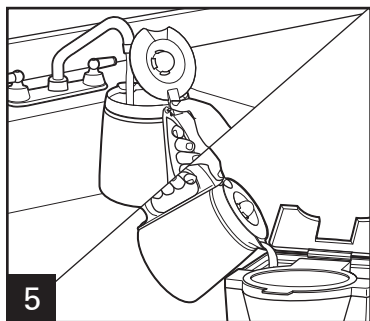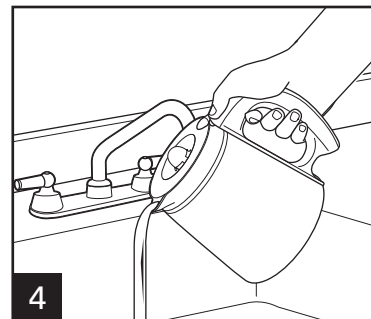

 5
Run 2–3 more brew cycles with CLEAN WATER only. Allow to cool between cycles.

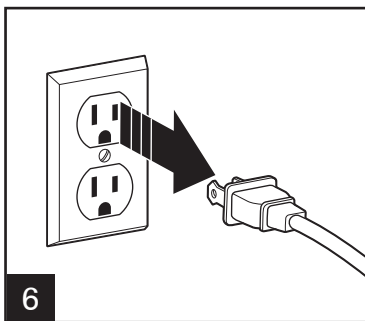

6
Unplug.



7



DO NOT use the "SANI" setting when washing in the dishwasher. "SANI" cycle temperatures could damage your product.

Troubleshooting

PROBLEM	PROBABLE CAUSE/SOLUTION
Brew basket overflows or coffee brews slowly.	• Excessive amounts of ground coffee. • Decaffeinated and/or coffee ground too finely can cause overflow. Use slightly less grounds when brewing decaffeinated, flavored, or finely ground coffee. Or use medium ground coffee. • Coffeemaker needs cleaning. If using a paper filter: • Coffee grounds between paper filter and brew basket. • Paper filter not open and in proper position. • Rinse brew basket before inserting paper filter so the edges will remain pressed against the sides of the basket. • Poor-quality paper filter.
Coffee tastes bad.	• Coffeemaker needs cleaning. • Coffee ground too coarsely or too finely. Use medium ground coffee. • Coffee-to-water ratio unbalanced. Adjust for personal preference. • Poor coffee quality and freshness. • Poor water quality (use filtered or bottled water).
Coffee not brewing or unit will not turn on.	• Water reservoir is empty. • Unit is unplugged. • Power outage. • Power surge. Unplug; then plug the unit back in. • Clock requires reset after power outage.

重要安全说明

当使用电器时，应始终遵守基本的安全防范措施，以减少火灾、触电和/或人身伤害的风险，包括以下内容：

1. 阅读所有相关说明。
2. 本电器不适合以下人群（包括儿童）使用：行动不便者、精神或智商缺陷者、缺少经验和常识者，除非他们在监护人的密切监督和指导下使用，以确保安全。
3. 当电器由儿童使用，或在其附近使用时，应予以密切监护。请勿将本电器用于儿童玩耍。
4. 请勿接触设备热表面。请使用把手或者旋钮。触摸烫热部件或溢出的热液体会导致灼伤，所以必须小心。
5. 为了防止触电，请勿将电源线、插头或咖啡机浸入水或其他液体中。
6. 咖啡机或时钟不使用以及清洁前，请从插座中拔出插头。安装或拆解部件和清洁本电器前，请先将其冷却。
7. 咖啡机必须在远离柜台边缘的平面上操作，以防意外倾翻。
8. 在下列情况下，请勿使用本电器：电源线或插头破损、本机出现故障、本机跌落或已经出现任何形式的损坏。电源线更换和维修必须由制造商、维修代理商或同等资质的人员进行，以避免险情。请拨打我们的客服电话，咨询有关电器检查、修理或调整的相关信息。
9. 使用非本电器制造商推荐的配套附件有可能造成危害。
10. 请仅使用本机随带的咖啡壶。
11. 请勿在室外使用。
12. 请勿将电源线悬挂在桌子或柜台边缘，或接触包括炉子在内的热表面。
13. 冲泡期间或倾倒咖啡时，确保盖子已盖牢。请勿用力将盖子盖到咖啡壶上。
14. 请勿将咖啡机置于热燃气、电炉、热烤箱之上或附近。
15. 若要断开咖啡机的电源，请将控制装置转到**关**位置；然后从壁装电源插座上拔下插头。
16. **警告!**为减少火灾或触电危险，请勿取下底盖。内部无用户可自行维修的部件。应仅由授权的维修人员进行修理。
17. 请勿将本电器用于非预期用途。
18. 本咖啡机的咖啡壶为专用目的。切勿用在炉头上或微波炉中。
19. 请勿使用破裂的咖啡壶，把手缺失或有松动时也请勿使用。
20. 咖啡机关闭后，保温板可以保温。

请妥善保管说明书！

其他用户安全信息

本电器建议于家庭使用。

 
本电器电源线的长度经过设计挑选，以减少长电源线缠绕或绊倒的危险。倘若需要更长的电源线，可使用经认证的电源延长线。电源延长线的额定功率必须等于或大于本电器的额定功率。电源

延长线使用时需特别注意，以防将其搭设在工作台或桌台上，造成儿童扯拉或绊倒他人。


为防电路过载，请勿在此电器的同一电路上使用其他高功率电器。

部件和功能

首次使用前：在带清洁剂的温水中清洗所有可拆卸部件。冲洗，然后晾干。使用饮用水冲泡一次，然后倒掉水。

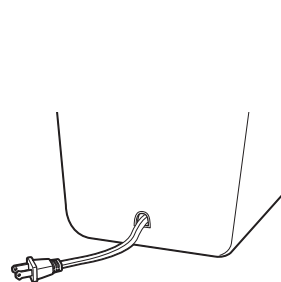

电源线收纳盒

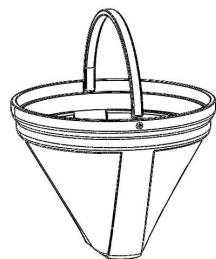 

金属过滤网



浓度



时 预约 分

时钟和控件




开/关



保温咖啡壶
(10 杯容量)

浓度选项	
	一般
	浓
	特浓

 过滤器座

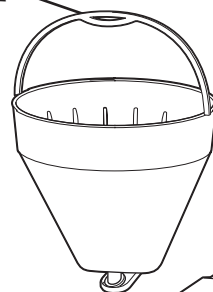


水箱

过滤器座支架

时钟和控件

 保温板



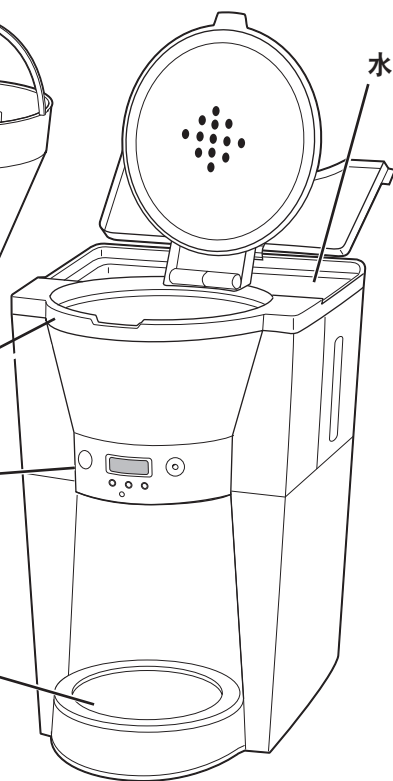


使用咖啡机

⚠ 警告 烫伤危险。

为避免热咖啡从滤篮中溢出：

   - 使用脱因咖啡时，请勿超过咖啡制造商建议的份量。
- 如果滤篮中咖啡溢出，请拔掉咖啡机的插头，在取下滤篮之前，让滤篮中的咖啡冷却。

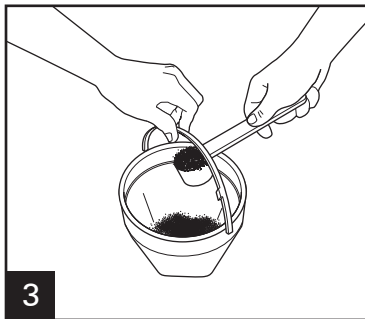
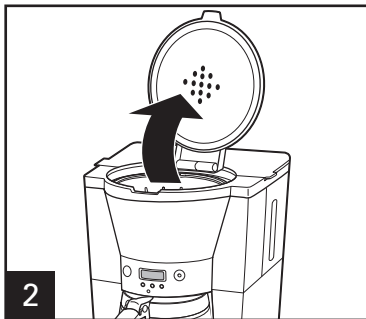
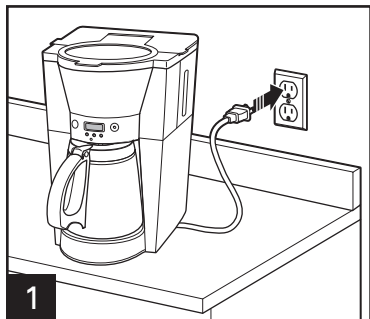


使用附件的金属过滤网，并确保正确放置到过滤器座中。若使用咖啡过滤纸（如图3），应沿着侧面和底部的卷曲坡度进行折叠。这将防止过滤纸在冲泡过程中破裂。




冲泡一杯咖啡，添加一平汤匙咖啡粉。在冲泡脱因咖啡或调味咖啡时使用稍少的咖啡粉——如果添加太多会导致混合料溢出。

小贴士：如果使用现磨的咖啡粉，细磨到中度研磨的咖啡粉冲泡出的咖啡味道最佳。

   使用咖啡机 (续)

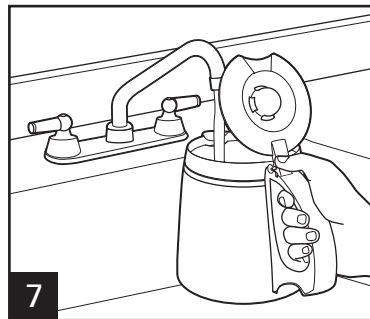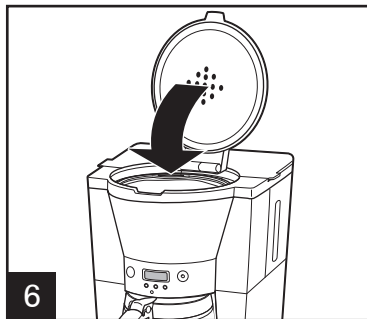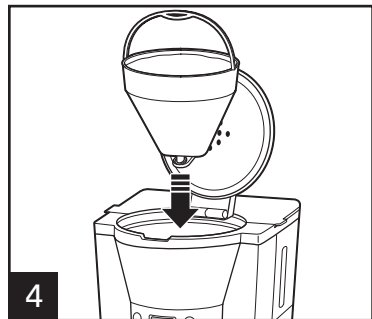

   注意：过滤器座仅可以按照一个方向插入到过滤器座孔中。过滤器座正确插入到滤器座孔中时，塑料手柄应朝您自身方向折叠。

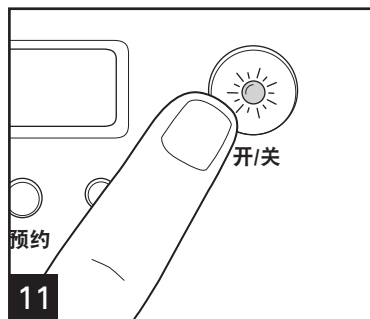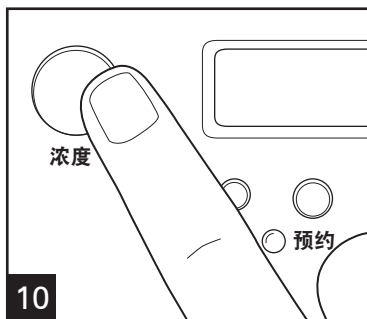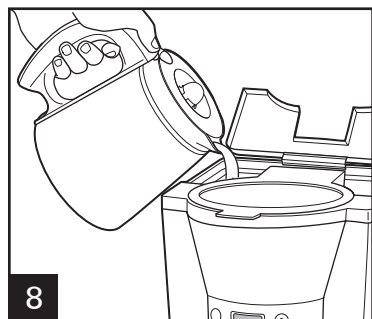

注意：当向水箱加水时，如使用非本机专用的咖啡壶可能会导致溢流。请仅使用本机随带的咖啡壶或其适用的替代品。

 
 
当设置咖啡浓度时，使用“一般”设置将冲泡出标准浓度的咖啡。如果要冲泡更浓的咖啡，请按“**浓度**”按钮以选择所需的设置。使用几次后，您很快可以掌握水、咖啡粉的添加比例以及您喜欢的冲泡选项设置。按“**开/关**”按钮以启动咖啡机。

使用咖啡机 (续)

暂停和使用:

冲泡期间如何饮用咖啡，取出咖啡壶倒出一杯即可。取出咖啡壶时，滤网底部立即停止流出咖啡。

⚠ 警告 烫伤危险。咖啡壶取出后的 20 秒内必须放回咖啡机上，以防止咖啡机中的咖啡溢流。

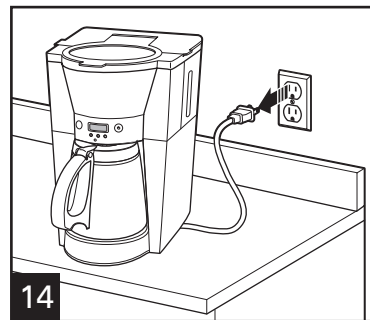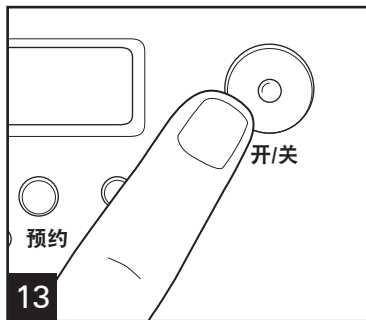

再次按开/关按钮以关闭本机。

 
注意：保温咖啡壶型号的机型在完成冲泡后立即关闭咖啡机。

最美味咖啡小贴士


- 所有咖啡都是用阿拉比卡咖啡豆或罗布斯塔咖啡豆，或两者某种组合进行冲泡。阿拉比卡咖啡豆稍微贵些，但冲泡的咖啡口味会更好。
- 使用咖啡豆比研磨咖啡粉冲泡出的咖啡保鲜更持久。如果购买预先研磨的咖啡粉，建议每次选购少量新上架的产品。
- 如果研磨全豆咖啡豆，请将咖啡研磨机设置为精细/中等研磨。这样可获得最佳口味的咖啡粉。建议使用最近一周研磨的新鲜研磨咖啡粉。

- 使用滤水器、过滤水或瓶装水比自来水可冲泡出更好口味的咖啡。
- 冲泡一杯咖啡约使用 1 汤匙（5 克）咖啡粉。为避免溢出，请在冲泡脱因咖啡或调味咖啡时使用稍少的咖啡粉（3/4 汤匙 [3.75 克]）。另外请注意，使用研磨太细的咖啡粉也可能导致滤网有咖啡溢出。
- 确保您的咖啡机清洁。请参见“保养与清洗”章节。


如何制作冰镇咖啡(仅适用于保温咖啡壶机型)

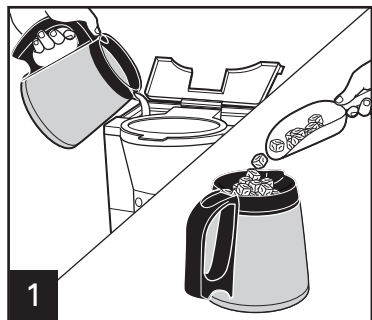

 
1 向水箱中添加最多 5 杯水，向保温咖啡壶内添加冰块，冰片量在内边缘以下位置。

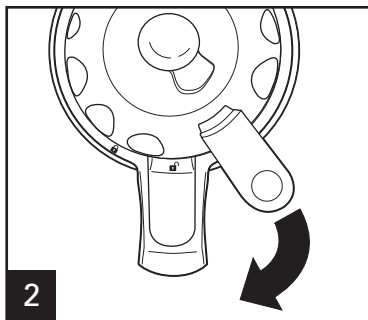

2 对准打开锁扣，按图示反向转动将其锁住。

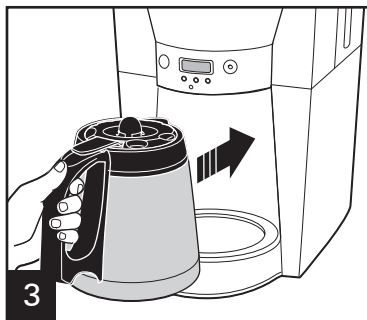 


3

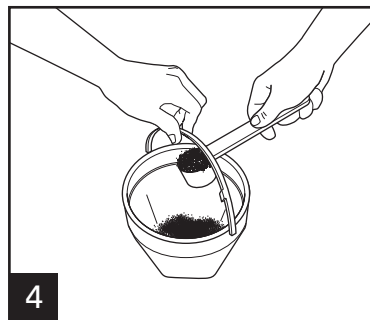 


4

 
冲泡双倍浓度的冰镇咖啡。一满槽，请使用 10 勺。为避免溢出，请在冲泡脱因咖啡或调味咖啡时使用稍少的咖啡粉

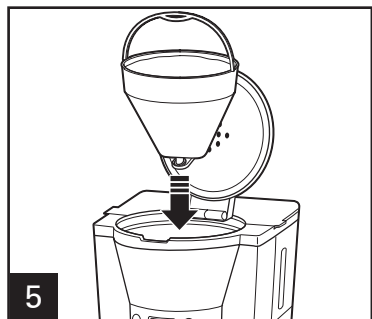

5

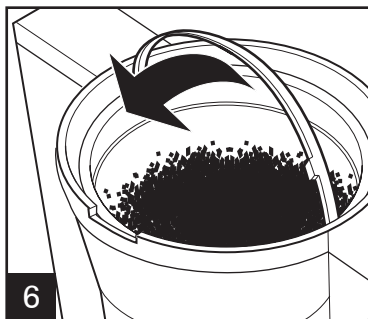 


6

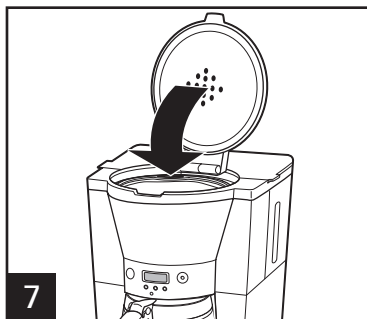 

7

 
注意：过滤器座仅可以按照一个方向插入到过滤器座孔中。过滤器座正确插入到滤器座孔中时，塑料手柄应朝您自身方向折叠。

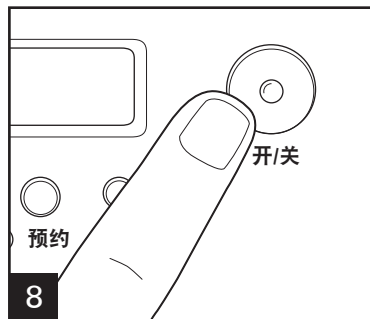


8

按开/关按钮以启动咖啡机。

 
设置自动冲泡

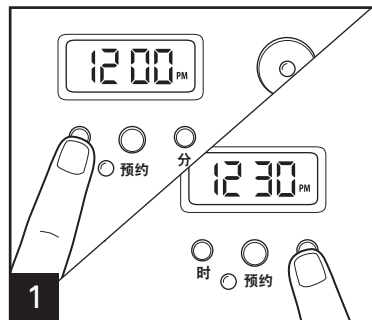

 
要设置时间，首先按**时**按钮设置当前时针；然后按**分**按钮直到达到正确的时间；

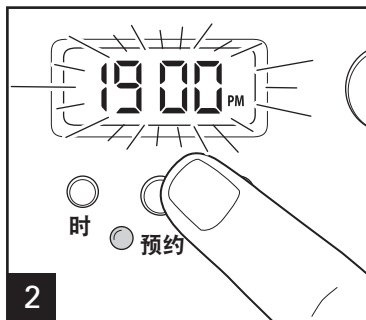

要设置自动冲泡，按住**预约**按钮直到显示开始闪烁。

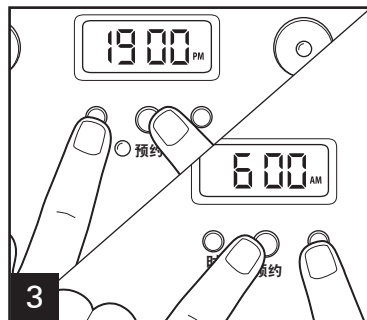 

 
然后，当按下**预约**按钮的同时，按**时**和**分**按钮直到所需的自动冲泡时间显示。

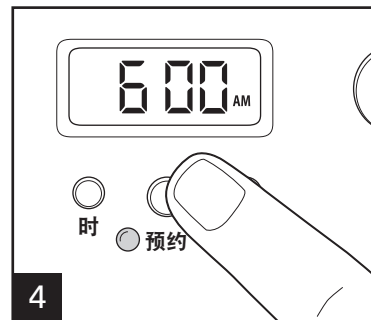


再次按下并松开**预约**按钮以设置自动冲泡。请勿按住不放该按钮。现在已设置好自动冲泡。

使用醋清洁

 
⚠ 警告 触电危险。清洁咖啡机外表面前，应断开电源连接。请勿将电源线、插头或底座浸入任何液体中。

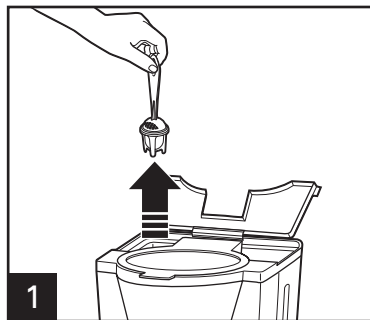



1 如果您的咖啡壶有滤水器，在清洗之前将其取出。

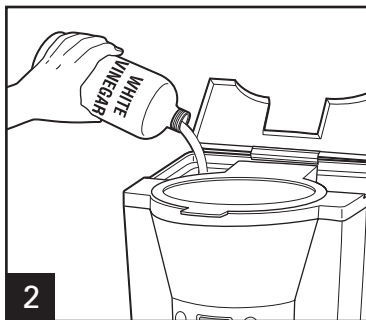 


2 将1品脱（2 杯/473 毫升）醋倒入水箱中。

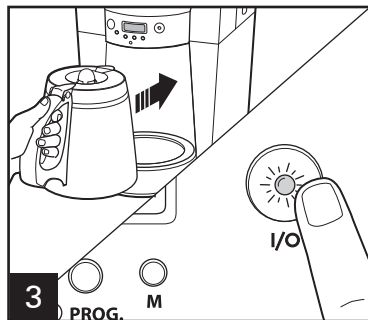 

  3 按**开**按钮。20 秒后按**关**按钮，然后等待 30 分钟。按**开**按钮。完成后按**关**按钮。当冷却后，倒空咖啡壶。

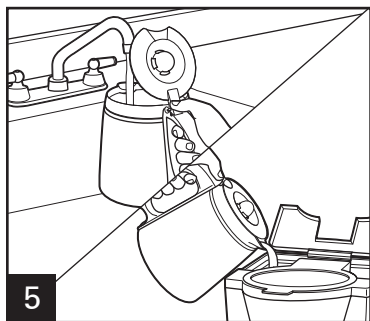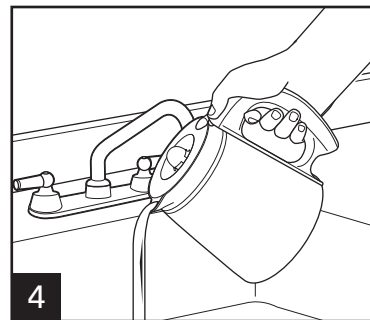

5 仅使用清洁水运行 2-3 个以上的冲泡循环。在两个相邻循环之间让其冷却。

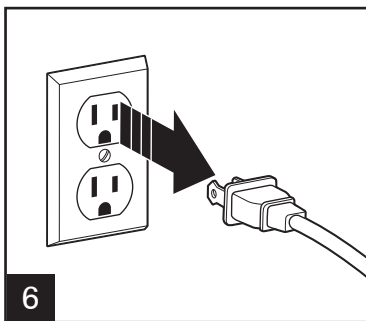 

6 拔掉电源插头。



7



可在洗碗机中安全清洗

在洗碗机中清洗时，请勿使用“SANI”设置。“SANI”循环温度会损坏本产品。金属过滤网也可以放在洗碗机中清洗。

故障排除

问题

冲泡篮有咖啡溢出或咖啡冲泡缓慢。

可能的原因/解决方案

- 咖啡粉量过多。
- 使用脱因和/或咖啡粉太细可能导致溢出。冲泡脱因咖啡、调味咖啡或精细研磨咖啡时，请使用稍少的咖啡粉。或使用中等研磨的咖啡粉。
- 咖啡机需要清洁。

如果使用滤纸：

- 咖啡粉位于滤纸和冲泡篮之间。
- 滤纸未打开且或放置不正确。
- 插入滤纸前冲洗冲泡篮因此使滤纸边缘紧贴着冲泡篮侧面。
- 滤纸质量不好。

咖啡味道不好。

- 咖啡机需要清洁。
- 咖啡粉太粗或太细。使用中等研磨的咖啡粉。
- 咖啡与水配比不平衡。根据个人喜好进行调整。
- 咖啡粉质量不好或不新鲜。
- 水质差（请使用过滤水或瓶装水）。

咖啡未冲泡或本机不开启。

- 水槽为空。
- 本机电源插头未插上。
- 断电。
- 电力过载。拔下本机插头然后再次插上。
- 断电后时钟需要重置。

食品接触材料信息



本产品符合相应食品安全国家标准要求，食品接触用材料及其执行标准的符合性信息说明如下：

序号	部件名称	材质	执行标准	备注
1	水箱盖，顶盖，内盖，外壶盖，出水口活动块，壶盖按钮，内壶盖，壶座，导水柱，水箱，过滤器座支架，螺丝帽，水嘴，水嘴盖，止漏阀，过滤器座，过滤器座提手，滤网支架，滤网提手，单向阀壳，水尺，单向阀珠	聚丙烯（丙烯均聚物）（PP）	GB 4806.1-2016 GB 4806.6-2016 GB 4806.7-2016	/
2	连管	1,3,5-三氧环己烷与 1,3-二氧环戊烷的聚合物（POM）		
3	壶盖密封圈，壶口密封圈，壶内盖密封圈，壶盖座密封圈 连管密封圈，止漏密封圈，硅胶管	乙烯基封端的二甲基甲基乙烯基（硅氧烷与聚硅氧烷）（硅胶）	GB 4806.1-2016 GB 4806.11-2016	/
4	自攻螺钉，咖啡滤网，壶盖弹簧，止漏阀弹簧，不锈钢壶	06Cr19Ni10 (SUS304)	GB4806.1-2016 GB4806.9-2016	/
5	电热管	铝合金（6063）		

注：特殊使用说明：请严格遵照说明书及产品所带附件资料使用本产品。

产品中有害物质的名称及含量

Name and content of hazardous substances in product

部件名称 (Component name)	有害物质(hazardous substance)					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr(VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
线路板(PCBA)	X	O	O	O	O	O
电源线(Power Cord)	X	O	O	O	O	O

本表格依据 SJ/T 11364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

Indicates that the said hazardous substance contained in all the homogeneous materials for this component is below the limit requirement in GB/T 26572.

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。这是由于目前技术或经济等的原因暂时无法实现替代。

Indicates that the said hazardous substance contained in at least one of the homogeneous materials used for this component is above the limit requirement in GB/T 26572. Due to technological and/ or economic reasons, these hazardous substances cannot be easily replaced at this time.



这是环保使用标志。标志内的数字代表在正常使用状态下，产品的环保使用推荐年限。

This is the logo of environmental protection use. The number inside indicates the environmental protection use recommended period (Year) of product in normal use.

Model/型号:
46896-CN

Type/类别:
A75

Rating/规格:
220-240V~, 50-60Hz, 860-1025W

制造商: 汉密尔顿海滩电器(深圳)有限公司
地址: 深圳市福田区深南西路车公庙工业区天安数码时代大厦主楼 1306-1308、1309-1311 单元
本产品执行标准: GB4706.1-2005, GB4706.19-2008

以上内容如有改动, 恕不预先通知



添加官方微博 微信
开启美食人生