



USE & CARE GUIDE

---

### Welcome

Thank you for your purchase of this Wolf Gourmet product. We look forward to being part of your kitchen for years to come. Wolf is a third-generation family-owned company that has a personal stake in the preparation of your food. With family ownership comes a great attention to detail and an uncompromising dedication to creating exceptional products. Wolf built its business and reputation on helping home cooks to achieve the best results possible. With Wolf Gourmet's precise control, wake up to coffee that provides consistently smooth and balanced flavour.



## Contents

- 4** Safety Precautions
- 6** Wolf Gourmet Coffee System  
Parts and Features
- 10** Getting Started
- 16** Care Recommendations
- 18** Troubleshooting
- 20** Wolf Gourmet Warranty

## Register Your Product

We strongly encourage you to register your Wolf Gourmet appliance. It is important to us that you get the most out of your products.

By registering, you will:

- Become a Wolf Gourmet culinary insider.
- Have ongoing support from Wolf Gourmet.
- Activate your warranty and record your purchase.
- Be alerted to any service updates.
- Receive occasional emails to help you maintain and enjoy your appliances.

To register, visit [wolfgourmet.com/registration](http://wolfgourmet.com/registration).

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- Read all instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is required when children clean the coffee maker. User maintenance must not be carried out by children.
- Do not touch hot surfaces. Use the handles or knobs provided. Care must be taken as burns can occur from touching hot parts or from spilled, hot liquid.
- To protect against electric shocks, do not place the lead, plug or coffee system in water or any other liquid.
- Unplug from the socket when either the coffee system or the clock is not in use and before cleaning. Allow to cool before fitting or removing parts and before cleaning the appliance.
- The coffee system must be used on a flat surface away from the edge of the counter to prevent accidental tipping.
- Do not operate any appliance with a damaged power lead or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Power lead replacement and repairs must be conducted by the manufacturer, its service agent or similarly qualified persons in order to avoid creating a hazard. Call the customer service number provided for information on examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- Only use the jug provided with the appliance.
- Do not use outdoors.
- Do not let the lead hang over edge of the table or counter, or touch hot surfaces, including the hob.
- The jug is designed for use with this coffee system. It must never be used on a hob or in a microwave oven.
- Do not use a jug with a loose or weakened handle.
- Do not clean the jug with cleansers, steel wool pads or other abrasive materials.
- Make certain that the jug's lid is securely in place during the brew cycle and when pouring coffee. Do not use force when placing the lid on the jug.

## **IMPORTANT SAFEGUARDS continued**

- Do not place coffee system on or near a hot gas or electric burner or in a heated oven.
- To disconnect coffee system, turn controls to OFF. Remove plug from wall socket.
- **WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover. There are no user-serviceable parts inside. Repairs should be made by authorised service personnel only.
- Do not use appliance for anything other than intended use.
- **UK Models ONLY: The UK plug** is provided with a 13-amp fuse approved by ASTA to B.S. 1362. If you need a replacement fuse carrier, it must be replaced with the same colour-coded carrier with the same markings. Fuse covers and carriers can be obtained from approved service agents.
- Do not place coffee maker in a cabinet when in use.

## **SAVE THESE INSTRUCTIONS**

### **Other Consumer Safety Information**

**This appliance is intended to be used in household and similar environments such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential-type environments; and bed and breakfast type environments.**

**⚠ WARNING** **Electric Shock Hazard:** This appliance is provided with an earthed (3-prong) plug to reduce the risk of electric shock. Do not defeat the safety purpose of the plug by modifying it in any way or by using an adapter.

The length of the lead used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer lead. If a longer lead is necessary, an approved extension lead may be used. The electrical rating of the extension lead must be equal to or greater than the rating of the appliance. The extension lead must be an earthed, 3-wire lead. Care must be taken to arrange the extension lead so that it does not hang over the edge of the countertop or tabletop where it could be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit as this appliance.



#### **Recycling the Product at the End of Its Service Life**

The wheellie bin symbol marked on this appliance signifies that this equipment should be taken over by a selective collection system conforming to the WEEE Directive so that it can be either recycled or dismantled in order to reduce any impact to the environment. The user is responsible for returning the product to the appropriate collection facility, as specified by your local regulations. For additional information regarding applicable local laws, please contact the council facility and/or local distributor.

# Wolf Gourmet Coffee System Parts and Features

**Before first use:** Wash all removable parts in hot, soapy water. Rinse and dry. Brew one cycle in manual mode with water and discard this water.

## PARTS AND FEATURES

- |                              |                                        |
|------------------------------|----------------------------------------|
| <b>1</b> Water Reservoir Lid | <b>7</b> Brew Strength Knob            |
| <b>2</b> Water Filter Holder | <b>8</b> Time/Cups Knob                |
| <b>3</b> Water Filter        | <b>9</b> Thermal Jug                   |
| <b>4</b> Water Reservoir     | <b>10</b> Coffee Drawer Collector Tray |
| <b>5</b> Control Panel       | <b>11</b> Coffee Drawer                |
| <b>6</b> Mode Selector       | <b>12</b> Auto-Pause and Serve Valve   |
|                              | <b>13</b> Filter Basket with Handle    |




To order filter replacements and parts, visit [wolfgourmet.com](http://wolfgourmet.com)

Wolf Gourmet  
Coffee System


## Parts and Features

1. **Water Reservoir Lid:** The lid is used to keep dust and other contaminants out of the water in the water reservoir.
2. **Water Filter Holder:** Used to easily lift the water filter out of the water reservoir.
3. **Water Filter:** The water filter is used to reduce the taste of chlorine from your tap water.
4. **Water Reservoir:** The water reservoir is used to measure and transport the water from the tap to the coffee system.
5. **Control Panel:** Controls the functions of the coffee system. See description of icons and buttons on the following pages.
6. **Mode Selector:** Choose mode:  (Clean),  (Manual) or  (Accu-Brew).
7.  (Brew Strength) Knob: Controls the brew strength in Accu-Brew mode.
8.  (Time/Cups) Knob: Sets time in Clock or Programme mode. Sets cups in Accu-Brew mode.
9. **Thermal Jug:** Keeps brewed coffee warm for 1 hour. See images below for how to remove and replace jug lid.

### TO REMOVE LID:

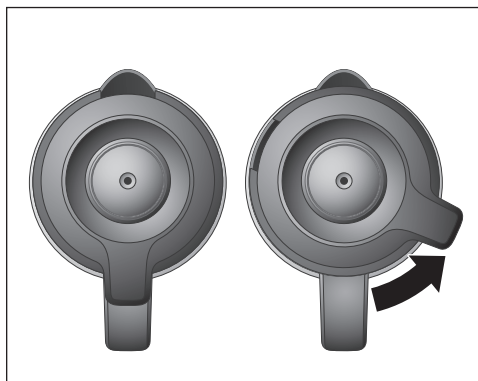





### TO REPLACE LID:

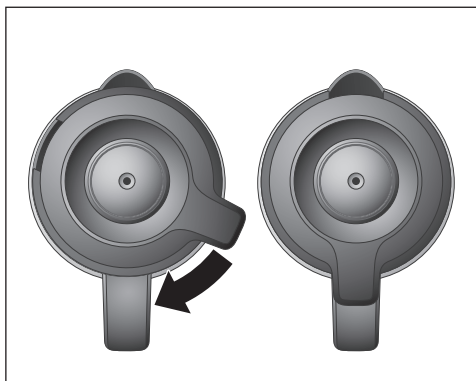

10. **Coffee Drawer Collector Tray:** Removable part that allows user to remove any grounds or water that may have spilled into coffee drawer. Remove tape before first use.
11. **Coffee Drawer:** Contains filter basket and coffee scales for Accu-Brew mode.
12. **Auto-Pause and Serve Valve:** Allows user to remove jug and pour a cup of coffee while the unit is still brewing. By removing the jug, the flow of coffee from the bottom of the filter basket will stop.
13. **Filter Basket with Handle:** Holds filter paper and coffee grounds for brewing.

# CONTROL PANEL DISPLAY ICONS

| Icon on the Display                                                                | Function                                                                                                                                                                            | Mode                |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
|    | Cups to Brew – Adjust from 4 to 10 cups using the Time/Cups Knob.                                                                                                                   | Accu-Brew           |
|    | Brew Strength – Adjust from ☉ (mild) to ☿ (strong) using the Brew Strength Knob.                                                                                                    | Accu-Brew           |
|    | Add Coffee – Icon appears next to the coffee scales, indicating more coffee needs to be added for the desired Brew Strength and Cups to Brew selected above.                        | Accu-Brew           |
|    | Scales Icon (steady) – Indicates the correct amount of coffee has been reached.                                                                                                     | Accu-Brew           |
|    | Scales Icon (flashing) – Too many coffee grounds added. Coffee can be brewed with extra coffee grounds, or coffee grounds can be removed to reach the correct amount.               | Accu-Brew           |
|    | Set Time of Day – Press ⌚ (Clock) button for more than 1/2 second. Use Time/Cups knob to adjust.                                                                                    | Manual<br>Accu-Brew |
|    | Time of Day                                                                                                                                                                         | Manual<br>Accu-Brew |
|    | Start Time – Press the ⌚ (Programme) button for more than 1/2 second to set the time of day when the coffee system should automatically start brewing.                              | Manual<br>Accu-Brew |
|   | Brewing – Coffee is brewing.                                                                                                                                                        | Manual<br>Accu-Brew |
|  | Ready – Coffee has finished brewing.                                                                                                                                                | Manual<br>Accu-Brew |
|  | Time Since Brew – Displays the time (up to 1 hour) that has elapsed since coffee finished brewing.                                                                                  | Manual<br>Accu-Brew |
|  | OFF – Displayed if ⏻ (Start/Stop) is pressed during the brewing cycle.                                                                                                              | Manual<br>Accu-Brew |
|  | Add Water – Water reservoir is empty.                                                                                                                                               | All                 |
|  | Clean – Reminds owner to clean unit every 300 cycles. Unit can be used normally if cleaning is not performed as recommended. Icon will also appear when Clean cycle is in progress. | All                 |
|  | Wolf Gourmet Logo – Unit is in standby mode.                                                                                                                                        | All                 |
|  | Water Filter – A reminder to change the water filter.                                                                                                                               | All                 |
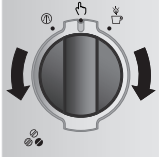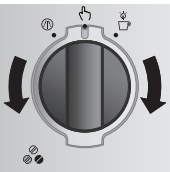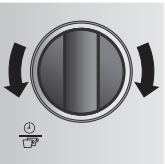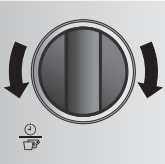
| CONTROL PANEL BUTTONS & KNOBS                                                      |                                                                                                                                                                                                                              |                                 |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|
| Button/Knob                                                                        | Function                                                                                                                                                                                                                     | Mode                            |
|    | Programme – Press and hold for more than 1/2 second to activate the Start Time function. Press and quickly release to toggle between enabling and disabling the Start Time function.                                         | Manual<br>Accu-Brew             |
|    | Start/Stop – Press to start or stop brewing.                                                                                                                                                                                 | All                             |
|    | Clock – Press and quickly release to toggle the clock display on/off. Press and hold for 1/2–2 seconds to activate Set Time of Day function. Press and hold for more than 2 seconds to toggle between 12- and 24-hour clock. | Manual<br>Accu-Brew             |
|    | Zero – Press and quickly release while coffee drawer is open to reset the coffee scales to zero.                                                                                                                             | Accu-Brew                       |
|    | Zero – Press and hold for more than 5 seconds to reset Water Filter icon.                                                                                                                                                    | Clean                           |
|    | Mode Selector – Turn to select operation mode.                                                                                                                                                                               | All                             |
|   | Brew Strength Knob – Turn clockwise to increase the strength of the brew. Turn anti-clockwise to reduce the strength of the brew.                                                                                            | Accu-Brew                       |
|  | Time – Turn knob clockwise to increase time. Turn anti-clockwise to go backwards in time.                                                                                                                                    | Clock or<br>Programme<br>Active |
|  | Cups – Turn knob clockwise to increase the number of cups. Turn anti-clockwise to decrease the number of cups.                                                                                                               | Accu-Brew                       |


## Getting Started

### **⚠ WARNING** Burn Hazard.

If a filter basket overflow occurs, unplug the coffee system and allow the coffee in the filter basket to cool before removing the filter basket. When using decaffeinated coffee, do not exceed the coffee manufacturer's recommended serving amount.

## Choosing a Brewing Mode

1. Manual mode allows you to use the coffee system like a traditional drip coffee maker. The Accu-Brew functions are disabled.
2. Accu-Brew mode allows you to set the number of cups and strength of the coffee you would like to brew. The coffee system enables the weighing scales in the coffee drawer to allow you to add the precise amount of coffee needed for the strength and cups you have selected.
3. Clean mode is used to clean your coffee system every 300 cycles.

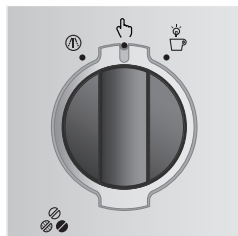

## Setting Time of Day for the First Time

1. Press the Clock button for more than 1/2 second. '12:00' will appear on the display. The clock digits will continue to flash until the time-setting procedure is complete.
2. Turn the Time/Cups knob clockwise to go forwards in time. Turn anti-clockwise to go backwards in time.
3. When you have finished setting the time, release the knob. After 5 seconds the clock will stop flashing and become solid.



## Turning the Clock Off

1. After the time has been set, the clock can be turned off and on by pressing the Clock button.

## GETTING STARTED

### Changing the Clock from 12-Hour to 24-Hour Format

1. After the time has been set, the clock can be toggled between 12- and 24-hour format by pressing and holding the Clock button for more than 2 seconds.

### Installing the Water Filter

1. Remove the filter pod from its packaging.
2. Soak the pod in a cup of fresh water for 15 minutes.
3. Install the filter pod in the water filter housing and close the housing until it snaps.
4. Place the water filter housing into the water reservoir.
5. After about 30 cycles, the display will show the Water Filter icon as a reminder that it is time to replace the water filter.
6. To reset the water filter reminder, turn the Mode Selector to Clean mode. Then, press and hold the Zero button for 5 seconds.



## GETTING STARTED

### Manual Brew Mode

#### **⚠ WARNING** Burn Hazard.

If a filter basket overflow occurs, unplug the coffee system and allow the coffee in the filter basket to cool before removing the filter basket. When using decaffeinated coffee, do not exceed the coffee manufacturer's recommended serving amount.

1. Turn the Mode Selector to Manual.
2. Lift the water reservoir upwards to remove it from the coffee system.
3. Remove the water reservoir lid and fill the reservoir with enough cold water to brew the desired number of cups of coffee.
4. Replace the water reservoir lid on the water reservoir. Re-install the water reservoir on the coffee system.
5. Fully open coffee drawer and insert a no. 4 filter paper cone into the filter basket.
6. Add the desired amount of coffee to the filter and close drawer.
7. Place jug with jug lid on base.

**NOTE:** For hotter coffee, before brewing, fill the jug with hot water and let it stand for 1 minute, before emptying the jug.

8. Press the Start/Stop button. The display will show the Brewing icon. When brewing is complete, the display will show the Ready icon and the coffee system will chime.
9. The display will then show the Time Since Brew icon to let you know how long the coffee has been in the jug. After 60 minutes the coffee system will return to standby mode. To remove this timer from the display, press the Clock button.

**NOTE: Empty jug before starting next brew cycle to avoid overflow.**




## GETTING STARTED

### Accu-Brew Mode

#### **⚠ WARNING** Burn Hazard.

If a filter basket overflow occurs, unplug the coffee system and allow the coffee in the filter basket to cool before removing the filter basket. When using decaffeinated coffee, do not exceed the coffee manufacturer's recommended serving amount.

1. Turn the Mode Selector to Accu-Brew.
2. Lift the water reservoir upwards to remove it from the coffee system.
3. Remove reservoir lid. Fill the reservoir with enough water for the number of cups that you want to brew. The unit will brew all of the water that you put in the tank.
4. Replace the water reservoir lid on the water reservoir. Re-install the water reservoir on the coffee system.
5. The default setting for Accu-Brew is 6 cups and a medium brew strength. If the default settings are changed, the coffee system will remember your last setting, even if the power is disconnected.
6. Set the number of cups to brew. This should match the volume of water added in step 3. Turn the Time/Cups knob clockwise to increase the number of cups. Turn it anti-clockwise to decrease the number of cups.
7. Set the desired strength. Turn the Brew Strength knob clockwise to increase the coffee strength. Turn anti-clockwise to decrease the coffee strength.
8. Fully open coffee drawer and insert a no. 4 filter paper cone into the filter basket.

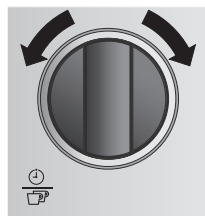


GETTING STARTED


9. Press the Zero button to reset the coffee scales to zero.  
The Add Coffee icon will flash next to the coffee scales.



10. Add coffee until the Scales icon is displayed.

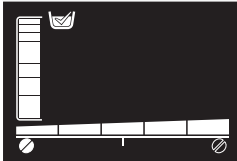

11. If too much coffee is added to the filter basket, the display will show flashing bars above the top of the scales. You can remove coffee until the Scales icon is displayed, or you can brew with the extra coffee.

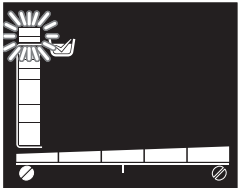

12. Close the coffee drawer. The Scales icon is not displayed when the drawer is closed.

13. Place jug with jug lid on base.

**For hotter coffee:** Before brewing, fill the jug with hot water and let it stand for 1 minute, before emptying it.

14. Press the Start/Stop button to begin brewing.



15. The display will show the Brewing icon.

16. When brewing is complete, the display will show the Ready icon and the coffee system will chime.



17. The display will then show the Time Since Brew icon to let you know how long the coffee has been in the jug. After 60 minutes the coffee system will return to standby mode. To remove this timer from the display, press the Clock button.



**NOTE: Empty jug before starting next brew cycle to avoid overflow.**

### Using the Programme Start Time Function

The Start Time function allows you to programme the coffee system to brew at a later time.

1. If you have not set the current time of day, please follow the steps shown in 'Setting the Time of Day for the First Time'.
2. Press and hold the Programme button for more than 1/2 second to activate the Set Start Time function. The Programme light will flash and the Programme icon will be displayed next to the clock digits.  
If a programmed start time has not been set previously, the default start time of --:-- will flash on the display.  
If a programmed start time has been set previously, the previous start time will flash on the display.
3. Turn the Time/Cups knob clockwise to go forwards in time. Turn anti-clockwise to go backwards in time.
4. When you have finished setting the time, release the knob. After 5 seconds, the clock will change to show the time of day and the Programme light will remain on.



5. If there is no water in the reservoir, the Add Water icon will display and the Programme light will not come on.
6. To turn off the Programme function, press the Programme button again for less than 1/2 second.



# Care Recommendations

**WARNING**

**Electric Shock Hazard:**  
**Do not immerse lead, plug or coffee maker in any liquid.**

Your coffee system should be cleaned regularly for best performance and a long life. Regular cleaning will also reduce the risk of fire.

## BEFORE CLEANING

Unplug the coffee system and allow it to cool down.

| CLEANING                     |                                                                                                                                                                                                                                                              |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control Panel Display        | Wipe with a slightly damp sponge. Protect display when cleaning any other surfaces.                                                                                                                                                                          |
| Stainless Steel Exterior     | Use a non-abrasive stainless steel cleaner and apply with a soft, lint-free cloth. To bring out the natural lustre, lightly wipe the surface with a damp microfibre cloth followed by a dry polishing cloth. Always follow the grain of the stainless steel. |
| Non-Stainless Steel Exterior | Wipe the outside of the coffee system with a damp cloth or spray with an all-purpose cleaner. Wipe clean with a lint-free cloth. Do not use abrasive cleaners or metal scouring pads.                                                                        |
| Thermal Jug                  | Allow to cool before washing. Hand-wash in warm, soapy water with a sponge or dishcloth. Do not fully submerge the jug in water.<br><br>Avoid using steel wool, steel scouring pads or harsh detergents.                                                     |
| Water Reservoir              | Hand-wash in warm, soapy water with a sponge, dishcloth or plastic scourer after each use.                                                                                                                                                                   |
| Filter Basket                | Hand-wash in warm, soapy water with a sponge, dishcloth or plastic scourer, or clean in a dishwasher after each use.                                                                                                                                         |

# Using the Clean Function

After 300 cycles, the Clean icon will appear on the display as a reminder to clean the inside of the coffee system. The coffee system will perform 3 stages of cleaning. Cycle 3 performs a 20-minute soaking cycle to help remove mineral deposits. Cycles 2 and 1 rinse the vinegar from the coffee system.

1. To prevent vinegar from getting into the water filter, remove the water filter from the reservoir.
2. Turn Mode Selector to the Clean position. Pour 177 ml (3/4 cup) of distilled vinegar into the water reservoir. Fill to the CLEAN line with cold water. Re-install water reservoir on the coffee system.
3. Press the Start/Stop button. The display will show the number 3 and start a timer for 20 minutes. During this time the coffee system will cycle the heater to help remove mineral deposits from inside it.



## CARE RECOMMENDATIONS

- At the end of the cycle, the display will show the Add Water icon and the number 2.

**NOTE: Make sure the jug is empty before starting Cycle 2.**



- Fill to the CLEAN line with cold water. Re-install water reservoir on the coffee system.



- Press the Start/Stop button. The display will show the number 2 and start a timer for 5 minutes. During this time the coffee system will send the water through the system as if brewing to remove the residual vinegar.



- At the end of the cycle the display will show the Add Water icon and the number 1.

**NOTE: Make sure the jug is empty before starting Cycle 1.**



- Fill to the CLEAN line with cold water. Re-install water reservoir on the coffee system.



- Press the Start/Stop button. The display will show the number 1 and start a timer for 5 minutes. During this time the coffee system will send the water through the system as if brewing to remove the residual vinegar.



- Empty the jug and replace the water filter in the water reservoir.

## Troubleshooting

### **LCD displays the Add Water icon.**

- Tank is empty.
- Water level in the tank is lower than the height of the float. Minimum water level is 500 ml (2 cups) of water.
- Float may be stuck. Remove reservoir and shake it.

### **LCD displays the Add Coffee icon.**

- Ensure filter basket is in place and coffee drawer is fully closed.
- Remove coffee from filter basket, leaving the basket in the drawer. Reset scales to zero, then add coffee.

### **Coffee scales always display weight in Accu-Brew mode.**

- Add filter basket and filter paper to the coffee drawer without any coffee. Reset scales to zero, then add coffee. Scales must always be reset to zero with filter basket in place before adding coffee for accurate readings.

### **LCD displays the Water Filter icon.**

- Water filter needs to be replaced. See 'Wolf Gourmet Coffee System Parts and Features' page for instructions on how to order a new filter.
- The water filter icon will not disappear from the display until the counter is reset. To reset the water filter reminder, turn the Mode Selector to Clean mode, and hold down the Zero button until the water filter icon disappears.

### **Coffee is not dispensing.**

- Ensure jug is in place.
- Overflow protection may have been activated. If a lot of coffee has been added and the filter basket is about to overflow, the scales will detect this and the heater will turn off to allow the basket to drain. Once the coffee has drained to a certain level, the heater will turn back on and finish brewing. The unit will continue to display the Brewing icon while this feature is activated.

### **Coffee tastes unpleasant.**

- Too much or too little water was added.
- Too much or too little coffee was added.
- Poor quality or freshness of coffee.
- Poor water quality. Use filtered or bottled water for a better flavour.

## TROUBLESHOOTING

### **Coffee is overflowing from filter basket.**

- Too much coffee was added. Recommended maximum amount is 82 g of coffee.
- Decaffeinated or finely ground coffee is more likely to cause an overflow. Use slightly less when brewing these types of coffee.
- Coffee grounds may have fallen between the filter paper and filter basket when coffee was being added.
- Filter paper not open fully or in the proper position. Always fold the filter paper at the seams to ensure filter fits properly. Then, rinse filter basket before inserting filter paper. This makes it more likely that the edges of the filter paper will remain pressed against the side of the basket.
- Poor-quality filter paper.

### **Longer than normal brew time.**

- Too much water was added (2.4 litres [10 cups] max).
- Coffee system needs cleaning.
- Overflow protection may have been activated during brewing. If a lot of coffee has been added and the filter basket is about to overflow, the scales will detect this and the heater will turn off to allow the basket to drain. Once the coffee has drained to a certain level, the heater will turn back on and finish brewing. This may increase the brewing time.

### **Coffee overflows from jug.**

- Too much water was added (2.4 litres [10 cups] max).
- Jug has not been emptied since the last use.

# Wolf Gourmet Residential Limited Warranty

## FOR RESIDENTIAL USE

### APPLIANCES, COOKWARE AND CUTLERY PURCHASED AND USED OUTSIDE OF MEXICO

To obtain a copy of the written warranty for your Wolf Gourmet product, please visit our website at [wolfgourmet.com/warranty](http://wolfgourmet.com/warranty).



Distributed by:

Sub-Zero Wolf Ltd.

0208 418 3800 | [subzero-wolf.co.uk](http://subzero-wolf.co.uk)

9 The Street, Heybridge, Maldon, CM9 4XB

840319000 04/2019