

READ BEFORE USE

Visit www.hamiltonbeach.com for our complete line of products and Use and Care Guides — as well as delicious recipes, tips, and to register your product online.

Questions
Please call us — our friendly associates are ready to help.
USA: 1.800.851.8900



5-Speed Hand Mixer



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
5. To protect against risk of electrical shock, do not put cord, plug, or mixer body in water or other liquid.
6. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
7. Avoid contacting moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to reduce risk of injury to persons and/or damage to mixer.
8. Remove beaters from mixer before washing.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
10. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
11. The use of attachments not recommended or sold by the appliance manufacturer for use with this model may cause fire, electric shock, or injury.
12. Do not use outdoors.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Check that control is off before plugging cord into wall outlet. To disconnect, turn control to OFF (O) and then remove plug from wall outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
15. Do not use appliance for other than intended purpose.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

This appliance is intended for household use only.

⚠ WARNING Electrical Shock Hazard: This appliance is provided with a polarized plug (one wide blade) to reduce the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the

extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

⚠ CAUTION Moving Parts Hazard.

To reduce the risk of personal injury, always unplug mixer before inserting or removing beaters.

WATTAGE/PEAK POWER INFORMATION

The marked rating of the hand mixer is determined by Underwriters Laboratories as the maximum stabilized power consumption of the hand mixer at high speed under a loaded condition.

Peak power is an average of the maximum wattage a hand mixer may consume during initial operation at high speed.

Parts and Features

To order parts:


US: 1.800.851.8900

www.hamiltonbeach.com


Canada: 1.800.267.2826

Mexico: 01 800 71 16 100


Before first use: Wash Beaters, Whisk, and Dough Hooks in hot, soapy water. Rinse and dry.

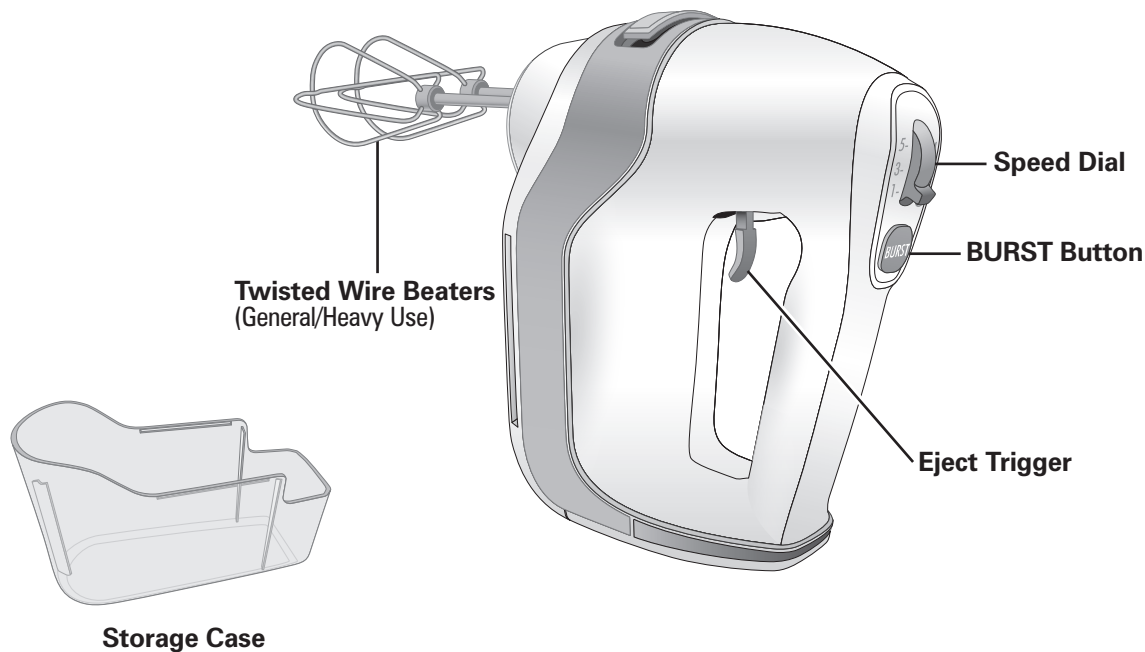


How to Use Hand Mixer

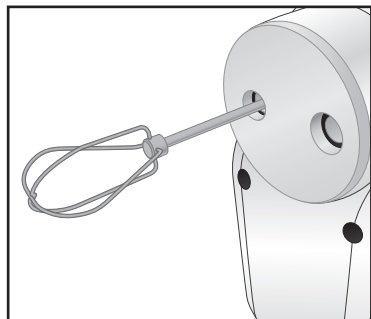


1. Make sure Mixer is unplugged and speed dial is set to **0** (OFF). Insert Beater with collar into larger opening on mixer bottom and insert remaining Beater without collar into smaller opening. Push and click into place. Whisk can be added to either opening. Plug into outlet. Place Beaters into bowl.

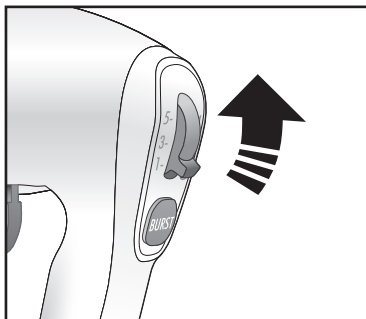

2. Move the Speed Dial to desired speed, starting at 1 and increasing to a higher speed as desired.

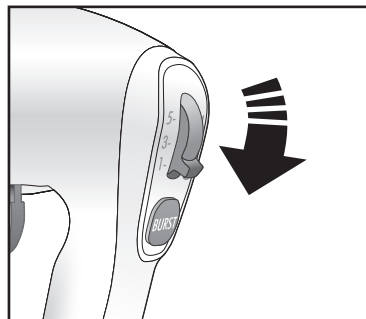

3. When finished mixing, move the Speed Dial to **0** (OFF) and unplug Mixer.

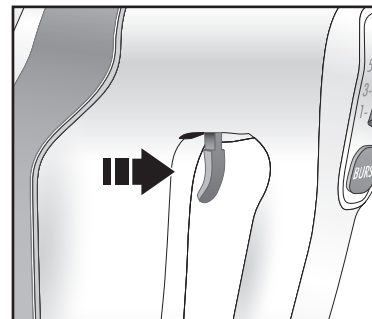


4. **CAUTION** Always unplug mixer before attempting to remove beaters. Squeeze trigger to eject beaters.


Cookie Mixing Guide:

- Cookie dough is one of the thickest doughs to mix.
- Use a large mixing bowl to spread out ingredients for easier mixing.
- Have butter or margarine at room temperature.
- Add flour 1 cup (237 ml) at a time, thoroughly mixing after each addition.


Additional Features

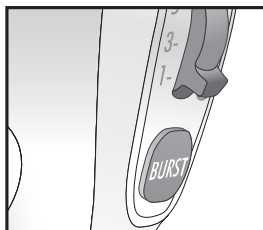

BURST Function – Press and hold down the BURST Button for additional power at any speed.

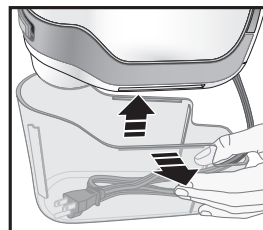

Storage Case – To release Mixer from case, pull outward at corner of case opening and rotate handle of Mixer in opposite direction.

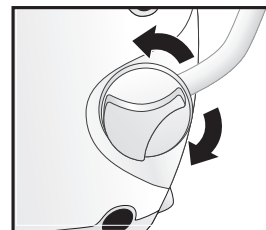

Swivel Cord Lock – For convenience, turn the swivel cord lock to the right or left until it clicks into place. To unlock, turn swivel cord lock in opposite direction.

How to Use Hand Mixer (cont.)

General Mixing Guide

The following mixing guide is a suggestion for selecting mixing speeds for 5-speed mixers. Begin on speed 1 and increase to desired speed depending on the recipe consistency.

SPEED	FUNCTION	
○	OFF	Must be ○ (OFF) to eject Beaters
1	Stirring	Mixing in dry ingredients or liquids
2	Mixing	Combining most packaged cake mixes
3	Beating	Beating heavy batters and making frosting
4	Creaming	Beating butter and sugar for cookie doughs
5	Whipping	Incorporating air into egg whites for meringue and whipping cream using the Whisk

Care and Cleaning

⚠ WARNING Electrical Shock Hazard.

Disconnect power before cleaning. Do not immerse mixer, cord, or plug in any liquid.

1. Always unplug Mixer from electrical outlet and eject the attachments before cleaning.
2. Twisted Wire Beaters and Whisk attachments are dishwasher-safe or wash in hot, soapy water; rinse and dry.
3. Wipe the Mixer body and cord with a clean, damp cloth.

NOTE: Do not use abrasive cleaners or scouring pads. To reduce the risk of electrical shock, do not immerse the Mixer body in water at any time.

Troubleshooting

The motor works very slowly.

- Too many ingredients in the bowl. Remove some ingredients and restart.
- The Speed Dial is set too low. Set to higher speed.

The motor does not start.

- The power plug is not plugged into the wall outlet, or the circuit breaker is tripped. Plug into outlet and check function of outlet.
- The Hand Mixer is not turned on. Move Speed Dial to desired speed.
- The motor is damaged. Call our customer service department.

Notes

Notes

Hamilton Beach 5-Year Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

Hamilton Beach Brands, Inc.
4421 Waterfront Drive
Glen Allen
Virginia 23060
USA