

"How To Steam Iron" Continued

steam range. Allow 2 minutes for the iron to reach desired temperature.

6. The iron now is ready for steam ironing.

Water

Please use ordinary tap water. If you have extremely hard water alternate between tap water and distilled water for use in the iron.

*The following features are available on selected models:
(They may not be included on the model you have.)*

Spray

If your iron has the spray feature, check the water window to make sure there is water in the water tank. Push the spray button to dampen fabric for easier ironing.


Automatic Shutoff Indicator Light

The Ultra-Ease Iron will shutoff 1 hour after it has been plugged in whether or not the temperature control dial is On or Off. The indicator light will go out when the automatic shutoff has been activated and the iron will no longer heat. To deactivate the shutoff, unplug the iron and plug it back in.

IT IS A GOOD SAFETY PRACTICE TO ALWAYS UNPLUG THE IRON WHEN NOT IN USE.

Blast of Steam

During steam ironing, use the blast of steam for stubborn wrinkles. Check the water window to make sure there is water in the water tank. Turn the spray/blast button to BLAST and then push down the button for a blast of steam.

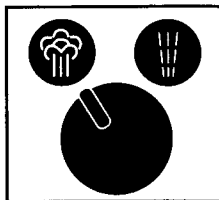

Ironing Tips & Techniques

Sort items to be ironed according to the temperature settings they require. Begin ironing at the lower settings and increase temperature as needed. If in doubt about what temperature setting to use for any fabric, please start at lower temperatures and test on an inside seam allowance.

How To Care For Your Iron

1. Turn the temperature control dial to OFF, unplug and let cool. The iron takes longer to cool down than it does to heat up.
2. To empty water from the iron, slowly tilt the pointed end of the iron down over a sink. The water will run out of the water tank opening.
3. Wrap cord loosely around the cord wrap and store iron in an upright position. Do not store the iron laying flat on the soleplate.

Caring For The Soleplate

1. Never iron over zippers, pins, metal rivets or snaps as these may scratch the soleplate.
2. To clean the soleplate of occasional build-up, wipe with a sudsy cloth. Do not use abrasive cleansers or metal scouring pads.

ONE YEAR LIMITED WARRANTY

Hamilton Beach/Proctor-Silex, Inc. warrants this appliance to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, except as noted. There is no warranty with respect to the following which may be supplied with this appliance: glass parts, glass containers, cutter/strainer, and/or non-stick soleplate. This warranty does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed directions. HAMILTON BEACH/PROCTOR-SILEX, INC. DISCLAIMS ALL RESPONSIBILITY FOR CONSEQUENTIAL, INCIDENTAL, OR COMMERCIAL LOSSES CAUSED BY USE OF THIS APPLIANCE. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER ASSISTANCE HOT LINE in Washington, N.C. between 8:00 a.m. and 6:00 p.m., Eastern Time, Monday through Friday. (For faster service please have model number ready for operator to assist you.)

1-800-851-8900


This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.

HAMILTON BEACH PROCTOR-SILEX, INC.

Washington, North Carolina 27889

Use & Care

Ultra-Ease™ Irons

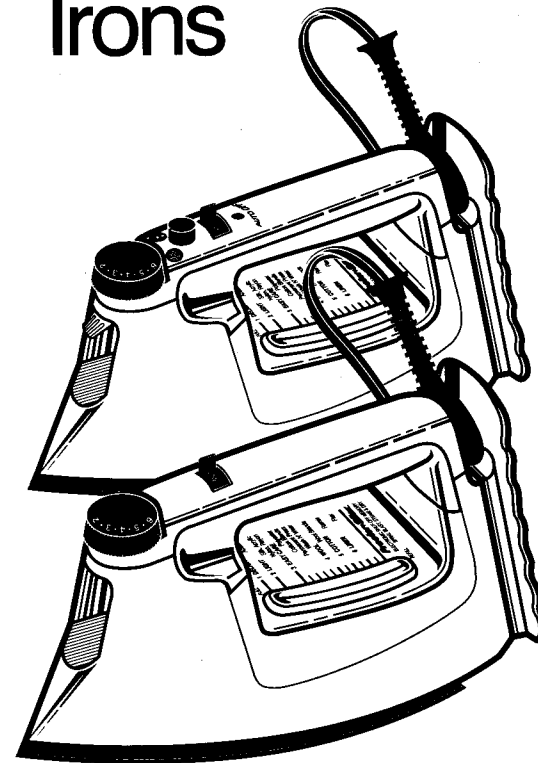

Customer Service Number

1-800-851-8900

(8:00 AM - 6:00 PM Eastern Time,
Monday-Friday)

**KEEP THIS NUMBER FOR FUTURE
REFERENCE!**

Proctor-Silex®

IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed, including:

1. Read all instructions.
2. Use iron only for its intended purpose.
3. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to OFF before plugging or unplugging from outlet. Never yank the cord to disconnect from outlet; instead grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before storing and loop cord loosely around iron.
6. Always disconnect iron from electrical outlet when filling or emptying water and when not in use.
7. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Return to Hamilton Beach/Proctor-Silex or to an authorized service center for examination and repair. Incorrect re-assembly can cause a risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down as there may be hot water in the reservoir.

SAVE THESE INSTRUCTIONS

Consumer Safety Information

This product is intended for household use only.

To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.


If an extension cord is absolutely necessary, a 10 ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the extension cord so that it cannot be pulled on by children or tripped over.

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug.

If the automatic Shutoff has been activated, this iron must be unplugged and plugged back in to deactivate the shutoff.


It is a good safety practice to always unplug the iron when not in use.

KNOW YOUR IRON

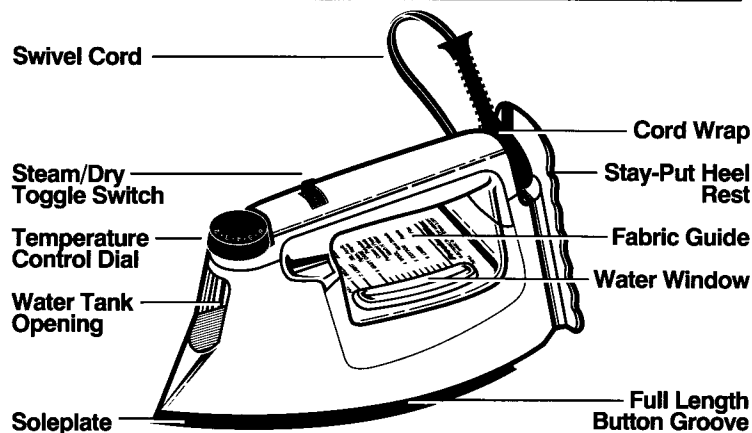

Additional Features Available On Selected Models

The following features are available but may not be found on all models:

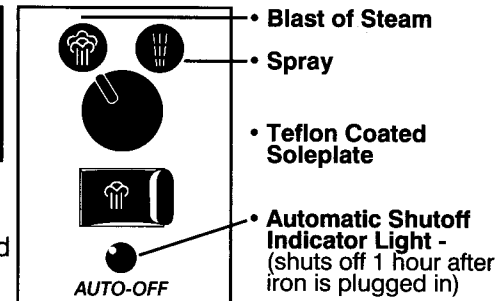

Please Read Before First Use

During first use of the iron, it may appear to smoke. This will stop and does not indicate a defect or hazard.

Many irons spit or sputter during the first few uses with tap water. This happens as the steam chamber becomes conditioned. This will stop after a few uses.

Steam vents should be cleared before first use. Fill iron with water and set temperature control dial to middle of the steam range. Move the steam/dry toggle switch to STEAM. Let pre-heat for two minutes then iron over an old cloth, for a few minutes, while letting iron steam.

How To Dry Iron

1. Make sure the iron is turned to OFF.
2. Plug cord into 120 volt AC outlet.
3. Push the steam/dry toggle switch to DRY.
4. Turn temperature control dial to desired temperature. Allow 2 minutes for iron to reach desired temperature.
5. The iron is ready to use.

How To Steam Iron

1. Make sure the iron is turned to OFF and unplugged from outlet.
2. Pour 6 ounces (3/4 cup) of ordinary tap water into water tank opening.
3. Plug iron into 120 volt AC outlet.
4. Push the steam/dry toggle switch to STEAM.
5. Turn temperature control dial to desired setting in the