

Hamilton Beach



Electric Kettle Bouilloire électrique Hervidor Eléctrico

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

**Read before use.
Lire avant l'utilisation.
Lea antes de usar.**

For questions and other information:
hamiltonbeach.com
hamiltonbeach.ca
hamiltonbeach.com.mx
USA: 1.800.851.8900
Canada: 1.800.267.2826
México: 01 800 71 16 100

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces or hot water. Use handles or knobs. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
5. To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
6. Unplug from outlet when kettle is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or personal injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or

- counter or touch hot surfaces, including the stove.
11. Do not place electric kettle on or near a hot gas or electric burner or in a heated oven.
 12. To disconnect electric kettle, turn any control to OFF (STOP) and then remove plug from wall outlet. Never pull on cord as this may damage the cord and eventually cause electric shock.
 13. Do not use appliance for other than intended use.
 14. Do not use for other than heating water. Other liquids or food will contaminate the interior and void warranty.
 15. Do not allow kettle to boil dry.
 16. To avoid circuit overload, do not operate another high-wattage appliance on the same circuit.
 17. Scalding may occur if the lid is opened during the heating cycle.
 18. Be certain kettle lid is securely in place during operation and when pouring hot water. Do not use force when placing lid on kettle.
 19. Do not clean glass with cleansers, steel wool pads, or other abrasive material.

SAVE THESE INSTRUCTIONS


Other Consumer Safety Information

This appliance is intended for household use only.

⚠ WARNING Electrical Shock Hazard: This appliance is provided with either a polarized (one wide blade) or grounded (3-prong) plug to reduce the risk of electric shock. The plug fits only one way into a polarized or grounded outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. If the appliance is of the grounding type, the extension cord should be a grounding-type, 3-wire cord. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

Parts and features

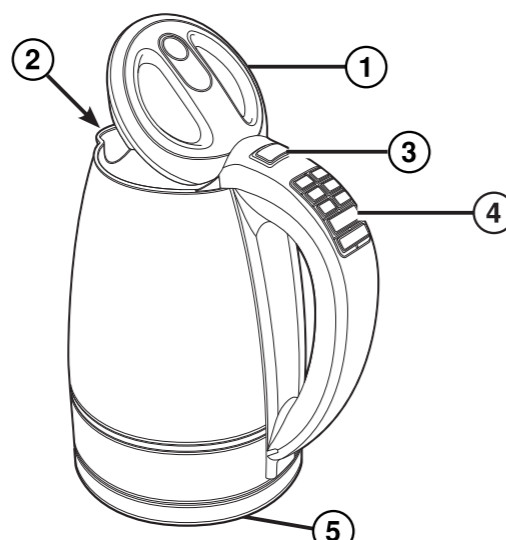

1. Lid
2. Removable Anti-Scale Mesh Filter (inside spout)
3. Open Button for Lid
4. Control Buttons
5. Base

How to use the kettle

⚠ CAUTION Burn Hazard. Do not overfill kettle. Boiling water may spit out of the spout.
BEFORE FIRST USE: Press OPEN button to lift lid and fill kettle with water to the MAX fill line on the water level window. Press the lid down until it locks in place. Press START/STOP button to turn the kettle ON. The kettle will bring the water to a boil, then shut off automatically. Discard water and repeat 2-3 times, rinsing out the kettle each time. The kettle is now ready for use.

1. Plug into outlet.

2. Fill kettle with required amount of water. Ensure that water level is between 0.5 L and MAX on the water level window. Always keep mesh filter in place.
3. Press down on the lid to close. Make sure the power base is on a level surface.
4. Press the desired temperature button and then press the START/STOP button. The selected temperature button will illuminate in blue and flash until the temperature is reached. The kettle will beep six times when the selected temperature is reached. Pressing the START/STOP button without selecting a temperature will default to Boil mode.
5. If keep warm is desired, press the KEEP WARM button at any time and kettle will keep the water at the selected temperature for 30 minutes.
6. After 30 minutes, the kettle will shut off. Always unplug when not in use.

NOTES:

- When kettle is lifted from base, the KEEP WARM function stops. To resume KEEP WARM, follow steps 4 and 5.
- Only use kettle to heat water. If kettle is used to heat other liquids, such as coffee or tea, the warranty will be voided.

If kettle floor discolors: It is normal for stainless steel heating elements to discolor. This does not affect the performance of the kettle. Do not use abrasive scouring pads or cleaners since this may damage the stainless steel surface.

If kettle boils dry: The heating element is protected by two automatic safety devices. If your kettle is accidentally switched on without being filled with water, or is allowed to boil dry, the kettle will automatically switch off. You should:

- Unplug the kettle and wait about 20 minutes for the element to cool down.
- Refill the kettle; then use as normal and check that the kettle functions correctly.


If kettle does not work: Make these simple checks before calling the toll-free customer assistance number:

- Have you pressed the START/STOP button?
- If the kettle heats but does not boil, it might need descaling (see "Care and cleaning" section).
- Has the kettle been accidentally turned on without being filled with water or allowed to boil dry? Press the START/STOP button, wait 20 minutes, and try again.
- Is cord firmly plugged into the outlet and kettle firmly seated in the base?

Anti-Scale Mesh Filter: Scale is caused by lime and calcium in hard water. The mesh filter will prevent these suspended particles from being poured out of the kettle. The filter should be cleaned periodically to ensure optimum performance.

To clean the filter, unplug kettle and allow to cool. Pull up on the filter tab to slide filter out.

To replace filter, line up the filter with tab towards the inside of the kettle and slide into place until it snaps into place.

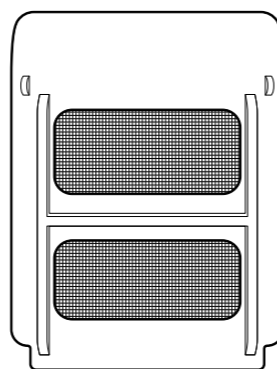

Tea guide

- Bring filtered or good-tasting tap water to a boil in the kettle. Use 6 ounces (177 ml) of water per cup of tea.
- If using loose tea instead of tea bags, measure 1 rounded teaspoon of tea per cup into an infuser and place the infuser in the cup. If no infuser is available, put the tea directly into the cup.
- Pour heated water directly over the tea. For stronger tea, add more leaves rather than infusing longer than is recommended.

NOTE: Tea that is oversteeped will become bitter.
NOTE: These temperature settings can vary depending on a number of factors, such as altitude, impurities in the water, and the amount of water in the kettle.

Temperature & Tea Guide

TYPE	TEMP. °F	TIME
Delicate Tea	160°	2 minutes
Green Tea	175°	1-3 minutes
White Tea	180°	3-4 minutes
Oolong Tea, Hot Cocoa	190°	3-5 minutes
French Press Coffee	200°	
Black Tea/Herbal Tea, Boil	212°	5 minutes

Care and cleaning

⚠ WARNING Electrical Shock Hazard. Do not immerse kettle, power base, or plug in water or any other liquid.

1. With kettle unplugged, empty any remaining water and rinse. Allow kettle to cool. The mesh filter may be removed by pulling up on the filter tab which is visible through the kettle opening. To replace filter, line up the filter with tab towards the inside of the kettle and slide down until it snaps into place.
2. To avoid scale/lime deposit buildup, empty kettle after each use. To remove discoloration or scale/lime deposit from heating element: Place 1/2 teaspoon (2.5 ml) cream of tartar (available in the spice aisle of grocery store) into the kettle. Then fill the kettle 1/2 full with water. Plug into outlet, press START/STOP button, and bring to boil. Press STOP button. Unplug and let cool. Rinse several times with clean tap water.
3. Wipe the exterior of the kettle with a damp cloth. Do not use abrasive scouring pads or powders since they may scratch the smooth surface of the kettle.

Limited warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

PRÉCAUTIONS IMPORTANTES

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

1. Lire toutes les instructions.

2. Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
3. Une surveillance étroite est requise pour tout appareil utilisé par ou près des enfants. Surveiller que les enfants ne jouent pas avec l'appareil.
4. Ne pas toucher les surfaces chaudes ou l'eau bouillante. Utiliser les poignées ou les boutons. Prendre toutes les précautions nécessaires pour éviter les brûlures causées par les surfaces chaudes ou les déversements de liquide chaud.
5. Pour éviter le risque d'incendie, d'électrocution et les blessures, ne pas immerger le cordon, la fiche, le socle électrique ou la bouilloire électrique dans l'eau ou tout autre liquide.
6. Débrancher de la prise murale dès la fin de l'utilisation et avant le nettoyage. Laisser refroidir l'appareil avant d'installer ou de retirer des pièces et avant de le nettoyer.
7. Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Appeler le numéro de service à la clientèle fourni pour des renseignements concernant l'examen, la réparation ou l'ajustement.
8. Pour éviter les risques d'incendie, d'électrocution ou de blessure, ne pas utiliser d'accessoires non recommandés par le fabricant.
9. Ne pas utiliser à l'extérieur.
10. Ne pas laisser pendre le cordon de la table ou du comptoir et éviter que le cordon n'entre en contact avec des surfaces chaudes, y compris la cuisinière.
11. Ne pas placer la bouilloire électrique sur ou près d'un brûleur chaud à gaz ou électrique ou dans un four chaud.
12. Pour débrancher la bouilloire électrique, tourner l'une des commandes à arrêt (STOP) puis retirer la fiche de la prise murale. Ne jamais tirer sur le cordon d'alimentation pour éviter de l'endommager et de provoquer un risque d'électrocution.
13. N'utiliser cet appareil que pour les fonctions auxquelles il est destiné.
14. Cet appareil n'est destiné qu'à faire bouillir l'eau. Bouillir d'autres types de liquide ou d'aliments contaminera l'intérieur de l'appareil et annulera la garantie.
15. Ne pas faire fonctionner la bouilloire sans liquide.
16. Pour éviter la surchauffe d'un circuit électrique, ne pas brancher d'autre appareil de haute puissance sur le même circuit.
17. Des éclaboussures peuvent survenir si le couvercle est soulevé pendant le cycle de chauffage.
18. S'assurer de bien refermer le couvercle de la bouilloire au moment de l'utiliser et de verser l'eau bouillante. Ne pas forcer le couvercle en le plaçant sur la bouilloire.
19. Ne pas nettoyer le verre avec des nettoyeurs, des tampons d'acier ou autres matériaux abrasifs.

CONSERVER CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur

Cet appareil est destiné à un usage domestique uniquement.

⚠ AVERTISSEMENT Risque de choc électrique : Cet appareil est fourni avec une fiche polarisée (lame plus large) ou d'une fiche (3 lames et mise à la terre) pour réduire le risque d'électrocution. Cette fiche s'insère d'une seule manière dans une prise polarisée ou prise avec mise à la terre. Ne pas transformer le dispositif de sécurité de la fiche en modifiant celle-ci de quelque façon ou en utilisant un adaptateur.

Si vous ne pouvez pas insérer complètement la fiche dans la prise, inversez la fiche. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien. La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise, si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Si cet appareil est du type à mise à la terre, la rallonge doit être du type à mise à la terre, à 3 fils. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.

Pièces et caractéristiques

- | | |
|--|---|
| 1. Couvercle | 3. Bouton d'ouverture du couvercle |
| 2. Filtre métallique antitartre amovibles (intérieur du bec verseur) | 4. Boutons de commande (intérieur du bec) |
| | 5. Base |

Utilisation de la bouilloire électrique

⚠ ATTENTION Risque de brûlures. Ne pas trop remplir la bouilloire. L'eau brûlante peut jaillir hors du bec.

AVANT LA PREMIÈRE UTILISATION : Appuyer sur le bouton OPEN (ouvrir) pour soulever le couvercle et remplir la bouilloire avec de l'eau jusqu'à la ligne de remplissage MAX du niveau gradué. Abaisser le couvercle jusqu'à ce que ce dernier s'enclenche en place. Appuyer sur le bouton START/STOP (marche/arrêt) pour mettre la bouilloire en marche. La bouilloire portera l'eau à ébullition puis se mettra hors tension automatiquement. Jeter l'eau et répéter cette étape 2 à 3 fois en rinçant chaque fois la bouilloire. La bouilloire est maintenant prête à utiliser.

1. Brancher dans une prise de courant.
2. Remplir la bouilloire selon la quantité d'eau nécessaire. S'assurer que la quantité d'eau se situe entre la ligne 0,5 L et MAX du niveau gradué. Toujours garder le filtre métallique en place.
3. Abaisser le couvercle pour fermer. S'assurer que le socle est sur une surface à niveau.
4. Appuyer sur le bouton d'intensité de température désirée et appuyer sur le bouton START/STOP (marche/arrêt). Le bouton de température choisie s'illuminera en bleu et clignotera tant que la température n'est pas atteinte. La bouilloire émettra six signaux sonores dès que la température choisie est atteinte. La bouilloire sera en mode d'ébullition (Boil) par défaut si aucun bouton d'intensité de température n'est enfoncé avant d'avoir appuyé sur le bouton START/STOP (marche/arrêt).
5. Si le mode de garde au chaud est souhaité, appuyer sur le bouton KEEP WARM en tout temps et la bouilloire maintiendra l'eau à la température choisie pendant 30 minutes.
6. La bouilloire s'éteindra après 30 minutes. Toujours débrancher la bouilloire dès la fin de son utilisation.

REMARQUES :

- La fonction KEEP WARM (garde au chaud) se désactive dès que la bouilloire est retirée du socle. Répéter les étapes 4 et 5 pour réactiver cette fonction.
- N'utiliser la bouilloire que pour faire bouillir de l'eau. La garantie est annulée si la bouilloire est utilisée pour faire bouillir d'autres sortes de liquides comme le café ou le thé.

Si le fond de la bouilloire se décolore : L'acier inoxydable des éléments chauffants décoloré est normal. Ceci ne nuit pas au fonctionnement de la bouilloire. Ne pas utiliser de tampons à récurer ou nettoyeurs, car ils pourraient endommager la surface en acier inoxydable.

Si la bouilloire a chauffé à vide : L'élément chauffant est protégé par deux dispositifs de sécurité automatiques. Si la bouilloire vide est mise sous tension accidentellement et chauffée à vide, la bouilloire se mettra automatiquement hors tension. Quoi faire :

- Débrancher la bouilloire et laisser refroidir l'élément pendant environ 20 minutes.
- Remplir la bouilloire puis utiliser en mode normal et vérifier le bon fonctionnement des fonctions de la bouilloire.

