


Proctor Silex

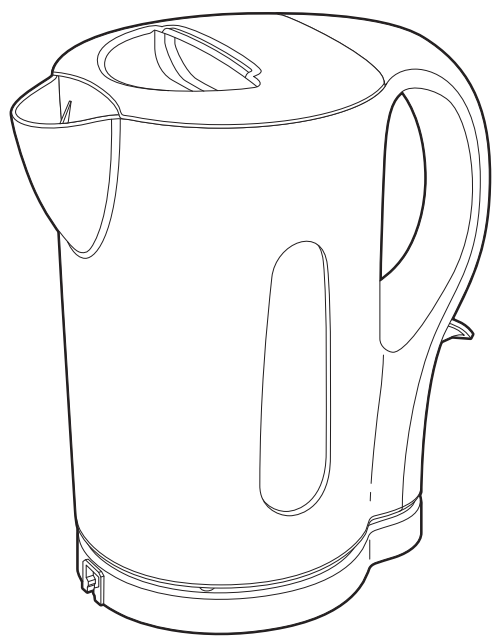

Electric Kettle Bouilloire électrique Hervidor Eléctrico

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use. Lire avant utilisation. Lea antes de usar.

For questions and other information:
proctorsilex.com
proctorsilex.ca
proctorsilex.com.mx
USA: 1.800.851.8900
Canada: 1.800.267.2826
Mexico: 01 800 71 16 100

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces or hot water. Use handles or knobs. Care must be taken as burns can occur from touching hot parts or from spilled hot liquid.
5. To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
6. Unplug from outlet when kettle is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or personal injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. Do not place electric kettle on or near a hot gas or electric burner or in a heated oven.
12. To disconnect electric kettle, turn any control to OFF/O and then remove plug from wall outlet. Never pull on cord as this may damage the cord and eventually cause electric shock.
13. Do not use appliance for other than intended use.
14. Do not use for other than heating water. Other liquids or food will contaminate the interior and void warranty.
15. Do not allow kettle to boil dry.
16. To avoid circuit overload, do not operate another high-wattage appliance on the same circuit.

17. Scalding may occur if the lid is opened during the heating cycle.
18. Be certain the kettle lid is securely in place during operation and when pouring hot water. Do not use force when placing lid on the kettle.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information


This appliance is intended for household use only.

⚠ WARNING Electrical Shock Hazard: This product is provided with either a polarized (one wide blade) or grounded (3-prong) plug to reduce the risk of electric shock. The plug fits only one way into a polarized or grounded outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. If the appliance is of the grounding type, the extension cord should be a grounding-type, 3-wire cord. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

Parts and features

To order parts:
US: 1.800.851.8900
www.proctorsilex.com
Canada: 1.800.267.2826
Mexico: 01 800 71 16 100

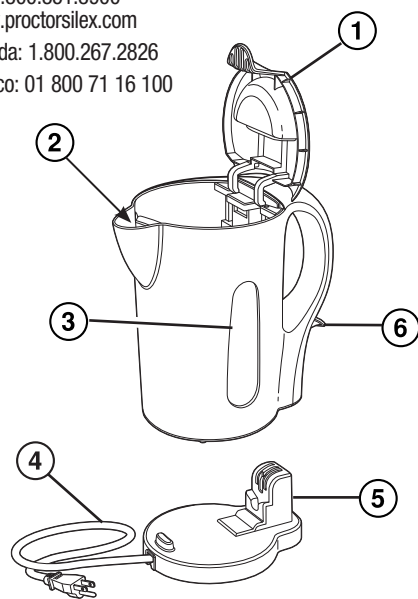

1. Pull-Up Lid
2. Removable Anti-Scale Filter (inside spout)
3. Water Level Window
4. Power Cord
5. Power Base
6. Power Switch

How to use the kettle

BEFORE FIRST USE: Fill kettle to maximum capacity, bring to a boil, and then manually shut off the kettle. Discard water and repeat. Rinse well.

⚠ CAUTION Burn Hazard. Do not overfill kettle. Boiling water may spit out of the spout.

NOTES:

- Use water only in the kettle. If used for foods or beverages such as tea or coffee, the warranty will be voided.
- For increased efficiency and longer life, the kettle must be kept clean of mineral deposits. We recommend that you empty the kettle after each use to prevent mineral deposits.

1. Unplug kettle and remove from base before filling.
2. Fill kettle with desired amount of water. Make sure to cover the element. The water level must be between minimum and maximum indicator lines on the water level indicator.

⚠ CAUTION Burn Hazard. If kettle is overfilled, there is a risk that boiling water may spit out of the spout.

NOTE: This kettle has a built-in safety feature for protection should the unit be plugged in without an adequate amount of water or if the kettle boils dry.

3. Make sure that the lid is in place and the kettle or power base is standing on a level surface. If the lid is not in place, auto shut-off will not operate. All kettle cords must be kept away from hot surfaces.

5. Plug into outlet.
6. Switch to ON (I) position. A light will illuminate when the kettle is on.

7. The kettle will switch off automatically when the water has boiled or you can manually shut the kettle OFF (O) when desired.

IMPORTANT: Ensure that the cordless kettle has switched off automatically or is switched off manually before removing it from the base.

8. Unplug kettle and remove from base before pouring.

⚠ WARNING Burn Hazard. Use extreme caution when carrying the kettle containing hot water. Do not pour in the direction of people or over people.

9. If you want to refill kettle immediately, first check the water level indicator and then, if required, run cold water in through the spout.

10. After use, unplug kettle and empty.
11. Do not hold the switch on while the kettle is boiling.

If kettle floor discolors: It is normal for stainless steel heating elements to discolor. This does not affect the performance of the kettle. Do not use abrasive scouring pads or cleaners since this may damage the stainless steel surface.

If kettle boils dry: The heating element is protected by an automatic safety device. If the kettle is accidentally switched on without water, or is allowed to boil dry, the kettle will automatically repeat a cycle of switching off, cooling down, and switching back on. If this happens, you should:

1. Unplug the kettle.
2. Wait about 20 minutes for the element to cool down and then use as normal and check that the kettle functions correctly.

If kettle does not work: Make these simple checks before calling the toll-free customer assistance number:


- Have you turned power switch to ON (I) position?
- If the kettle heats but does not boil, it might need descaling (see "Care and cleaning" section).
- Has the kettle been accidentally turned on without being filled with water or allowed to boil dry? Turn the switch to OFF (O), wait 20 minutes, and try again.
- Is cord firmly plugged into the outlet and kettle firmly seated in the base?

How to use the kettle

Anti-Scale Filter: Scale is caused by lime and calcium in hard water. The filter will prevent these suspended particles from being poured out of the kettle. The filter should be cleaned periodically to ensure optimum performance.

To clean the filter, unplug kettle and allow to cool. The filter may be removed by sliding the filter up. Rinse filter under running water and brush with a soft brush. An old, clean toothbrush works well.

To replace the filter, push it towards spout and slide filter down until it snaps into place.

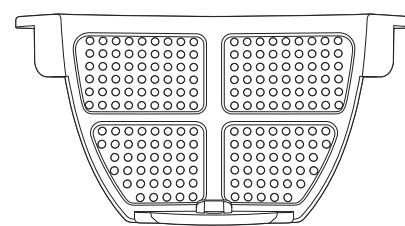

Care and cleaning

⚠ WARNING Electric Shock Hazard. Do not immerse kettle, power base, or plug in water or other liquids.

1. With kettle unplugged, empty any remaining water. Allow kettle to cool.
2. Wipe the exterior of kettle with a damp cloth. Do not use abrasive scouring pads or powders since they may scratch the smooth surface of the kettle.
3. To avoid scale/lime deposit buildup, empty kettle after each use.
4. To remove discoloration or scale/lime deposit from heating element: Place 1/2 teaspoon (1.7 g) cream of tartar (available in the spice aisle of grocery store) into the kettle. Then fill the kettle 1/2 full with water. Plug in, turn ON (I), and bring to boil. Turn OFF (O), unplug, let cool, and rinse several times with clean tap water.

Limited warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price.

Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit proctorsilex.com in the U.S. or proctorsilex.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

PRÉCAUTIONS IMPORTANTES

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

1. Lire toutes les instructions.
2. Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
3. Une surveillance étroite est requise pour tout appareil utilisé par ou près des enfants. Surveiller que les enfants ne jouent pas avec l'appareil.
4. Ne pas toucher les surfaces chaudes ou l'eau chaude. Utiliser les poignées ou les boutons. Prendre toutes les précautions nécessaires pour éviter les brûlures causées par les surfaces chaudes ou les déversements de liquide chaud.
5. Pour éviter le risque d'incendie, d'électrocution et les blessures, ne pas immerger le cordon, la fiche, le socle ou la bouilloire électrique dans l'eau ou tout autre liquide.
6. Débrancher de la prise murale dès la fin de l'utilisation et avant le nettoyage. Laisser refroidir l'appareil avant d'installer ou de retirer des pièces et avant de le nettoyer.
7. Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Appeler le numéro de service à la clientèle fourni pour des renseignements concernant l'examen, la réparation ou l'ajustement.
8. Pour éviter les risques d'incendie, d'électrocution ou de blessure, ne pas utiliser d'accessoires non recommandés par le fabricant.
9. Ne pas utiliser à l'extérieur.
10. Ne pas laisser pendre le cordon de la table ou du comptoir et éviter que le cordon n'entre en contact avec des surfaces chaudes, y compris la cuisinière.
11. Ne pas placer la bouilloire électrique sur ou près d'un brûleur chaud à gaz ou électrique ou dans un four chaud.
12. Pour débrancher la bouilloire électrique, tourner l'une des commandes à ARRÊT (O) puis retirer la fiche de la prise murale. Ne jamais tirer sur le cordon d'alimentation pour éviter de l'endommager et de provoquer un risque d'électrocution.
13. N'utiliser cet appareil que pour les fonctions auxquelles il est destiné.
14. Cet appareil n'est destiné qu'à faire bouillir l'eau. Bouillir d'autres types de liquide ou d'aliments contaminera l'intérieur de l'appareil et annulera la garantie.
15. Ne pas faire fonctionner la bouilloire sans liquide.
16. Pour éviter la surchauffe d'un circuit électrique, ne pas brancher d'autre appareil de haute puissance sur le même circuit.
17. Des éclaboussures peuvent survenir si le couvercle est soulevé pendant le cycle de chauffage.
18. S'assurer que le couvercle de la bouilloire est bien fixé pendant le cycle d'infusion et au moment de verser le café. Ne pas utiliser la force pour fixer le couvercle de la bouilloire.

CONSERVER CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur

Cet appareil est destiné à un usage domestique uniquement.

⚠ AVERTISSEMENT Risque de choc électrique : Cet appareil est fourni avec une fiche polarisée (lame plus large) ou d'une fiche (3 lames et mise à la terre) pour réduire le risque d'électrocution. Cette fiche s'insère d'une seule manière dans une prise polarisée ou prise avec mise à la terre. Ne pas transformer le dispositif de sécurité de la fiche en modifiant celle-ci de quelque façon ou en utilisant un adaptateur. Si vous ne pouvez pas insérer complètement la fiche dans la prise, inversez la fiche. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien.

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise, si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Si cet appareil est du type à mise à la terre, la rallonge doit être du type à mise à la terre, à 3 fils. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuché accidentellement.

Pièces et caractéristiques

Pour commander des pièces :
Canada : 1.800.267.2826

1. Couvercle relevable
2. Filtre antitarte amovibles (intérieur du bec verseur)
3. Niveau gradué
4. Cordon d'alimentation
5. Socle électrique
6. Commutateur

Utilisation de la bouilloire électrique

AVANT LA PREMIÈRE UTILISATION : Remplir la bouilloire à la capacité maximum, porter à ébullition, puis éteindre manuellement la bouilloire. Jeter l'eau et recommencer. Rincer bien.

⚠ ATTENTION Risque de brûlures. Ne pas trop remplir la bouilloire. L'eau brûlante peut jaillir hors du bec.

REMARQUES :

- Utiliser seulement de l'eau dans la bouilloire. Si l'appareil est utilisé pour des aliments ou des boissons telles que thé ou café, la garantie ne sera pas valide.
- Pour plus d'efficacité et une vie utile prolongée de la bouilloire, on doit éviter la présence de dépôts de minéraux. Nous vous recommandons de vider la bouilloire après chaque utilisation pour empêcher les dépôts de minéraux.

1. Débrancher la bouilloire et la retirer de la base avant de la remplir.

2. Remplir la bouilloire jusqu'à la quantité d'eau désirée. S'assurer de couvrir l'élément. Le niveau de l'eau doit être entre les repères minimum et maximum sur l'indicateur du niveau d'eau.

⚠ ATTENTION Risque de brûlures. Si la bouilloire est trop remplie, l'eau bouillante risque de s'échapper du bec verseur.

REMARQUE : Cette bouilloire dispose d'une caractéristique de sécurité encastrée pour une protection au cas où les unités seraient connectées sans une quantité d'eau adéquate ou si la bouilloire est à sec.

3. S'assurer que le couvercle est en place et que la bouilloire ou la base (modèles sans cordon uniquement) repose sur une surface droite. Si le couvercle n'est pas en place, l'arrêt automatique ne fonctionnera pas. Tous les cordons de bouilloire doivent être gardés loin des surfaces chaudes.

4. Pour le modèle sans cordon, s'assurer que la bouilloire est correctement enclenchée sur la base.

5. Brancher dans une prise de courant.
6. Mettre l'appareil en position marche (ON/I). Un témoin s'allumera lorsque la bouilloire est en marche.

7. La bouilloire se éteindra automatiquement lorsque l'eau bout, vous pouvez aussi éteindre la bouilloire manuellement quand vous le désirez en appuyant sur ARRÊT (O).

IMPORTANT : S'assurer que la bouilloire sans cordon s'est éteinte automatiquement ou s'éteint manuellement avant de la retirer de la base.

8. Débrancher la bouilloire et la retirer de la base avant de verser.

⚠ AVERTISSEMENT Risque de brûlures. Faire très attention lors du transport d'une bouilloire qui contient de l'eau chaude. Ne pas verser dans la direction des gens ou en se penchant par dessus eux.

9. Si vous voulez remplir la bouilloire immédiatement, vérifier d'abord le témoin du niveau d'eau puis, au besoin, faire couler de l'eau froide dans le bec verseur.

10. Après utilisation, débrancher la bouilloire et la vider.
11. Ne pas retenir le bouton en position de marche lorsque la bouilloire bout.

Si le fond de la bouilloire se décolore : L'acier inoxydable des éléments chauffants décoloré est normal. Ceci ne nuit pas au fonctionnement de la bouilloire. Ne pas utiliser de tampons à récurer ou nettoyeurs, car ils pourraient endommager la surface en acier inoxydable.

