


Proctor Silex

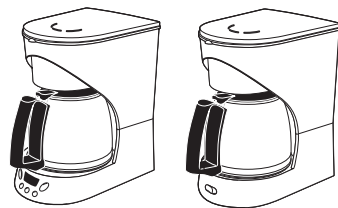

Coffeemakers Cafetières Cafeteras

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.
Lire avant utilisation.
Lea antes de usar.

To view Use and Care guides, recipes, and tips, please visit:

proctorsilex.com
USA: 1.800.851.8900

Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

proctorsilex.ca
Canada: 1.800.267.2628

Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

proctorsilex.com.mx
México: 01 800 71 16 100

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
- To protect against electric shock, do not place cord, plug or coffee maker in water or other liquid.
- Unplug from outlet when either the coffeemaker or clock is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Coffeemaker must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
- Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Use only the carafe provided with the appliance.

840132507

07/18

- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
- The carafe is designed for use with this coffeemaker. It must never be used on a range top or in a microwave oven.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or one with loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- Be certain carafe lid is securely in place during brew cycle and when pouring coffee. Do not use force when placing lid on carafe.
- Do not place coffeemaker on or near a hot gas or electric burner or in a heated oven.
- To disconnect coffee maker, turn controls to OFF (O) and then remove plug from wall outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not use appliance for other than intended use.
- WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover. No user-serviceable parts are inside. Repair should be done by authorized service personnel only.
- Keep-Hot plate may remain hot after the coffee maker is turned off.

SAVE THESE INSTRUCTIONS Other Consumer Safety Information

This appliance is intended for household use only.

⚠ WARNING Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.


The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

⚠ This symbol alerts you to the potential danger for personal injury if you fail to read and follow these safety precautions.

⚠ This symbol reminds you that glass is fragile and can break which could result in personal injury.

Parts and features

NOTE: Picture references major components for all coffeemakers covered by these instructions.

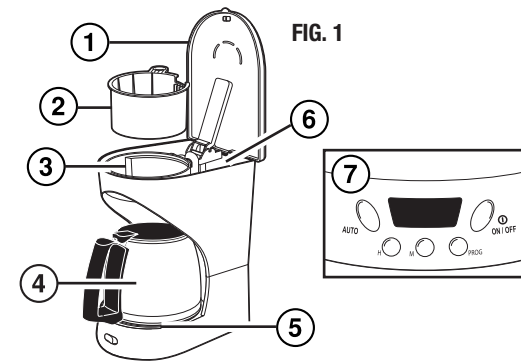

- | | |
|-----------------------|---|
| 1. Lid | 5. Keep-Hot Plate |
| 2. Filter Basket | 6. Water Reservoir |
| 3. Filter Basket Well | 7. Clock and Controls (optional feature on select models) |
| 4. Carafe | |

How to make coffee

⚠ WARNING Burn Hazard.

To avoid hot coffee overflowing from the filter basket:
• When using decaffeinated coffee, do not exceed the coffee manufacturer's recommended serving amount.

• Press firmly on lid to ensure the lid is completely closed. If filter basket overflow occurs, unplug coffeemaker and allow coffee in filter basket to cool before removing filter basket.

- Before first use, clean coffeemaker by following steps listed in "Care and cleaning." See "Inside of coffeemaker" section.
- Place filter basket in filter basket well. Insert thumb handle in the left opening. Ensure filter basket is fully seated.
- Place a cupcake-style paper filter in filter basket. A permanent filter may also be used.
- For each cup of coffee being made, place one level tablespoon of coffee into filter.
- Fill carafe with the desired amount of cold tap water.
- Lift lid and pour water from carafe into water reservoir.
NOTE: Do not fill past 12-cup mark (54 ounces) for glass carafe or 10-cup mark (45 ounces) for thermal carafe.
- Place carafe, with carafe lid attached, on keep-hot plate.
- Close lid. Press firmly on lid to ensure that it is completely closed.
- For switch models: Turn switch to ON. A lighted switch indicates coffeemaker is on. Turn switch to OFF and unplug when finished.
For clock models: Press ON/OFF O button to start. An illuminated red light on the ON/OFF O button indicates coffeemaker is on. Press ON/OFF O again to turn off and unplug when finished.
NOTE: For programmable models, see "How to program auto brew."

For non-clock models with automatic shutoff: Press and release ON/OFF switch. Red light illuminates to indicate the coffeemaker is on. Press and release switch again to turn coffeemaker off and unplug when finished.

Digital clock timer (on select models)

To Set Clock:

- Plug in coffeemaker. Numbers on clock will flash until you set time of day.
- To set time of day, press H (hour) button to set current hour. AM or PM will be displayed.
- Press M (minute) button until you reach the current time.

How to program auto brew

- Make sure clock is set for correct time of day.
- Fill coffeemaker with desired amount of water and coffee. Place carafe with lid on keep-hot plate. Close lid.
- Hold PROG (program) button and press H and M buttons until desired brewing start time is reached. Then release PROG and current time is displayed.
- Press AUTO to set auto brew. A green light on the AUTO button indicates that auto brew is set.
- Press AUTO again to cancel automatic brew.

Features

Pause 'N Serve

This feature allows you to pour a cup of coffee before the entire brew cycle has completed. By removing the carafe, the flow of coffee will temporarily stop. The flow of coffee will resume when carafe is returned to the base.

⚠ WARNING Burn Hazard. Return carafe to base within 20 seconds. Hot water continues to flow into filter basket when this feature is used. Overflowing coffee and hot water are a burn hazard.

Care and cleaning

Inside of coffeemaker

- Place empty carafe on keep-hot plate. Close lid.
- Pour one pint of plain white vinegar into water reservoir.
- Plug unit into electrical outlet.
- Press the ON/OFF button to turn on. After 30 seconds, turn OFF. Wait 30 minutes to allow the vinegar to clean. Then turn ON again. When finished, let cool.
- Empty carafe and rinse. Pour one carafe of cold tap water into water reservoir. Place carafe on keep-hot plate. Close lid.
- Press ON/OFF button to turn on. When the brew cycle is complete, empty carafe. Allow to cool, then repeat with one more carafe of cold tap water.
- Wash carafe and filter basket before making a beverage.

Carafe and filter basket

- Wash carafe in hot, soapy water or on top rack of dishwasher.
- To remove carafe lid, push hinge part of lid to one side and then gently but firmly twist lid. The pin will release from hinge. To replace lid, put one side of lid hinge on one of pins; then snap onto other pin.
- To remove filter basket, open lid and lift straight up. Filter basket may be washed by hand or in top rack of dishwasher.

Outside of coffeemaker

With the coffeemaker unplugged, wipe outside with a soft cloth and warm, soapy water. Do not use abrasive cleaners, as they will scratch the finish of the product.

Limited warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.
This product is warranted to be free from defects in material and

workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.
This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you. To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2828 in Canada or visit proctorsilex.com in the U.S. or proctorsilex.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

PRÉCAUTIONS IMPORTANTES

Au moment d'utiliser des appareils électriques, on doit toujours respecter les règles de sécurité élémentaires afin de minimiser les risques d'incendie, d'électrocution et des blessures, notamment celles qui suivent :

- Lire toutes les instructions.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
- Une surveillance étroite est requise pour tout appareil utilisé par ou près des enfants. Surveiller que les enfants ne jouent pas avec l'appareil.
- Ne pas toucher aux surfaces chaudes. Utiliser les poignées ou les boutons. Prendre toutes les précautions nécessaires pour éviter les risques de brûlures occasionnés par les surfaces chaudes, les déversements de liquides chauds.
- Pour protéger contre le choc électrique, ne pas placer le cordon, la fiche ou la cafetière dans l'eau ou autre liquide.
- Débrancher de la prise murale lorsque la cafetière ou l'horloge n'est pas utilisée et avant le nettoyage. Laisser refroidir la cafetière avant d'installer ou de retirer des pièces et avant de la nettoyer.
- Toujours placer la cafetière sur une surface plane et loin des bords de comptoir pour éviter le basculement accidentel lors de son fonctionnement.
- Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Appeler le numéro de service à la clientèle fourni pour des renseignements concernant l'examen, la réparation ou l'ajustement.
- L'utilisation d'accessoires non recommandés par le fabricant d'électroménagers peut causer des blessures.
- Utiliser uniquement la verseuse à café fournie avec cet appareil.
- Ne pas utiliser à l'extérieur.
- Ne pas laisser pendre le cordon de la table ou du comptoir et éviter tout contact avec les surfaces chaudes incluant la cuisinière.
- La verseuse à café est conçue exclusivement pour cette cafetière. Elle ne doit jamais être utilisée sur une table de cuisson ou dans un four à micro-ondes.
- Ne pas placer la verseuse à café chaude sur une surface mouillée ou froide.
- Ne pas utiliser une verseuse à café fissurée ou avec une poignée lâche ou usée.

- Ne pas nettoyer la verseuse à café avec de la poudre à nettoyer, des tampons métalliques ou autres matériaux abrasifs.
- S'assurer que le couvercle de la verseuse à café est bien fixé pendant le cycle d'infusion et au moment de verser le café. Ne pas utiliser la force pour fixer le couvercle de la verseuse à café.
- Ne pas placer la cafetière sur ou près d'une cuisinière électrique ou à gaz ou dans un four chaud.
- Pour débrancher la cafetière, tourner les boutons de réglage à ARRÊT (O) puis débrancher la fiche de la prise murale. Pour débrancher, saisir la fiche et la retirer de la prise. Ne pas tirer sur le cordon d'alimentation.
- AVERTISSEMENT !** Pour éviter les risques d'incendie et d'électrocution, ne pas enlever le couvercle inférieur de la cafetière. Aucune pièce réparabile à l'intérieur. Les réparations doivent être faites par un technicien agréé seulement.
- N'utiliser cet appareil que pour les fonctions auxquelles il est destiné.
- La plaque chauffante peut être encore chaude même si la cafetière est éteinte.

CONSERVEZ CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur

Cet appareil est conçu pour une utilisation domestique seulement.

⚠ AVERTISSEMENT Risque d'électrocution : Cet appareil électroménager possède une fiche polarisée (une broche large) qui réduit le risque d'électrocution. Cette fiche n'entre que dans un seul sens dans une prise polarisée. Ne contrearez pas l'objectif sécuritaire de cette fiche en la modifiant de quelque manière que ce soit ou en utilisant un adaptateur. Si vous ne pouvez pas insérer complètement la fiche dans la prise, inversez la fiche. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien.
La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.

⚠ Ce pictogramme vous informe d'un risque possible de blessure si vous ne lisez pas et ne respectez pas ces mesures de sécurité.

⚠ Ce pictogramme vous rappelle que le verre est fragile et qu'il peut se briser et provoquer des blessures.

Pièces et caractéristiques

REMARQUE : Les illustrations montrent les composantes importantes de toutes les cafetières relatives aux présentes instructions.

- | | |
|----------------------------|--|
| 1. Couvercle | 5. Plaque chauffante |
| 2. Panier-filtre | 6. Réservoir à eau |
| 3. Cavité du panier-filtre | 7. Horloge et commandes (en option sur certains modèles) |
| 4. Verseuse | |

Préparation du café

⚠ AVERTISSEMENT Risque de brûlure.

Pour éviter le débordement de café chaud du panier-filtre :

- Lors de l'utilisation d'un café décaféiné, ne dépassez pas les quantités recommandées par le fabricant de café.
 - Appuyer fermement sur le couvercle pour s'assurer que celui-ci est bien fermé.
- Si le panier-filtre débordé, débrancher la cafetière et laisser refroidir le contenu du panier-filtre avant de retirer le panier-filtre.
- Avant la première utilisation, nettoyer la cafetière en suivant les étapes énumérées au chapitre « Entretien et nettoyage ». Voir le chapitre « Intérieur de la cafetière ».
 - Placer le panier-filtre dans le puits du panier-filtre. Insérer l'onglet dans l'ouverture gauche. S'assurer que le panier-filtre est bien installé.
 - Placer un filtre panier en papier dans le panier-filtre. Un filtre à café réutilisable peut être utilisé.
 - Déposer une cuillère à soupe rase de café par tasse de café à préparer dans le filtre.
 - Remplir la verseuse à café avec de l'eau froide du robinet à la quantité désirée.

