Hamilton Beach®

handheld steamer

多功能蒸汽熨烫刷



Customer Assistance:
800-820-6565

客户服务电话：
800-820-6565

11570-CCC

IMPORTANT SAFETY INSTRUCTIONS

When using your appliance, basic precautions should always be followed, including the following:

1. Read all instructions.
2. Close supervision is necessary for any appliance being used by or near children. Do not leave appliance unattended while connected.
3. To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button.
4. Use appliance only for its intended use.
5. To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
6. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
7. Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
8. Always disconnect appliance from electrical outlet when filling with water or emptying, and when not in use.
9. Do not operate appliance with a damaged cord, or if the appliance has been dropped or damaged. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance. Take it to a qualified service person for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.
10. Burns could occur from touching hot metal parts, hot water, or steam. Use care when you turn a steam appliance upside down—there may be hot water in the reservoir.
11. To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
12. If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS!

OTHER CONSUMER SAFETY INFORMATION


This product is intended for household use only.

Direct steam at clothing only. Directing steam toward any other surface may damage that surface.


- Do not steam clothes that are being worn.
- Do not use steam in the direction of people or pets.

PARTS AND FEATURES

BEFORE FIRST USE: REMOVE ALL PACKING MATERIALS FROM HANDHELD STEAMER.

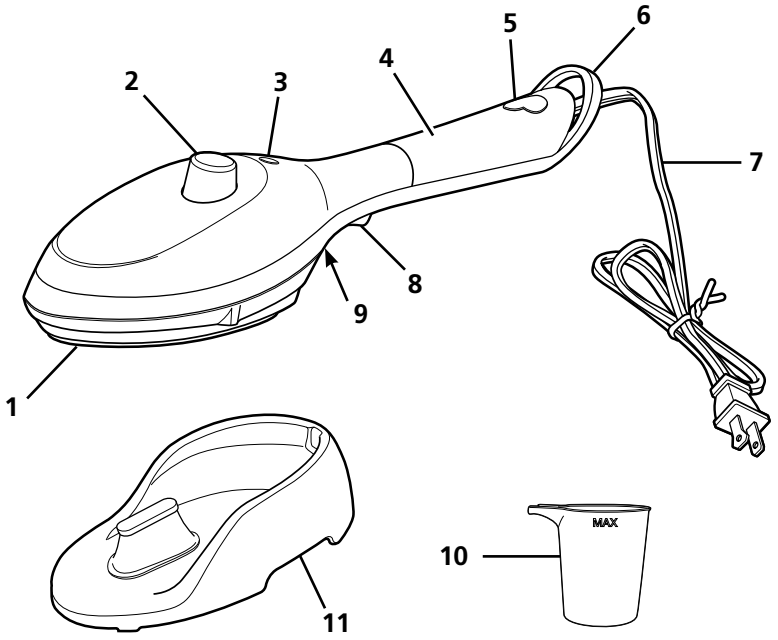


STEAMING ATTACHMENT

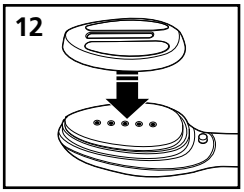

Use the Steaming Attachment for general steaming.


FABRIC BRUSH ATTACHMENT

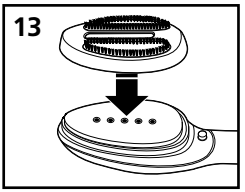

Use the Fabric Brush Attachment to:

- Steam upholstery, pillows, and other fabrics
- Freshen clothing and fabrics that have become "matted" over time
- Assist with lint removal while steaming

CREASING ATTACHMENT

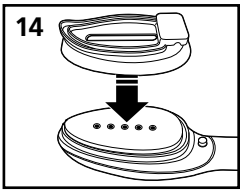

Use the Creasing Attachment to:


- Steam creases into pants, shirt cuffs, and collars

1. Stainless Steel Soleplate
2. Temperature Control Dial
3. Power Light
4. Handle/Water Tank
5. Water Tank Plug
6. Storage Hook
7. Power Cord
8. Steam Button
9. Steamer Attachment Release Button
10. Fill Cup
11. Stand
12. Steaming Attachment
13. Fabric Brush Attachment
14. Creasing Attachment


HOW TO STEAM

⚠WARNING BURN HAZARD.


Steam is hot. When plugged in, unit is ON. Unit cannot be turned OFF. Make sure unit is unplugged when assembling attachments.

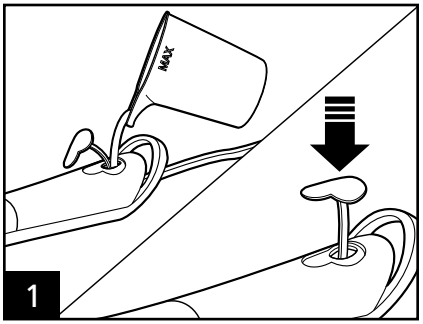


Add water to fill cup up to the MAX line. Remove water plug and pour water into reservoir. The reservoir can be filled to capacity. Replace water plug.

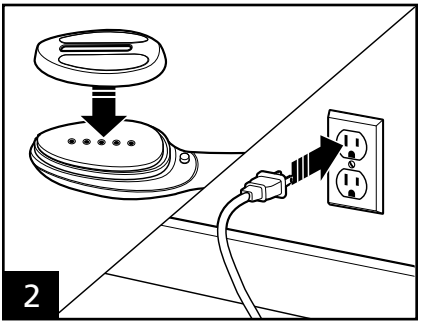


Attach Steaming Attachment. Plug in steamer. The steamer is ready after 15 seconds.

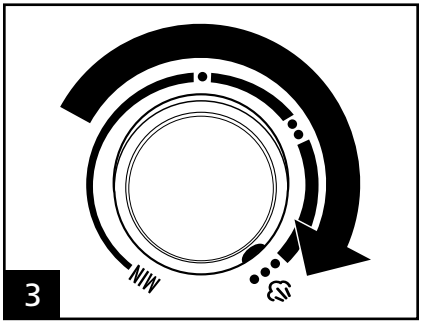


Always set Temperature Control Dial to Maximum while steaming.

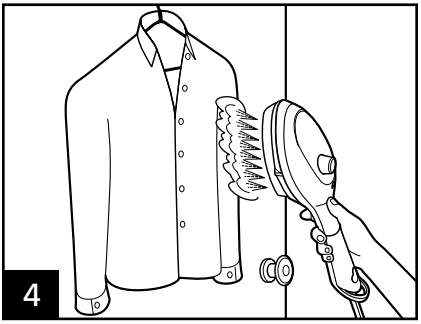

Squeeze steam button for a blast of steam or hold for powerful steam performance.

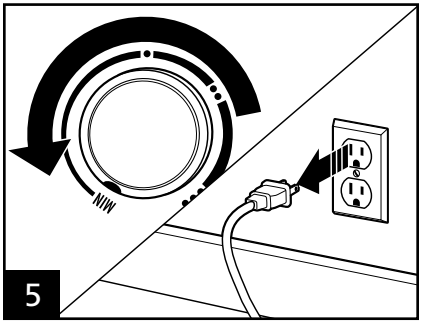

Turn to MIN and unplug.

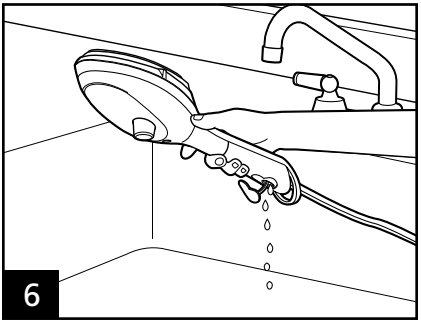


Once unit has completely cooled, empty remaining water from tank over sink. Replace water plug.


HOW TO IRON

NOTICE: To avoid garment damage, check garment label for fabric composition and ironing instructions. Attachments are for steaming only. Remove attachments prior to ironing.


Steam Setting	Temperature Setting		Ironing Instructions
 **Dry Iron**	MIN		MIN
	Synthetics	• Low	Dry iron using spray if necessary.
	Silk, Wool	•• Medium	Iron silk on wrong side.
 **Steam Range**	Cotton, Linen	••• High	For cotton, iron while still damp or use spray. For linen, iron fabric on wrong side.

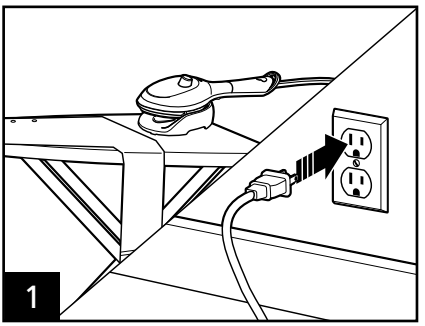


Always place steamer on stand when not in use.

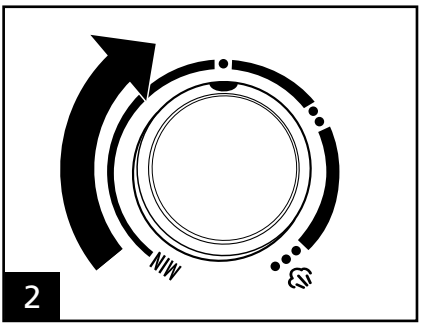

Turn Temperature Control Dial to desired temperature. Allow 2 minutes for steamer to reach desired temperature.

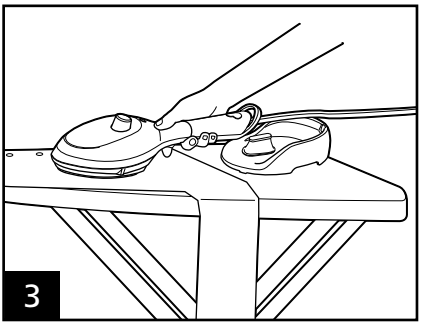

Squeeze steam button for blast of steam or continuous steam while ironing. Only use steam with highest temperature setting. See “How to Steam” for more details.

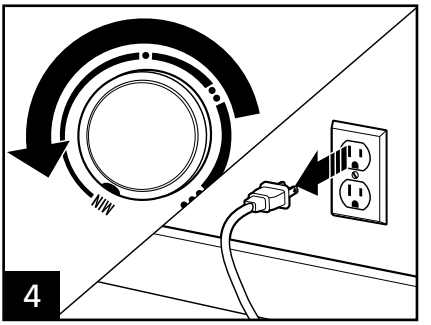

Turn Temperature Control Dial to MIN. Unplug steamer. Allow to cool.

STEAMER TIPS

NOTICE: To avoid garment damage, check garment label for fabric composition and any steaming instructions such as this symbol:




Do not use steam


- Steam while clothing hangs vertically.
- When steaming, touching fabrics lightly with the steam attachment will assist in wrinkle removal. It is important to make contact with the garment and/or fabric.
- For more difficult wrinkles, try steaming from the underside of the fabric. This allows the fibers in the material to relax.
- Pants are more easily steamed upside down, with pants hanging from cuffs.

CARE AND CLEANING


Follow this procedure monthly to avoid mineral deposits and buildup, which can affect the steaming performance of the unit.

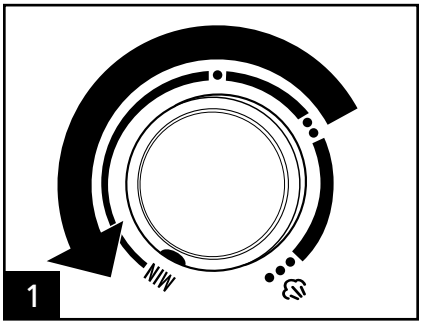


Set the Temperature Control Dial to MIN.

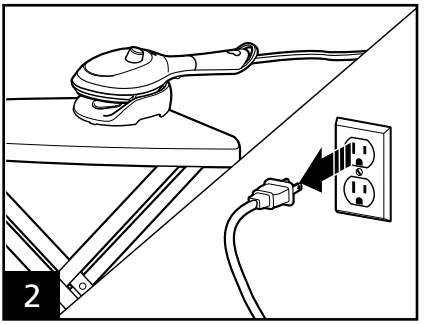

Unplug steamer. Allow to cool.

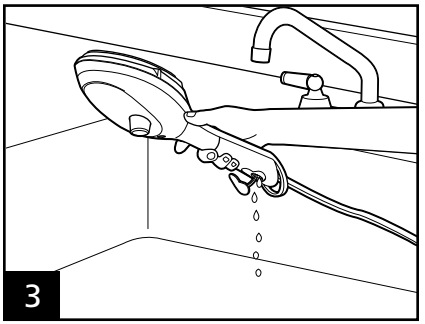


Empty water from steamer over sink until water runs out from reservoir.

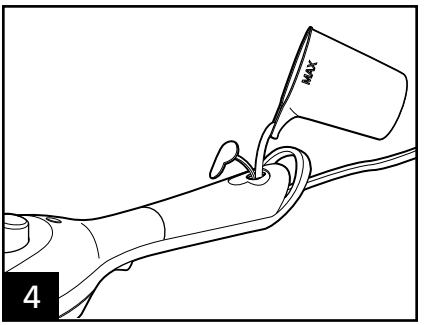


Mix a solution of 1/2 white vinegar and 1/2 water and add to fill cup up to the MAX line. Slowly pour the solution into the water reservoir and replace water plug.


CARE AND CLEANING (cont.)

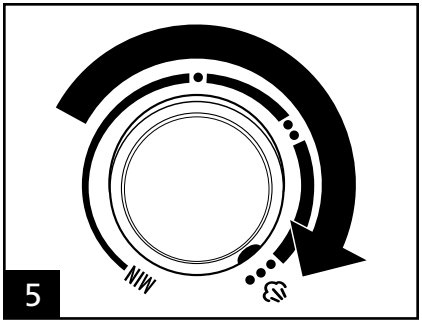


Plug in steamer. Set the Temperature Control Dial to (Steam).

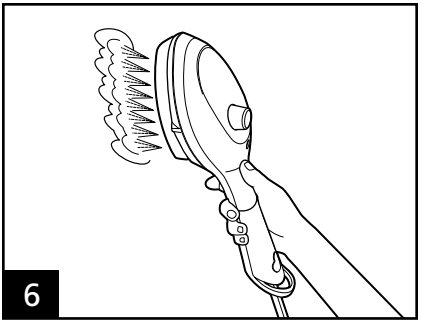


Let the liquid solution steam out of the steamer.

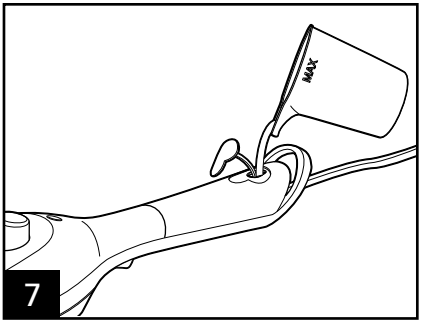

Repeat this process with clean water until vinegar odor is no longer present.

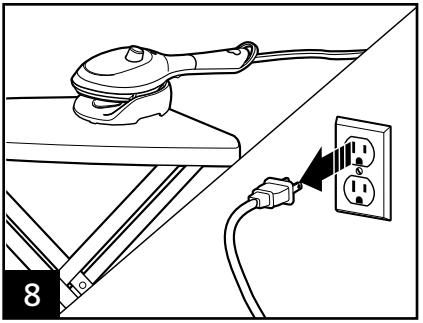

Unplug steamer. Allow to cool.

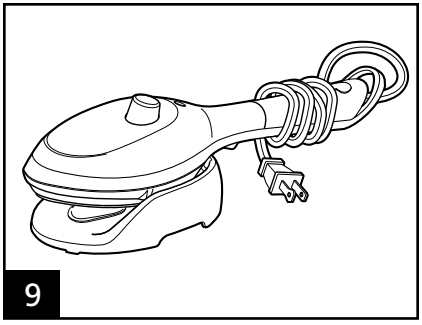

Loop cord loosely around appliance when storing.

NOTICE: To avoid damage to the steamer soleplate:

- Never iron over zippers, pins, metal rivets, or snaps.
- Wipe with a soapy cloth to clean occasional buildup on the soleplate. Never use abrasive cleansers or metal scouring pads, since they may scratch the surface.

TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE
Steamer won't heat.	• Is steamer plugged in and the outlet working? Check outlet by plugging in a lamp. • Is the Temperature Control Dial turned to a fabric setting?
Water is leaking.	• If steaming or steam ironing, is the Temperature Control Dial set to the maximum temperature setting? Has the steamer had enough time to preheat? • If dry ironing, make sure the Steam Button isn't activated.
Steamer won't steam.	• Check water level. • Is the Temperature Control Dial in the (Steam) position? • Has the steamer had enough time to preheat?
Steamer leaves spots on clothing.	• ALWAYS empty water tank after using. Water left in tank may discolor clothing and soleplate.
Wrinkles not removed.	• Check that the Temperature Control Dial is set to correct fabric.
Ironing surface too hot.	• Check Temperature Control Dial and set to lower setting. Let steamer cool down 5 minutes before continuing.

重要安全说明

在使用该设备时，应始终遵守基本的安全防范措施，包括以下内容：

1. 使用前阅读所有说明。
2. 使用时或在儿童附近使用该设备时，一定要密切监督。当设备接通电源时，请勿离开。
3. 为了减少接触到蒸汽孔流出的热水危险，每次使用前检查设备，让设备远离身体，操作蒸汽按钮。
4. 设备仅可用于预定的用途。
5. 请勿将该设备浸泡在水或其他液体之中，以免发生电击危险。
6. 断电时，请握紧电源插头拔下，严禁直接拉拔电源线。
7. 请勿让电源线接触发热表面。设备不使用，存放前必须完全冷却。将电源线绕设备适当盘起存放。
8. 当加水或倒空水时，以及不使用时，务必断开设备与电源插座的连接。
9. 在下列情况下，请勿使用设备：电源线破损、设备曾跌落或已经损坏。请勿自行拆卸或试图维修设备，以免发生电击危险。检查和检修必须由合格的维修人员执行。不正确的组装或维修可能导致设备出现火灾、电击，人身伤害的危险。
10. 接触金属部件、热水或蒸汽，会引起灼伤危险。旋转颠倒蒸汽设备时应小心 – 水箱中可能有热水。
11. 为避免电路过载，请勿将设备和其他高功率的电器在同一条线路中使用。
12. 如果需要电源延长线，应使用15安培的电源线。使用的电源延长线的额定电流过小会导致电源线过热。合理布置电源线，请注意不要拉扯或缠绕电源线。

请妥善保管这些说明！

其他用户安全信息


本产品仅限家庭使用。

仅限直接熨烫衣物。直接熨烫其他表面可能会损坏该表面。


- 请勿熨烫正穿着于身的衣物。
- 请勿朝人群或宠物方向使用蒸汽。

部件和功能

初次使用前：请拆除多功能蒸汽熨烫刷上所有包装材料。

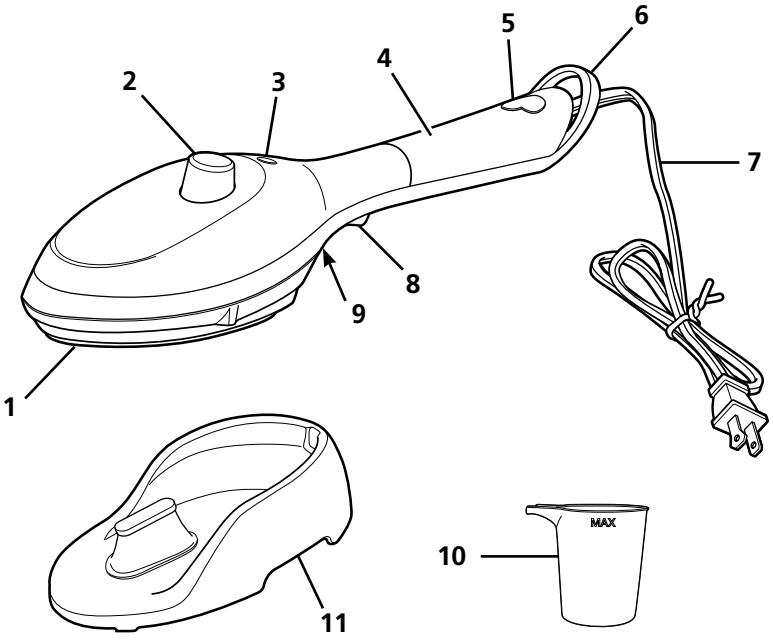


熨烫配件

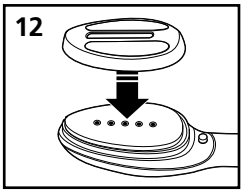

普通熨烫请使用熨烫配件。


织物毛刷配件

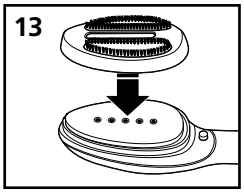

以下织物可使用织物毛刷配件：

- 熨烫室内装潢织物、枕头和其他织物
- 清洁因日久而变得“暗淡”的衣物和织物
- 熨烫时，帮助去除线头

裤管夹配件

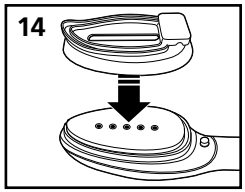

以下织物可使用裤管夹配件：


- 熨烫裤子、衬衫袖口和衣领的折缝

1. 不锈钢底板
2. 温度控制刻度盘
3. 电源指示灯
4. 手柄/水箱
5. 水箱盖
6. 储藏用挂钩
7. 电源线
8. 蒸汽按钮
9. 配件释放按钮
10. 盛水杯
11. 底座
12. 熨烫配件
13. 织物毛刷配件
14. 裤管夹配件


如何熨烫

⚠ 警告　灼烧危险。


蒸汽很烫。接通电源时，设备开启。设备不可关闭。装配配件时，请确保设备未接通电源。

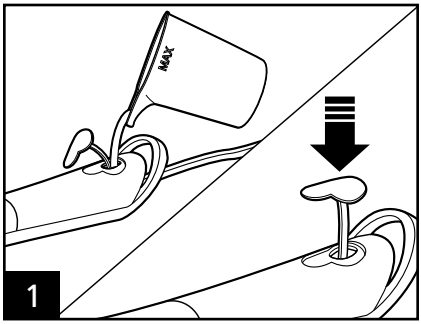


往盛水杯加水至最高水位线。打开水箱盖，将水倒入水箱。水箱可加满水。盖上水箱盖。

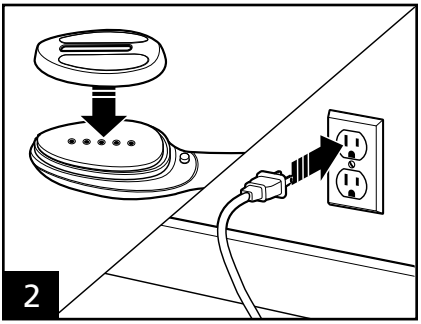


装配好熨烫配件。插上蒸汽电熨斗插头。蒸汽电熨斗将在 15 秒后准备就绪。

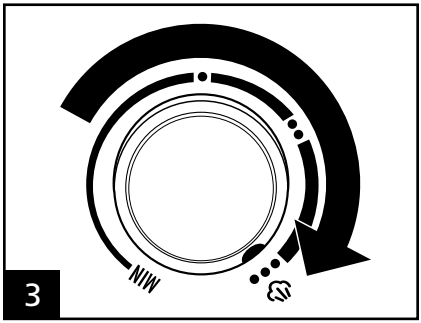


熨烫时，请一直将温度控制刻度盘置于最大。

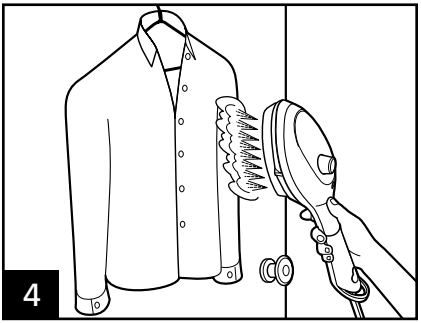

按压蒸汽按钮，喷射蒸汽或一直按住，实现超强蒸汽性能。

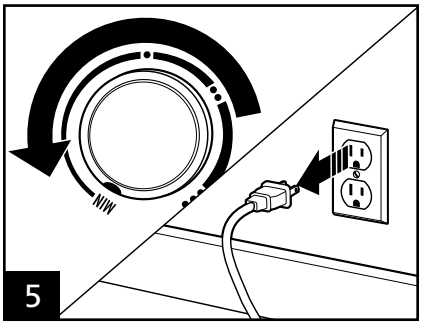

旋至最小并拔下插头。

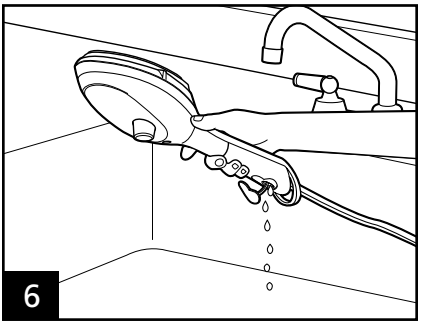


设备完全冷却后，请立即将水箱中剩余的水倒入水槽，至完全排空。盖上水箱盖。


如何熨烫

注意：为防止衣物损坏，请检查衣物面料材料标签和熨烫说明。配件仅限蒸汽熨烫。熨烫前，请移除配件。


蒸汽设置	温度设置		熨烫说明
 干熨	最小		最小
	合成纤维	• 低	如有必要，使用喷雾干熨。
	丝绸、羊毛	•• 中	熨烫丝绸背面。
 蒸汽档	棉、麻	••• 高	对于棉面料，请在潮湿时熨烫或使用喷雾。 对于麻面料，请熨烫衣物背面。

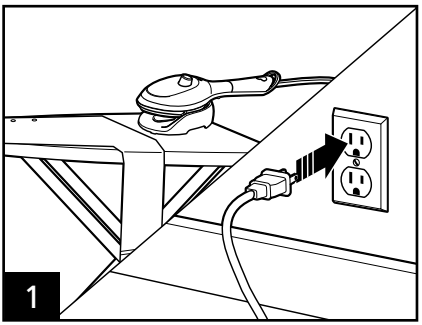


未使用时，请一直将蒸汽熨烫刷放在底座上。

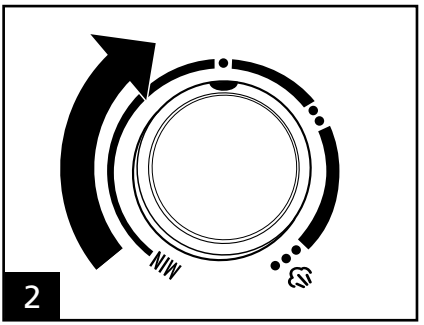

旋转温度控制刻度盘，调节所需温度。允许蒸汽熨烫刷加热两分钟，以达到所需温度。

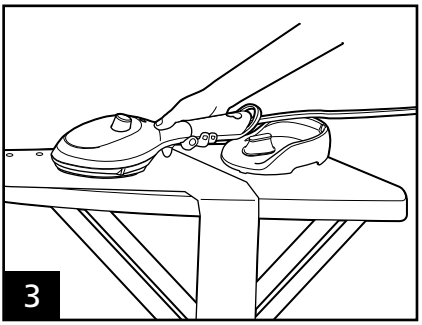

熨烫时，按压蒸汽按钮，喷射蒸汽或持续释放蒸汽。仅在最高温度设置下使用蒸汽。参阅“如何熨烫”，了解更多详情。

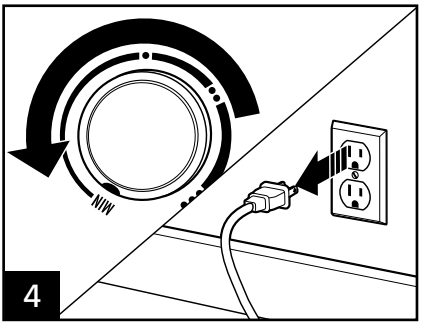

将温度控制刻度盘旋至最小。拔下蒸汽熨烫刷插头。让其冷却。

熨烫刷小贴士

注意：为防止衣物损坏，请检查衣物面料材质标签和任何熨烫说明，如以下标志：




请勿使用蒸汽熨烫


- 当衣物垂直悬挂时进行熨烫。
- 熨烫时，用蒸汽配件轻触衣物有助于去除褶皱。与衣物和/或织物接触非常重要。
- 对于比较难以去除的褶皱，请尝试从织物反面进行熨烫。 这将使面料中的纤维变得松弛。
- 裤口朝上垂挂，裤子将更易从上而下进行熨烫。

护理及清洁


每月请进行以下步骤以避免水垢沉积和积累，这将影响本设备的熨烫性能。

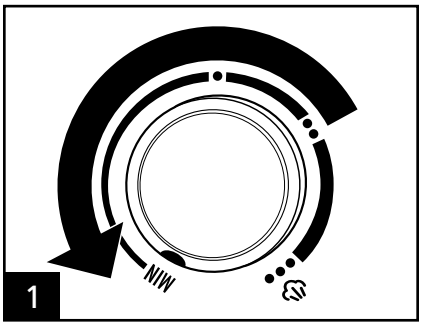


将温度控制刻度盘设置为最小。

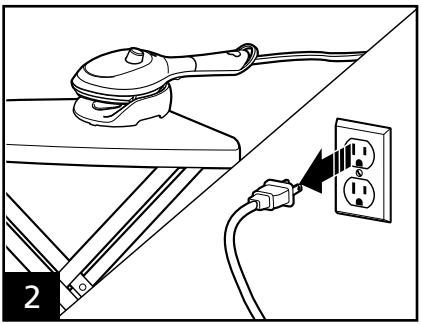


拔下蒸汽电熨斗插头。让其冷却。

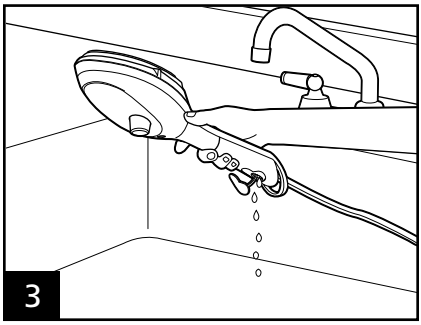


将蒸汽电熨斗水箱内的水倒入水槽，直至水箱完全排空。

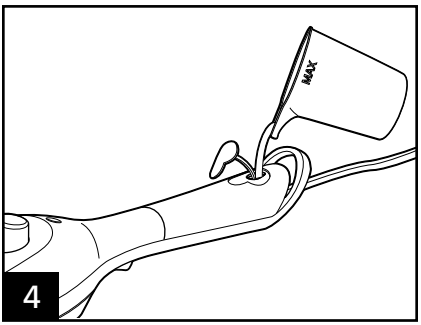


将半杯白醋和半杯清水混合成溶剂并倒入盛水杯，至最高水位线。缓慢将溶剂倒入水箱并盖上水箱盖。

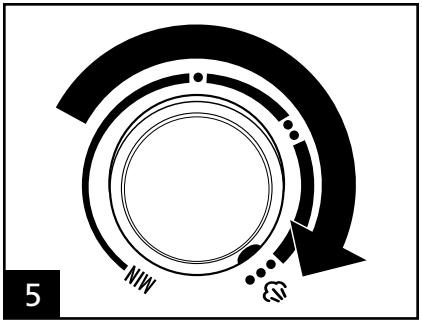


插上蒸汽电熨斗插头。将温度控制刻度盘设置为 （蒸汽）。

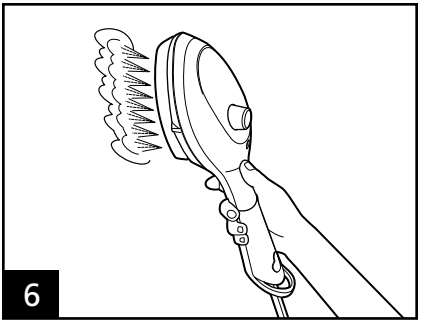


让液体溶剂从蒸汽电熨斗中蒸发出来。

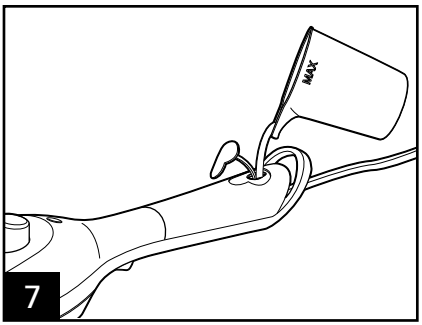

用清水重复此步骤直至醋味消失。

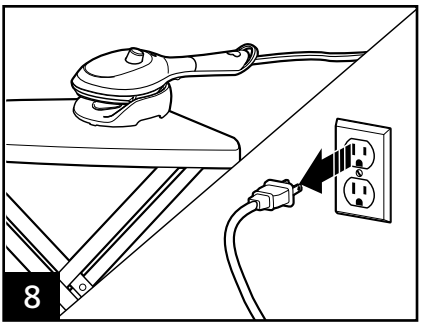

拔下蒸汽熨烫刷插头。让其冷却。

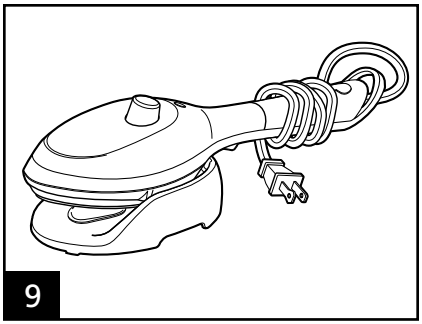

收藏时，将电线松散绕在本设备上。

注意：为防止损坏蒸汽熨烫刷底板：

- 严禁在拉链、针、金属铆钉或纽扣上熨烫。
- 使用带肥皂布清洁底板上偶尔出现的堆积物。严禁使用磨砂清洗剂或金属洗擦垫，因为这将刮伤表面。

故障排除

问题	可能的原因
蒸汽熨烫刷不热。	• 蒸汽熨烫刷是否插上插头，插座是否正常工作？插上台灯，检测插座。 • 温度控制刻度盘是否旋至织物设置？
漏水。	• 如果是熨烫或蒸汽熨烫，温度控制刻度盘是否设置为最大温度？蒸汽电熨斗是否有足够的预热时间？ • 如果是干熨，请确保蒸汽按钮未开启。
蒸汽熨烫刷无法熨烫。	• 检查水位线。 • 温度控制刻度盘是否置于 （蒸汽）位置？ • 蒸汽熨烫刷是否有足够的预热时间？
蒸汽熨烫刷在衣物上残留污渍。	• 每次使用后，请将水箱内的水排空。水箱内的残留水可能会使衣物和底板变色。
无法消除褶皱。	• 检查温度控制刻度盘是否设置为正确的织物。
熨烫表面过热。	• 检查温度控制刻度盘并设置为较低选项。继续前，请让蒸汽熨烫刷冷却 5 分钟。

Model/型号:	Type/类别:	Rating/规格
11570-CCC	S05	220V ~ 50Hz 1000 W

Dist.: Hamilton Beach Brands, Inc., Glen Allen, VA 23060

© 2012 Hamilton Beach Brands, Inc.