

Hamilton Beach®

Rapid Cold Brew & Hot Coffee Maker

Cafetière à infusion rapide, à froid et à chaud

Cafetera rápida para preparar café caliente y helado

Read before use.
Lire avant utilisation.
Lea antes de usar.

Recipes, tips, product information and registration:
hamiltonbeach.com

Recettes, des conseils, des renseignements sur le produit et l'enregistrement :
hamiltonbeach.ca

Recetas, consejos, información del producto y registro:
hamiltonbeach.com.mx

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

ENTER TO WIN \$100 TO SPEND ON WEBSITE
Visit register.hamiltonbeach.com

PARTICIPEZ POUR COURIR LA CHANCE DE GAGNER UN MONTANT DE 100 \$ À DÉPENSER SUR NOTRE SITE WEB
Visitez le register.hamiltonbeach.ca

INGRESE PARA TENER LA OPORTUNIDAD DE GANAR \$100 PARA GASTAR EN NUESTRO SITIO WEB
Visite register.hamiltonbeach.com



Open to US customers only • Ce concours s'adresse aux clients des États-Unis seulement • Este concurso está disponible solo a clientes de los Estados Unidos

IMPORTANT SAFEGUARDS

- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:
- Read all instructions.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
 - Close supervision is necessary when any appliance is used by or near children. Cleaning and user maintenance shall not be made by children without supervision. Children should be supervised to ensure that they do not play with the appliance.
 - Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
 - To protect against electric shock, do not place cord, plug or coffee maker in water or other liquid.
 - Unplug from outlet when the coffee maker is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
 - Coffee maker must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
 - The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
 - Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Customer Service for information on examination, repair, or adjustment as set forth in the Limited Warranty.
 - Do not use outdoors.
 - Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
 - Do not place coffee maker on or near a hot gas or electric burner or in a heated oven.
 - To disconnect coffee maker, turn controls to OFF (O) and then remove plug from wall outlet.
 - WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover. No user-serviceable parts are inside. Repair should be done by authorized service personnel only.
 - Do not use appliance for other than intended use.
 - Do not place coffee maker in a cabinet when in use.
 - Scalding may occur if the latch is lifted during the brewing cycles.
 - Brew basket assembly may remain hot after the coffee maker is turned off.

SAVE THESE INSTRUCTIONS


Other Consumer Safety Information

This appliance is intended for household use only.

⚠ WARNING Electrical Shock Hazard: This product is provided with either a polarized (one wide blade) or grounded (3-prong) plug to reduce the risk of electric shock. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

Parts and Features

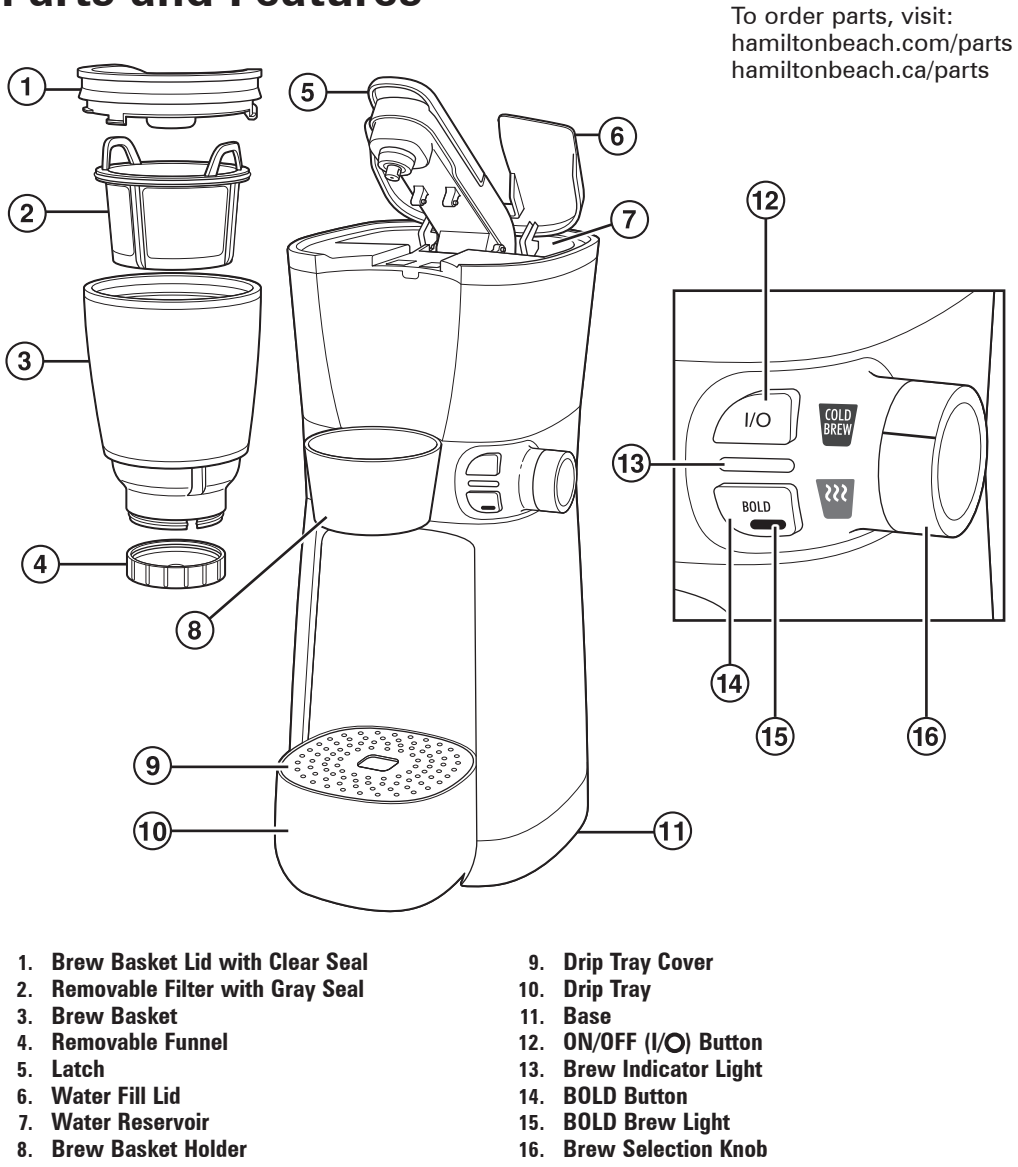

To order parts, visit:
hamiltonbeach.com/parts
hamiltonbeach.ca/parts

- Brew Basket Lid with Clear Seal
- Removable Filter with Gray Seal
- Brew Basket
- Removable Funnel
- Latch
- Water Fill Lid
- Water Reservoir
- Brew Basket Holder
- Drip Tray Cover
- Drip Tray
- Base
- ON/OFF (I/O) Button
- Brew Indicator Light
- BOLD Button
- BOLD Brew Light
- Brew Selection Knob

How to Make Coffee

⚠ WARNING Burn Hazard. If brew basket overflow occurs, unplug coffee maker and allow coffee in brew basket to cool before removing brew basket from brew basket holder. To avoid hot coffee overflowing from the brew basket:

- Do not add coffee above rim of removable filter, especially when using decaffeinated coffee or very fine coffee grounds such as espresso grounds.

⚠ WARNING Burn Hazard. To avoid contact with hot water:

- Do not use more than 16 oz. (473 mL) of water.
- Fill reservoir with the mug or cup into which the water will be brewed.
- Fully insert mug or cup under brew basket holder.

Before first use: Brew one cycle with water and discard water. Wash Brew Basket Lid, Removable Filter, Brew Basket, Removable Funnel, Drip Tray Cover and Drip Tray in hot, soapy water. Rinse and dry.

Automatic shutoff: The Coffee Maker will automatically shut off after brew cycle is complete.

- Plug into outlet.
- Lift Water Fill Lid. Fill Water Reservoir with desired amount of water between 8 oz. (237 mL) minimum and 16 oz. (473 mL) maximum. Close Water Fill Lid.
- NOTE:** Remove Drip Tray if brewing into travel mug.
- Lift Latch and remove Brew Basket.
- Rotate Brew Basket Lid to remove, and then lift out Removable Filter from Brew Basket.
- Refer to "Coffee Measurement" chart and add grounds to Filter. Return Filter with Black Seal to Brew Basket.
- Place Brew Basket Lid on Brew Basket and rotate to secure.

NOTE: If Lid is not secured in place, Latch will not close and brewing will not start.

- Add Brew Basket in Brew Basket Holder and push Latch down until you hear a click and it locks in place.

- Turn Brew Selection Knob clockwise to

COLD BREW (☑) until it clicks into place, or counterclockwise to Hot Brew (☑) until it clicks into place.

- Place mug on Drip Tray. If using a travel mug, remove Drip Tray and place travel mug on Base.
- For stronger-tasting coffee, press BOLD Button. Red light on BOLD Button will illuminate and stay on until brew cycle has finished. Press ON (I) Button to begin brewing.
- NOTE:** During COLD BREW (☑) mode or BOLD setting, coffee flow will start and stop many times during brew cycle to enhance flavor. Do not remove mug or travel mug until red Brew Indicator Light turns off.

- Once brew cycle is complete, red Brew Indicator Light will flash 3 times and Coffee Maker will turn off. Remove mug or travel mug.

- NOTES:**
- For chilled cold brew coffee, add ice to travel mug after brewing; 16 oz. (473 mL) of ice in cup will overflow.
 - The Brew Basket is hot after brewing. Allow to cool before removing.

Coffee Measurement

Water	Ground Coffee (Hot Mode)	Ground Coffee (Cold Mode)
8 oz. (237 mL)	8 g = 1.6 tbsp	14 g = 2.8 tbsp
10 oz. (296 mL)	10 g = 2 tbsp	18 g = 3.6 tbsp
12 oz. (355 mL)	12 g = 2.4 tbsp	22 g = 4.4 tbsp
14 oz. (414 mL)	14 g = 2.8 tbsp	26 g = 5.2 tbsp
16 oz. (473 mL)	16 g = 3.2 tbsp	30 g = 6 tbsp

- Based on a 5 oz. (148 mL) cup of coffee.
- Measurements are recommendations only. You can vary amounts and types of grounds to your preference.
- Do not exceed 30 g of grounds in Removable Filter during any brew cycle.
- Wait at least 5 minutes after brewing before emptying Brew Basket.

Care and Cleaning

⚠ WARNING Electrical Shock Hazard. Do not immerse base or tank in water.

- Unplug. Let Coffee Maker cool.
- Remove Brew Basket and pull out Removable Filter. Remove Clear Seal and Gray Seal to clean any grounds. Brew Basket, Removable Funnel, Brew Basket Lid with Clear Seal, and Removable Filter with Gray Seal are dishwasher safe, or they can be washed in hot, soapy water. Rinse and dry.
- Wipe outside with a soft, damp cloth. Do not use abrasive cleansers or pads, since these may scratch Coffee Maker finish.

Monthly Cleaning

- Plug into outlet.
- Add 2 oz. (60 mL) of white vinegar and 6 oz. (178 mL) water to Water Reservoir.

- Turn Brew Selection Knob to Hot Brew (☑) until it clicks into place.
- Place a mug or travel mug under Brew Basket Holder.
- Press ON (I) Button to begin brew cycle. Red

Troubleshooting

Latch will not close all the way.

- Brew Basket Lid is not on properly. Ensure Brew Basket Lid has been twisted into the locked position on the Brew Basket.
- Brew Basket not installed properly in the Brew Basket Holder. The Brew Basket Holder must be aligned with the bottom of the Brew Basket to prevent incorrect installment.

Brew Indicator Light is on but coffee is not coming out.

- "Blooming" is in process. If using the COLD BREW mode or BOLD mode features, there will be times when the brew cycle pauses to ensure full extraction for enhanced coffee flavor. Once the red Brew Indicator Light turns off, the brew cycle is complete.

Brew Indicator Light flashes but brew cycle will not begin.

- Out of water. Ensure a minimum of 8 oz. (237 mL) of water is added to the Water Reservoir before beginning brew cycle.

Grounds in coffee cup.

- Gray Seal not installed on Removable Filter. Always ensure the Removable Filter with Gray Seal is properly installed before beginning each brew cycle.
- Removable Funnel needs to be cleaned. Take off Removable Funnel by pulling the part straight off of the bottom of the Brew Basket. Rinse in warm, soapy water, or wash in the dishwasher for easy cleaning. Then, install the Removable Funnel back onto the bottom of the Brew Basket until you hear a click.
- Brew Basket needs to be cleaned. Do not use Removable Filter to scoop grounds from coffee bin or bag. Always add coffee to the Removable Filter Basket using a spoon or a

Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with our returning a product or component under this warranty to you. If the product or component is unavailable, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage

Brew Indicator Light will illuminate until brew cycle is complete. Do not remove mug until red Brew Indicator Light has turned off.

- Repeat brew cycle 2 to 3 times with cold tap water to clean Coffee Maker.

coffee scoop, and always rinse Removable Filter after each use.

Leaking from Brew Basket.

- Brew Basket Lid Clear Seal not in place. Always ensure Clear Seal is properly installed onto Brew Basket Lid before beginning each brew cycle.
- Too much coffee added to Brew Basket. Ensure no more than 30 g of coffee is added to the Brew Basket.
- Coffee grounds around sealing surface. If there are coffee grounds around Brew Basket Lid sealing surface, leaking may occur. Clean any coffee from sealing surface before beginning brew cycle.

Coffee is too weak.

- Add up to 30 g of coffee to the Brew Basket for a strong cup of coffee. For an even stronger cup of coffee, press the BOLD Button before beginning brew cycle.

Coffee is too strong.

- Reduce the amount of coffee used in the Brew Basket, or use more water. The maximum amount of water is 16 oz. (473 mL).
- Sediment in coffee cup.**
- Sediment can result when using fine grounds. To reduce sediment amount, use a coarser grind of coffee.

Cold brew is not cold.

- To speed up the cold brew process, COLD BREW mode uses higher brew temperatures at the beginning of the brew cycle to extract the desired coffee flavors, but then finishes with lower brewing temperatures to prevent extraction of the non-desired coffee flavors that lead to acidic coffee. Add ice after brewing.

and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make warranty claim, do not return this appliance to the store. Please write Hamilton Beach Brands, Inc., Customer Service Department, 4421 Waterfront Dr., Glen Allen, VA 23060, or visit hamiltonbeach.com/customer-service in the U.S. or hamiltonbeach.ca/customer-service in Canada. For faster service, locate the model, type, and series numbers on your appliance.

PRÉCAUTIONS IMPORTANTES

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

- Lire toutes les instructions.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
- Une surveillance étroite est requise pour tout appareil utilisé par ou près des enfants. Le nettoyage et l'entretien ne doit pas fait par des enfants à moins d'être sous supervision. Surveiller que les enfants ne jouent pas avec l'appareil.
- Ne pas toucher les surfaces chaudes. Utiliser les poignées ou les boutons. Prendre toutes les précautions nécessaires pour éviter les risques de brûlures occasionnés par les surfaces chaudes, les déversements de liquides chauds.
- Pour protéger contre le choc électrique, ne pas placer le cordon, la fiche ou la cafetière dans l'eau ou autre liquide.
- Débrancher l'appareil de la prise de courant lorsque la cafetière n'est pas utilisée et avant le nettoyage. Laisser refroidir l'appareil avant de placer ou de retirer des pièces, et avant de le nettoyer.
- Toujours placer la cafetière sur une surface plane et loin des bords de comptoir pour éviter le basculement accidentel lors de son fonctionnement.
- L'utilisation d'accessoires non recommandés par le fabricant d'électroménagers peut causer des blessures.
- Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Veuillez communiquer avec le service à la clientèle pour obtenir de l'information concernant l'inspection, la réparation ou le réglage, comme précisé dans la garantie limitée.
- Ne pas utiliser à l'extérieur.
- Ne pas laisser pendre le cordon de la table ou du comptoir et éviter tout contact avec les surfaces chaudes incluant la cuisinière.
- Ne pas placer sur ou près d'un brûleur chaud à gaz ou électrique ou dans un four chaud.
- Pour débrancher la cafetière, positionner les boutons à OFF (O/arrêt) puis retirer la fiche de la prise murale.
- AVERTISSEMENT !** Pour réduire le risque d'incendie ou de choc électrique, ne pas enlever le dessous de la cafetière. Aucune pièce réparable à l'intérieur. Les réparations doivent être faites par un technicien agréé seulement.
- Ne pas utiliser cet appareil pour un autre usage que celui auquel il est destiné.

- Ne pas ranger la cafetière dans une armoire lors de l'utilisation.
- Il y a un risque de brûlure si le loquet est soulevé pendant les infusions.
- L'assemblage du panier d'infusion peut être encore chaud une fois que la cafetière aura été éteinte.

CONSERVER CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur


Cet appareil est destiné à un usage domestique uniquement.

⚠ AVERTISSEMENT Risque de choc électrique :

Cet appareil est fourni avec une fiche polarisée (une broche plus large) ou une fiche avec mise à la terre (3 broches) afin de réduire le risque de choc électrique. Ne contrecarrez pas l'objectif sécuritaire de cette fiche en la modifiant de quelque manière que ce soit ou en utilisant un adaptateur. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien.

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.

Pièces et caractéristiques

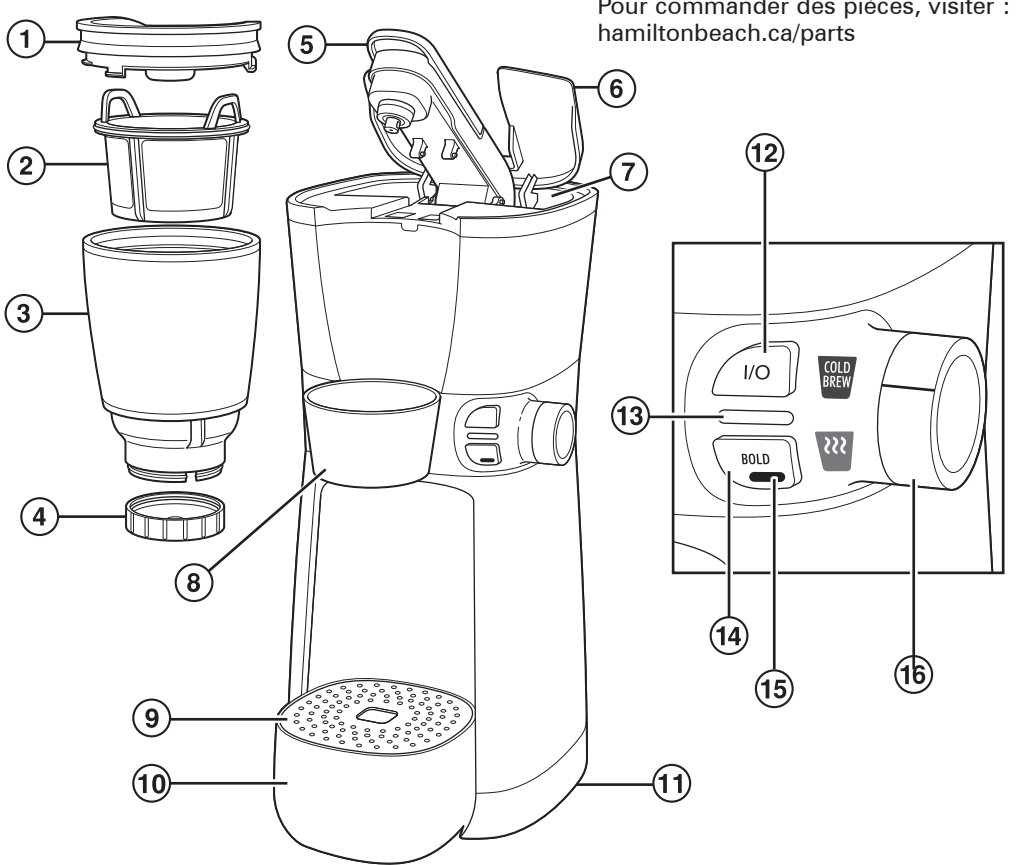

Pour commander des pièces, visiter :
hamiltonbeach.ca/parts

- Couvercle du panier d'infusion à joint transparent
- Filtre amovible à joint gris
- Panier d'infusion
- Entonnoir amovible
- Clapet
- Couvercle de remplissage d'eau
- Réservoir d'eau
- Support de panier d'infusion
- Couvercle du bac ramasse-gouttes
- Ramasse-gouttes
- Base
- Bouton ON/OFF (I/O [marche/arrêt])
- Voyant indicateur d'infusion
- Bouton BOLD (corsé)
- Voyant d'infusion corsée
- Bouton de sélection d'infusion

Comment préparer du café

⚠ AVERTISSEMENT Risque de brûlures. En cas de débordement du panier d'infusion, débrancher la cafetière et laisser le café refroidir dans le panier d'infusion avant de le retirer de son support. Pour éviter que du café chaud ne déborde du panier d'infusion :

- Ne pas ajouter de café au-dessus du bord du filtre amovible, en particulier s'il s'agit de café décaféiné ou de café moulu très fin tel que du café moulu d'expresso.

⚠ AVERTISSEMENT Risque de brûlures. Afin d'éviter de toucher de l'eau chaude :

- Ne pas utiliser plus de 473 mL (16 oz.) d'eau.
- Remplir le réservoir à l'aide d'une tasse dans laquelle le café s'écoulera.
- Placer la tasse sous le support du panier d'infusion.

Avant la première utilisation : Faire une infusion avec de l'eau et jeter l'eau. Laver le couvercle du panier d'infusion, le filtre amovible, le panier d'infusion, l'entonnoir amovible, le couvercle du bac ramasse-gouttes et le bac ramasse-gouttes dans de l'eau chaude savonneuse. Rincer et sécher.

Arrêt automatique : la cafetière s'éteindra automatiquement une fois que le cycle d'infusion est terminé.

- Brancher dans la prise murale.
- Soulever le couvercle de remplissage d'eau. Remplir le réservoir d'eau de la quantité d'eau désirée entre 237 mL (8 oz) minimum et 473 mL (16 oz) maximum. Fermer le couvercle de remplissage d'eau.
- REMARQUE :** Retirer le bac ramasse-gouttes si vous infusez dans une tasse de voyage.
- Soulever le clapet et retirer le panier d'infusion.
- Faire pivoter le couvercle du panier d'infusion pour le retirer, puis retirer le filtre amovible du panier d'infusion.
- Veuillez vous reporter au tableau « Dosage du café » et ajouter du café moulu dans le panier d'infusion. Remettre le filtre en mettant le joint noir dans le panier d'infusion.
- Appuyer sur le bouton « ON » (marche) pour démarrer l'infusion.
- REMARQUE :** En mode COLD BREW (☑/infusion à froid) ou en mode BOLD (corsé), le café commence à s'écouler et s'arrête plusieurs fois pendant l'infusion, et cela dans le but d'améliorer la saveur. Ne pas retirer la tasse avant que le voyant rouge indicateur d'infusion ne soit éteint.
- Une fois l'infusion terminée, le voyant rouge indicateur d'infusion clignotera 3 fois et la cafetière s'éteindra. Retirer la tasse.

