

Hamilton Beach

Alexa Smart Kettle

Bouilloire intelligente Alexa

Hervidor inteligente Alexa

Read before use / Lire avant utilisation / Lea antes de usar.

For recipes, tips,
product information and
registration:
hamiltonbeach.com

Pour des recettes,
des conseils, des
renseignements sur le
produit et l'enregistrement :
hamiltonbeach.ca

Para recetas, consejos,
información del producto
y registro:
hamiltonbeach.com.mx

ENTER TO WIN \$100 TO
SPEND ON WEBSITE
Visit
register.hamiltonbeach.com



Open to US customers only • Ce concours s'adresse aux clients des États-Unis
seulement • Este concurso está disponible sólo a clientes de los Estados Unidos

PARTICIPEZ POUR COURIR
LA CHANCE DE GAGNER
UN MONTANT DE 100 \$
À DÉPENSER SUR NOTRE
SITE WEB
Visitez le
register.hamiltonbeach.com

INGRESE PARA TENER LA
OPORTUNIDAD DE GANAR
\$100 PARA GASTAR EN
NUESTRO SITIO WEB
Visite
register.hamiltonbeach.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces or hot water. Use handles or knobs. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
- Unplug from outlet when kettle is not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Customer Service for information on examination, repair, or adjustment as set forth in the Limited Warranty.
- The use of accessory attachments not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
- Do not place electric kettle on or near a hot gas or electric burner or in a heated oven.
- To disconnect electric kettle, turn any control to OFF (O) and then remove plug from wall outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not use appliance for other than intended use.
- Do not use for other than heating water. Other liquids or food will contaminate the interior and void warranty.
- Do not allow kettle to boil dry.
- To avoid circuit overload, do not operate another high-wattage appliance on the same circuit.
- Heater may remain hot after the kettle is turned off.
- WARNING:** If the kettle is overfilled, boiling water may be ejected.
- WARNING:** Scalding may occur if the lid is opened during the heating cycle.
- Be certain kettle lid is securely in place during operation and when pouring hot water. Do not use force when placing lid on kettle.
- Do not clean glass with cleansers, steel wool pads, or other abrasive material.
- Use only the power base provided.

SAVE THESE INSTRUCTIONS


Other Consumer Safety Information

This appliance is intended for household use only.


⚠ WARNING Electrical Shock Hazard: This appliance is provided with either a polarized (one wide blade) or grounded (3-prong) plug to reduce the risk of electric shock. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If it still does not fit, have an electrician replace the outlet. The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension

cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or table where it can be pulled on by children or accidentally tripped over. To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

Parts and Features

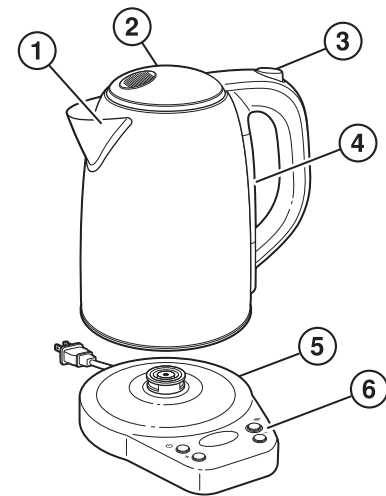

- To order parts, visit:
hamiltonbeach.com/parts
- Removable Anti-Scale Mesh Filter (inside spout)
 - Lid
 - Lid-Opening Button
 - Water Window with MAX and MIN Fill Lines
 - Power Base
 - Control Panel/Display

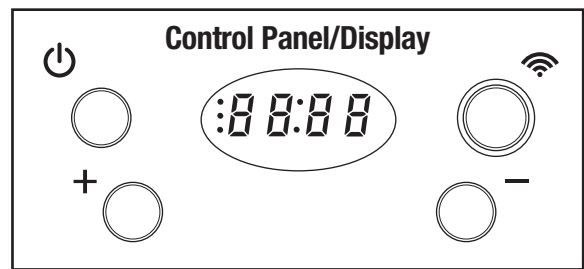

NOTE: Kettle can be used at any time without a WiFi connection.

Control Panel/Display

Display will show current temperature and selected temperature.

⏻ (On/Off) Button – Use to turn on and off.
+ **Button** – Use to increase water temperature.
– **Button** – Use to decrease water temperature.

⬆ Heating Icon – Dots scroll in an upward direction while heating and become solid in Keep Warm cycle.

📶 (WiFi) Button – Use for setup and to enable remote commands.

WiFi LED Light –
Flashing Red: Setup mode.

Change from Fahrenheit to Celsius:

Press and hold **+** and **–** Buttons for 4 seconds to change from °F (Fahrenheit) to °C (Celsius). Default temperature is Fahrenheit.

How to Set up with WiFi

- Download Alexa App from Apple App Store or Google Play Store.
- Plug Kettle into outlet.
- In Alexa App, select “devices” icon in lower right corner. Next, click **+** icon in top right corner. Select “Kettle” from list of devices that appears. Follow screen instructions to connect to WiFi.
- After Kettle is connected, press WiFi Button again to enable voice commands. WiFi LED Light will turn from red to blue when Kettle is ready for voice commands.

voice commands.

NOTES:

- For more Kettle information, visit hamiltonbeach.com/alexa-products.
- To keep Kettle connected, Kettle must remain plugged into an outlet.
- French and Spanish language commands may not be available.

How to Use without WiFi

⚠ WARNING Burn Hazard. Do not overfill Kettle. Boiling water may spit out of the spout.

Before first use: Press Lid Button to raise Lid, and fill Kettle with water to MAX Fill Line on Water Window. Press **⏻ (On/Off)** Button to turn Kettle on. Kettle will bring water to a boil. Press **⏻ (On/Off)** Button to turn Kettle off (O). Discard water and repeat 2–3 times, rinsing out Kettle each time. Kettle is now ready for use.

- Remove Kettle from Power Base before filling.
- Fill Kettle with water. Water level should be above MIN Fill Line and below MAX Fill Line. Place Kettle on Base.
- Kettle Lid must be locked in place and Power Base on a level surface and positioned away from countertop edge.
- Plug into outlet. HELLO scrolls in Display from right to left; then Display goes blank. Select temperature by pressing **+** or **–** Button to increase or decrease in one-degree increments. Temperature can be set from 100°F (38°C) to 212°F (100°C).
- Once desired temperature is set, Display will flash set temperature. Press **⏻ (On/Off)** Button for Kettle to begin heating. Temperature can be adjusted while heating. Kettle will remember last set temperature for next use. If **⏻ (On/Off)** Button isn't pressed, Display will turn blank. **NOTE:** Display will show current water temperature and heating will resume. Kettle will turn off if not returned to Base within 30 seconds. Any time Kettle is removed from Base, Display will show **---** for 30 seconds.
- Display will toggle between actual temperature for 3 seconds and selected temperature for 1 second. Meanwhile, 3 dots on left of Display will scroll in an upwards direction to indicate Kettle is heating.
- When set temperature is reached, 3 dots disappear from Display for 20 seconds while set temperature shows. After 20 seconds, 3 dots return as solid in Display during the : Keep Warm default time of 30 minutes. Keep Warm can be adjusted from 0 minutes to maximum of 60 minutes while using Alexa App.
- When : Keep Warm cycle is complete, 3 dots in Display will disappear and Display will show HOT. Once temperature cools to 158°F (70°C) Display and Kettle turn off.
- Press **⏻ (On/Off)** Button at any time to turn Kettle off. Remember, the surface of Kettle gets hot; take care—only grip Kettle by handle.
- Unplug and empty Kettle if not using WiFi. If using WiFi, plug plugged in and refill Kettle with water.

NOTE: Only use Kettle to heat water. If Kettle is used to heat other liquids, such as coffee or tea, the warranty will be voided.

If Kettle Floor Discolors:

It is normal for Kettle floor to discolor due to heating. This does not affect the performance of the Kettle. Do not use abrasive scouring pads or cleaners since this may damage the stainless steel surface.

Automatic Boil Dry Shutoff

Kettle heating element is protected by two automatic safety devices. If Kettle is empty or it is below MIN water level anytime during the heating cycle, heating cycle will automatically stop and FILL H2O will scroll from right to left in Display. Remove Kettle from Base and fill with water. Return Kettle to Base and press **⏻ (On/Off)** Button to restart. If Kettle isn't filled in 10 minutes, Display will turn off.

Troubleshooting

Make these simple checks before contacting Customer Service:

- Have you pressed the **⏻ (On/Off)** Button?
- If Kettle heats but does not boil, the reached set temperature may need to be adjusted, or Kettle might need descaling. See “Care and Cleaning” section.
- Has Kettle been accidentally turned On (O) without being filled with water or allowed to boil dry? Press **⏻ (On/Off)** Button to turn off and wait 20 minutes. Fill Kettle with water and try again.
- Is cord firmly plugged into outlet and Kettle firmly seated on Power Base?

Kettle will not turn on.

- Make sure Kettle is on Base and plugged into an electrical outlet. Restart heating process.

App or voice commands not working.

- Red WiFi LED Light: press and release WiFi Button to accept voice commands.
- Flashing Red WiFi LED Light: register Kettle to Alexa App.
- Make sure Blue WiFi LED Light is on.

Tea Guide

- Fill Kettle with 6 oz. filtered or preferred water for each cup of tea.
- View chart below to select type of tea and temperature, or say “Alexa set Kettle to <drink type>” then begin brewing by saying “Alexa turn kettle on.”
- If using loose tea instead of tea bags, measure one rounded teaspoon (5 g) of tea per cup into an infuser and place infuser in cup. If no infuser is available, put tea directly into cup.
- Pour heated water directly over tea. For stronger tea, add more leaves rather than infusing longer than is recommended. Tea that is oversteeped will become bitter.

Temperature & Guide

TYPE	TEMPERATURE	STEEPING
Warm	100°F (38°C)	
Yellow Tea	158°F (70°C)	1-2 minutes
Green Tea	175°F (79°C)	1-3 minutes
White Tea	180°F (82°C)	1-3 minutes
Instant Coffee	190°F (88°C)	Stir until dissolved
Hot Chocolate	190°F (88°C)	Stir until well blended
Oolong Tea	190°F (88°C)	2-3 minutes

TYPE	TEMPERATURE	STEEPING
French Press Coffee	200°F (93°C)	2-4 minutes
Mate	205°F (96°C)	Ready immediately
Rooibos Tea	205°F (96°C)	5-6 minutes
Herbal Tea	212°F (100°C)	4-5 minutes
Black Tea	212°F (100°C)	3-5 minutes
Noodles	212°F (100°C)	See package directions
Boil	212°F (100°C)	

NOTES:

- Only heat water in Kettle.
- Temperature settings can vary depending on a number of factors, such as altitude, impurities in the water, and amount of water in Kettle.

Care and Cleaning

⚠ WARNING Electrical Shock Hazard. Do not immerse kettle, power base, or plug in water or any other liquid.

- Unplug. Allow to cool completely.
- Wipe exterior of Kettle with a damp cloth. Do not use abrasive scouring pads or powders since they may scratch Kettle surface.

To remove discoloration or scale/lime deposit from inside Kettle:

- Unplug.
- Pour 1 tablespoon (15 mL) white vinegar and 1/4 cup (59 mL) water into Kettle and let stand 10 minutes.

- Rub Kettle floor with a paper towel. Remove paper towel and vinegar.
- Wash with soap and water, then rinse and dry.

TIP: To avoid scale/lime deposit buildup, empty Kettle after each use.

⚠ WARNING Burn Hazard. Allow kettle to cool before attempting to remove mesh filter.

To Remove Mesh Filter: Make sure water has been removed from Kettle. Mesh Filter is visible through Kettle opening in spout. Press down on tab to remove. Rinse Filter under running water and brush with a small, soft brush. Rinse. To replace, insert bottom tab and then press down on top tab until it snaps into place. Filter will fit only one way.

Solid Red: Registered to customer account but unable to take remote commands.
Solid Blue: Registered to customer account and able to take remote commands.

WiFi Information

How to Erase WiFi Profile:

Press and hold **+** and **–** buttons for 10 seconds; then **📶 (WiFi)** Button will flash red and turn off when WiFi credentials are erased. You may also unregister the Kettle through the app, via the Alexa App settings page. **Supports routers with WEP, WPA, WPA2 802.11 b/g/n 2.4 GHz** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the manufacturer could void your authority to operate the equipment.

Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with our returning a product or component under this warranty to you. If the product or component is unevaluable, we will replace with a similar one of equal or greater value. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to obtain warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the

rating label (e.g., 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make warranty claim, do not return this appliance to the store. Please write Hamilton Beach Brands, Inc., Customer Service Department, 4421 Waterfront Dr., Glen Allen, VA 23060, or visit hamiltonbeach.com/customer-service in the U.S. or hamiltonbeach.com/customer-service in Canada. For faster service, locate the model, type, and series numbers on your appliance.

PRÉCAUTIONS IMPORTANTES

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

- Lire toutes les instructions.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
- Une surveillance étroite est requise pour tout appareil utilisé par ou près des enfants. Surveiller que les enfants ne jouent pas avec l'appareil.
- Ne pas toucher les surfaces chaudes ou l'eau bouillante/chaude. Utiliser les poignées ou les boutons. Prendre toutes les précautions nécessaires pour éviter les brûlures causées par les surfaces chaudes ou les déversements de liquide chaud.
- Pour protéger contre les incendies, les chocs électriques et les blessures corporelles, ne pas immerger le cordon d'alimentation, la fiche, la base d'alimentation ou la bouilloire électrique dans l'eau ou tout autre liquide.
- Débrancher de la prise murale dès la fin de l'utilisation et avant le nettoyage. Laisser refroidir l'appareil avant d'installer ou de retirer des pièces et avant de le nettoyer.
- Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Veuillez communiquer avec le service à la clientèle pour obtenir de l'information concernant l'inspection, la réparation ou le réglage, comme précisé dans la garantie limitée.
- L'utilisation d'accessoires non recommandés ou vendus par le fabricant de l'appareil peut causer des blessures.
- Ne pas utiliser à l'extérieur.
- Ne pas laisser pendre le cordon de la table ou du comptoir et éviter tout contact entre le cordon et les surfaces chaudes incluant la cuisinière.
- Ne pas placer la bouilloire électrique sur ou près d'un brûleur chaud à gaz ou électrique ou dans un four chaud.
- Pour débrancher la bouilloire, tourner toute commande à OFF (O/arrêt), puis déconnecter la fiche de la prise murale. Pour le débrancher, tenir la fiche et la retirer de la prise. Ne jamais tirer sur le cordon.
- N'utiliser cet appareil que pour les fonctions auxquelles il est destiné.
- Cet appareil n'est destiné qu'à faire bouillir l'eau. Bouillir d'autres types de liquide ou d'aliments contaminera l'intérieur de l'appareil et annulera la garantie.
- Ne pas faire fonctionner la bouilloire sans liquide.
- Pour éviter la surchauffe d'un circuit électrique, ne pas brancher d'autre appareil de haute puissance sur le même circuit.
- L'élément chauffant peut rester chaud une fois que la bouilloire est éteinte.
- AVERTISSEMENT :** Si la bouilloire est trop pleine, l'eau bouillante peut éclabousser.
- AVERTISSEMENT :** Il y a un risque de brûlure si le couvercle est ouvert durant le cycle de chauffage.
- S'assurer que le couvercle de la bouilloire est bien fixé pendant l'utilisation et au moment de verser l'eau chaude. Ne pas utiliser la force pour fixer le couvercle de la bouilloire.
- Ne pas nettoyer le verre avec des nettoyeurs, des tampons d'acier ou autres matériaux abrasifs.
- Utiliser seulement la base d'alimentation fournie.

CONSERVER CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur

Cet appareil est destiné à un usage domestique uniquement.


⚠ AVERTISSEMENT Risque de choc électrique : Cet appareil est doté d'une fiche polarisée (lame plus large) ou d'une fiche (3 lames et mise à la terre) pour réduire le risque d'électrocution. Cette fiche s'insère d'une seule manière dans une prise polarisée ou prise avec mise à la terre. Ne pas transformer le dispositif de sécurité de la fiche en modifiant celle-ci de quelque façon ou en utilisant un adaptateur. Si vous ne pouvez pas insérer complètement la fiche dans la prise, inversez la fiche. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien.

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par


un fil trop long. L'utilisation d'une rallonge approuvée est permise, si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Si cet appareil est du type à mise à la terre, la rallonge doit être du type à mise à la terre, à 3 fils. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.

Pour éviter la surcharge du circuit électrique, ne pas utiliser un autre appareil à haute puissance sur le même circuit que cet appareil.

Pièces et caractéristiques

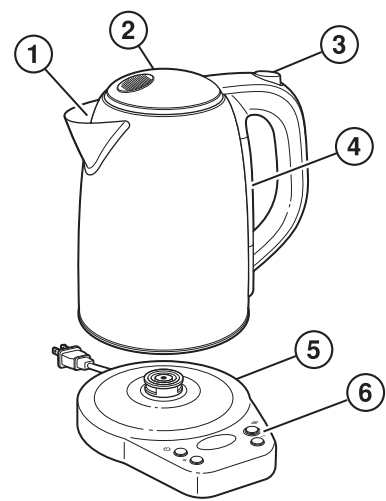

Pour commander des pièces, visiter :
hamiltonbeach.ca/parts

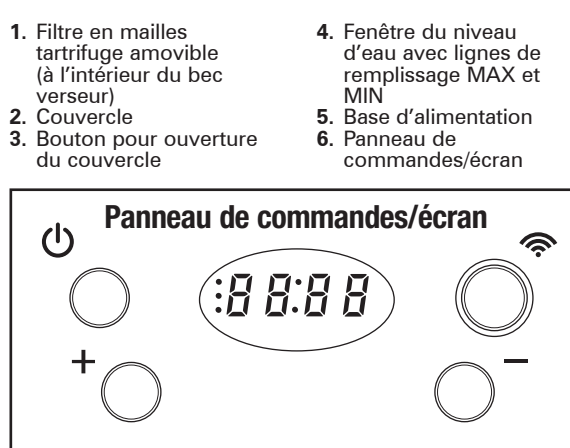

REMARQUE : La bouilloire peut être utilisée en tout temps sans connexion WiFi.

Panneau de commandes/écran

L'écran affichera la température actuelle et la température sélectionnée.
Bouton ⏻ (marche/arrêt) – Pour allumer et éteindre.
Bouton + – Pour augmenter la température de l'eau.
Bouton – – Pour diminuer la température de l'eau.
icône de chauffage : – Les points défilent vers le haut lors du chauffage et arrêtent de défilier lors du cycle Garder chaud.

Bouton 📶 (WiFi) – Pour régler et activer les commandes à distance.
Témoin à DEL du WiFi – Rouge clignotant : Mode de réglage. Rouge constant : Le produit est enregistré au compte du client, mais ne peut accepter les commandes à distance. Bleu constant : Le produit est enregistré au compte du client et il peut accepter les commandes à distance.

Modification des degrés Fahrenheit en Celsius:

Appuyer et maintenir les boutons **+** et **–** enfoncés pendant 4 secondes pour passer du mode °F (Fahrenheit) à °C (Celsius). La température par défaut est en Fahrenheit.

Comment configurer le WiFi

- Télécharger l'application Alexa à partir de l'App Store de Apple ou du Google Play Store.
- Brancher la bouilloire dans la prise.
- Dans l'application Alexa, sélectionner l'icône « devices » (appareils) située dans le coin inférieur droit. Ensuite, cliquer sur l'icône **+** dans le coin supérieur droit. Sélectionner « Kettle » (bouilloire) à partir de la liste d'appareils affichée. Suivre les instructions sur l'écran pour vous connecter au réseau WiFi.
- Une fois que la bouilloire est connectée, appuyer sur le bouton WiFi de nouveau pour activer les commandes vocales. Le témoin à DEL du WiFi s'allumera et passera du rouge au bleu lorsque la bouilloire sera prête à recevoir des commandes vocales.

REMARQUES :

- Pour plus de renseignements sur la bouilloire, consulter le hamiltonbeach.com/alexa-products.
- Pour maintenir la connexion de la bouilloire, celle-ci doit rester branchée dans une prise.
- Il se peut que les commandes en français et en espagnol ne soient pas disponibles.

Comment utiliser sans connexion WiFi

⚠ AVERTISSEMENT Risque de brûlures. Ne pas trop remplir la bouilloire. L'eau brûlante peut jaillir hors du bec.

Avant la première utilisation : Appuyer sur le bouton du couvercle pour soulever le couvercle et remplir la bouilloire avec de l'eau jusqu'à la ligne de remplissage MAX de la fenêtre du niveau d'eau. Appuyer sur le bouton **⏻ (On/Off)** (marche/arrêt) pour allumer la bouilloire. La bouilloire amènera l'eau à ébullition. Appuyer sur le bouton **⏻ (On/Off)** (marche/arrêt) pour éteindre la bouilloire. Jeter l'eau et répéter cette étape 2 à 3 fois en rinçant chaque fois la bouilloire. La bouilloire est maintenant prête à utiliser.

- Retirer la bouilloire de la base d'alimentation avant de la remplir.
- Remplir la bouilloire avec de l'eau. Le niveau d'eau doit être au-dessus de la ligne de remplissage MIN et en dessous de la ligne de remplissage MAX. Mettre la bouilloire sur la base.
- Le couvercle de la bouilloire doit être verrouillé en place et la base d'alimentation doit être sur une surface plane et loin du bord du comptoir.
- Brancher dans la prise. Le mot « HELLO » (bonjour) défile dans l'écran de la droite vers la gauche. Par la suite, l'écran s'éteint. Sélectionner la température en appuyant sur les boutons **+** ou **–** pour augmenter ou diminuer par incréments de un degré. La température peut être réglée de 38 °C (100 °F) à 100 °C (212 °F).
- Une fois que la température souhaitée est réglée, l'écran affichera la température réglée en clignotant. Appuyer sur le bouton **⏻ (marche/arrêt)** pour commencer à chauffer. La température peut être modifiée durant le chauffage. La bouilloire retiendra la dernière température réglée pour la prochaine utilisation. Si le bouton **⏻ (marche/arrêt)** n'est pas appuyé, l'écran s'éteindra.
- REMARQUE :** L'écran affichera la température actuelle de l'eau et le chauffage continuera. La bouilloire s'éteindra si elle n'est pas remplacée sur la base dans les 30 secondes. Chaque fois que la bouilloire est retirée de la base, l'écran affichera **---** pendant 30 secondes.
- L'écran affichera la température actuelle pendant 3 secondes pour passer ensuite à la température sélectionnée pendant 1 seconde. Entretemps, les 3 points à la gauche de l'écran défilent vers le haut pour indiquer que la bouilloire chauffe.
- Lorsque la température réglée est atteinte, les 3 points disparaissent de l'écran pendant 2 secondes pendant que la température réglée est affichée. Après 20 secondes, les trois points arrêtent de clignoter dans l'écran durant le : la durée par défaut du cycle Garder chaud de 30 minutes. Le cycle Garder chaud peut être ajusté de 0 minutes jusqu'à un maximum de 60 minutes en utilisant l'application Alexa.
- Lorsque le cycle Garder chaud : est terminé, les 3 points dans l'écran disparaissent et l'écran affichera le mot HOT (chaud). Une fois que la température refroidit à 70 °C (158 °F), l'écran et la bouilloire s'éteignent.
- Appuyer sur le bouton **⏻ (marche/arrêt)** en tout temps pour éteindre la bouilloire. N'oubliez pas, la surface de la bouilloire devient chaude. Faites attention, ne prenez la bouilloire que par la poignée.
- Débrancher et vider la bouilloire si vous n'utilisez pas WiFi. Si vous utilisez WiFi, veuillez garder la bouilloire branchée et la remplir d'eau.

REMARQUE : Utiliser la bouilloire que pour faire bouillir de l'eau. La garantie est annulée si la bouilloire est utilisée pour faire bouillir d'autres sortes de liquides comme le café ou le thé.

Si le fond de la bouilloire se décolore :

Il est normal que le fond de la bouilloire se décolore en raison du chauffage. Ceci ne nuit pas au fonctionnement de la bouilloire. Ne pas utiliser de tampons à récurer ou nettoyeurs, car ils pourraient endommager la surface en acier inoxydable.

Arrêt automatique pour prévenir l'ébullition à sec

L'élément chauffant de la bouilloire sont protégés par deux dispositifs de sécurité automatiques. Si la bouilloire est vide ou que le niveau d'eau se situe en dessous de la ligne MIN en tout temps durant le cycle de chauffage, le cycle de chauffage s'arrêtera automatiquement et les mots FILL H2O défilent de droite à gauche dans l'écran. Retirer la bouilloire de la base et la remplir d'eau. Remettre la bouilloire sur la base et appuyer sur le bouton **⏻ (marche/arrêt)** pour redémarrer. Si la bouilloire n'est pas remplie dans les 10 minutes, l'écran s'éteindra.

Dépannage

Veuillez effectuer ces simples vérifications avant de communiquer avec le Service à la clientèle :

- Avez-vous appuyé sur le bouton **⏻ (marche/arrêt)** ?
- Si la bouilloire se met à chauffer, mais que l'eau ne bout pas, la température atteinte peut avoir besoin d'être ajustée, ou la bouilloire peut avoir besoin d'un détartrage. Voir le chapitre « Entretien et nettoyage ».
- La bouilloire peut-elle avoir été mise en marche non intentionnellement (O) sans avoir été remplie d'eau ou l'a-t-on laissée bouillir à sec? Appuyer sur le bouton **⏻ (marche/arrêt)** pour éteindre et attendre 20 minutes. Remplir la bouilloire avec de l'eau et essayer de nouveau.
- Le cordon d'alimentation est-il bien branché dans la prise? La bouilloire est-elle bien placée sur la base d'alimentation?

La bouilloire ne se met pas en marche.

Veuillez vous assurer que la bouilloire est sur la base et qu'elle est branchée dans une prise électrique. Recommencer le processus de chauffage.

L'application ou les commandes vocales ne fonctionnent pas.

- Témoin à DEL rouge du WiFi : appuyer et relâcher le bouton WiFi pour accepter les commandes vocales.
- Témoin à DEL rouge du WiFi qui clignote : enregistrer la bouilloire dans l'application Alexa.
- Veuillez vous assurer que le témoin à DEL bleu du WiFi est allumé.

Le témoin

