HOW TO USE

1. Plug cord into 120 volt AC outlet.
2. Raise the piercing lever and place the rim of the can behind the cutting blade.
3. Lower the piercing lever. This starts the cutting action. The lever will remain down until lid is completely cut. Then it will stop automatically.
4. Hold the can then raise lever to release the can.
5. Carefully slide the lid away from the magnet.

CAN OPENING TIPS

This can opener is designed to open cans only when mounted under a cabinet. The motor will operate if the unit is not mounted, but do not attempt to open cans unless properly mounted.

If there is a bump in the rim of the can, open the other end or begin the cutting action just after the bump.

For extremely large or heavy cans, it is recommended that you lightly support the can as it is being opened.

TO OPEN BOTTLES

Insert top of bottle so cap is under the metal hook. Lightly support the back of the can opener and then press the bottle down until cap is removed.


TO OPEN PLASTIC BAGS

Hold the plastic bag along the top right side, in both hands. Insert the upper edge of the bag into the opener and pull from left to right.

CARE AND CLEANING

1. Unplug the unit from the electric outlet.
2. To remove the piercing lever assembly, place thumb under right side of lever and push up. You will feel resistance. Keep pushing up until the assembly releases.
3. Remove and place piercing lever in warm soapy water then rinse and dry.
4. To replace assembly, place knob on back of assembly into large end of keyhole on can opener. Place index fingers on top of both sides of assembly. Firmly press down at a 45 degree angle until assembly pops into place. **See Illustration D.**
5. To clean unit, wipe with a clean, damp cloth. Do not immerse unit in water.

Illustration D.

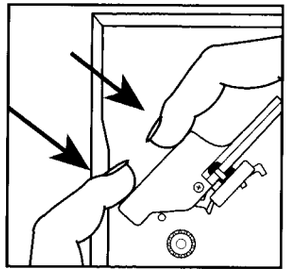

ONE YEAR LIMITED WARRANTY

Hamilton Beach/Proctor-Silex, Inc. warrants this appliance to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. There are no warranties with respect to any glass parts or glass containers which may be supplied with this appliance. This warranty does not cover damage from abuse, neglect, use for commercial purposes, or other use not found in the printed directions. HAMILTON BEACH/PROCTOR-SILEX, INC. DISCLAIMS ALL RESPONSIBILITY FOR CONSEQUENTIAL, INCIDENTAL, OR COMMERCIAL LOSSES CAUSED BY USE OF THIS APPLIANCE. Some states do not allow this exclusion or limitation of incidental or consequen-tial losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER ASSISTANCE HOT LINE in Washington, N.C. between 8:00 a.m.and 6:00 p.m. Eastern Time, Monday through Friday. (For faster service, please have model number ready for operator to assist you.)

1-800-851-8900

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.


HAMILTON BEACH◆PROCTOR-SILEX, INC.

840006500 5/92 Washington, North Carolina 27889

Hamilton Beach®

Use & Care

for Under-the-Cabinet Can Opener

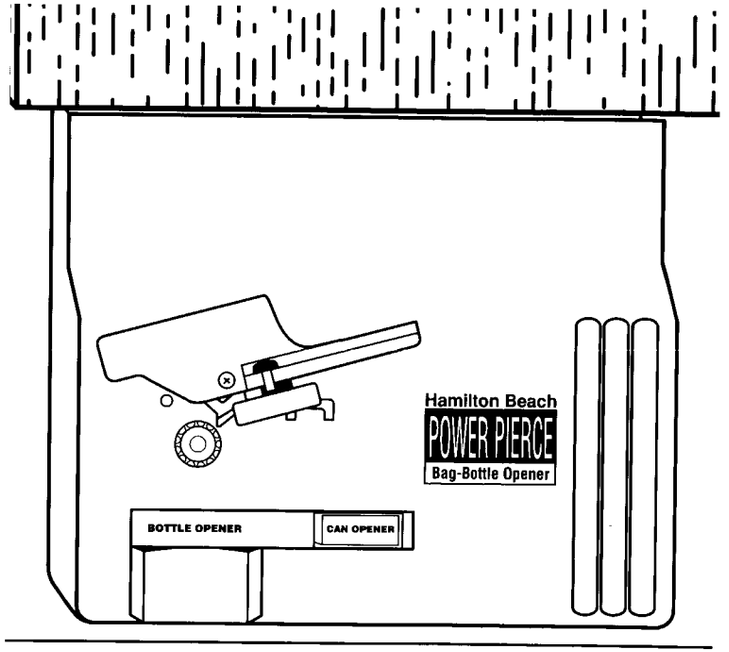

Hamilton Beach Customer Service Number

1-800-851-8900

(8:00 AM - 6:00PM Eastern Time)

Call to find the nearest authorized service center or to order parts and accessories.

KEEP THIS NUMBER FOR FUTURE REFERENCE!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be observed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put can opener in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to Hamilton Beach/Proctor-Silex,Inc. or to authorized service center for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. may cause fire electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
10. Do not open pressurized (aerosol-type) cans.
11. Do not open cans of flammable liquids such as lighter fluids.
12. To reduce the risk of fire or electric shock, do not operate any heating appliance beneath the mounted unit.
13. Do not install the unit over or near any portion of a heating or cooking appliance or a sink or basin.

This appliance is intended for household use only.

SAVE THESE INSTRUCTIONS

HOW TO INSTALL

The following parts are included for installing the can opener:
- 2 brackets to attach to cabinet (2 holes)
- 2 brackets to attach to can opener (4 holes)
- 1 spring clip
- 4 1-1/4-inch long screws to attach cabinet bracket to cabinet
- 5 3/8-inch long screws to attach brackets and spring clip to can opener
- 4 nuts
- 4 washers
- paper template

Tools required for installation:
- Drill and 3/16-inch bit
- Nail to mark drill holes
- Phillips screwdriver
- Pliers or adjustable wrench to hold nuts
- Tape to hold template

1. This can opener is designed to be installed under a cabinet. To select the location for installation please consider the following:
   - **An electrical outlet should be within easy reach of the cord so that the cord does not drape over heating appliances or get in the way of your normal work space.**
   - **Do not install the can opener above a cooking or heating unit, such as a stove.**
2. Once you have selected the location, **empty all contents of the cabinet.** Clean all dirt and grease from the underside of the cabinet. Tape the paper template to the under side of the cabinet. Note the information on the template about cabinet overhang and position the template correctly according to the type of cabinet.
3. Use a nail to mark the screw openings on the underside of the cabinet.
4. Remove template and using drill with 3/16-inch bit drill holes through cabinet. Be sure to hold drill firmly for correct placement of holes.
5. Place a washer over hole on inside of cabinet. Insert screw. Position bracket on underside of cabinet as shown in **Illustration A**. Hold nut with pliers or wrench and fasten screw. Repeat with remaining screws. Leave screws somewhat loose.
6. Attach the brackets with 4 holes to the can opener as shown in **Illustration B**. Using the first two holes will place the can opener almost flush with the edge of the cabinet. The last two holes will place the can opener slightly back from the edge of the cabinet. Use the 3/8-inch screws.
7. Next, attach the spring clip to the back of the can opener as shown in **Illustration C**. The top rounded portion will be pressing against the underside of the cabinet. This clip will provide a small amount of pressure to stabilize the can opener once it is installed.
8. Loop cord out through the cord slot at the back of the can opener. The can opener is now ready to mount.
9. Align brackets and slide can opener brackets into the mounted cabinet brackets until they are evenly lined up. Tighten the screws holding the mounting bracket.
10. Attach piercing lever assembly. Slide small rod on piercing lever assembly into hole on the front of can opener. The can opener is ready to use.

Illustration A.

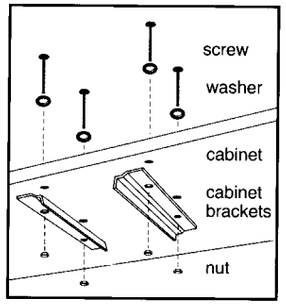


Illustration B


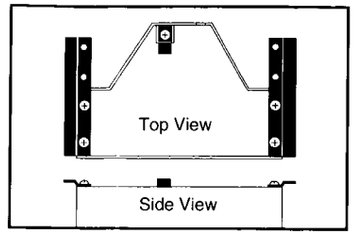


Illustration C



KNOW YOUR CAN OPENER

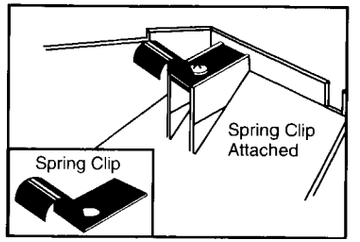